

<b>Last Modified:</b> 4-23-2018	6.8:8.0.48	<b>Doc ID:</b> RM0000026NL01AX
<b>Model Year Start:</b> 2014	<b>Model:</b> ES300H	<b>Prod Date Range:</b> [08/2013 - ]
<b>Title:</b> HYBRID / BATTERY CONTROL: BATTERY BLOWER: REMOVAL; 2014 MY ES300H [08/2013 - ]		

## REMOVAL

### 1. REMOVE LUGGAGE COMPARTMENT FLOOR MAT INFO

### 2. REMOVE LUGGAGE COMPARTMENT FRONT TRIM COVER INFO

### 3. REMOVE REAR SEAT ASSEMBLY

INFO


### 4. REMOVE REAR DOOR SCUFF PLATE LH INFO

### 5. REMOVE REAR SEAT SIDE GARNISH LH INFO

### 6. REMOVE ROOM PARTITION PANEL INSULATOR INFO


### 7. REMOVE NO. 1 HYBRID BATTERY INTAKE DUCT

(a) Remove the 3 clips and No. 1 hybrid battery intake duct.

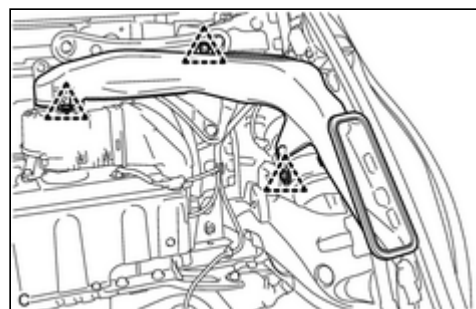


### 8. REMOVE NO. 2 HYBRID VEHICLE BATTERY UPPER COVER BRACKET

(a) Remove the 2 nuts and No. 2 hybrid vehicle battery upper cover bracket.

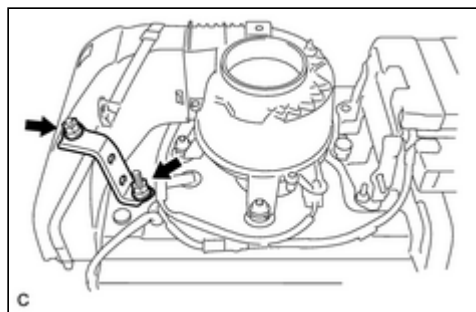

### 9. SEPARATE NO. 2 HYBRID BATTERY INTAKE DUCT

(a) Remove the clip.

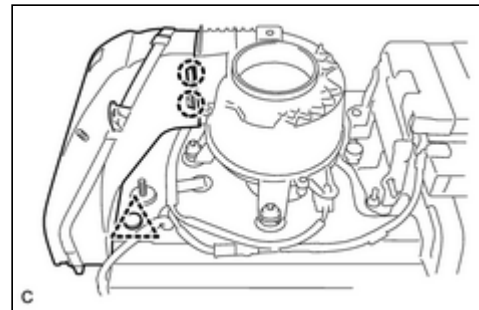


(b) Disengage the 2 claws and separate the No. 2 hybrid battery intake duct from the battery cooling blower assembly.

## 10. REMOVE BATTERY COOLING BLOWER ASSEMBLY

### NOTICE:

- Be sure not to touch the fan part of the battery cooling blower assembly.
- Do not lift the battery cooling blower assembly using the wire harness.

(a) Disconnect the connector from the battery cooling blower assembly.

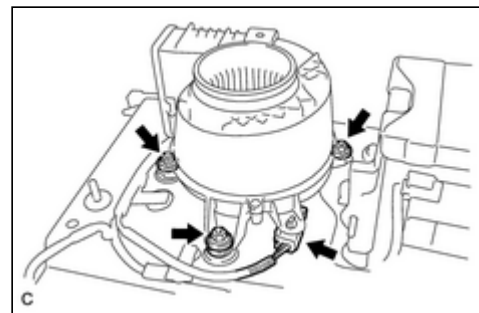

(b) Remove the 3 nuts and battery cooling blower assembly from the HV battery.

