

THE MAIN SPEED POLE FROM THE ENGINE HAS TO BE JUMPED TO THE SPEED WIRE THAT GOES FROM THE MAIN DISPLAY TO THE NAV. THE MAIN SPEED WIRE HAS TO BE SWITCHED TO GIVE YOU "FACTORY" MODE OR "HACKED" MODE.

THIS WILL ALLOW ALL RADIO/MP3/BLUETOOTH/PHONE FUNCTIONS TO WORK WHILE YOU ARE MOVING. IT WILL NOT ALLOW YOU TO OPERATE THE NAV WHILE DRIVING.