

Regular maintenance is essential to obtaining the highest level of performance, safety and reliability from your Lexus. It can also enhance your vehicle's resale value. This section of the *Owner's Manual Supplement* is designed to help you make sure your vehicle receives proper and timely maintenance. It includes factory-recommended maintenance guidelines as well as logs in which to document your vehicle's maintenance history.

In addition to scheduled maintenance, your Lexus requires ongoing general maintenance such as fluid checks and visual inspections. These procedures are listed on page 41 of this booklet and described in detail in the "Maintenance" section of the *Owner's Manual*.

With proper maintenance and care, your vehicle will last longer and deliver more dependable, economical performance. Follow this booklet's recommendations and you'll enjoy maximum reliability and peace of mind from your Lexus for many years to come.



Maintaining your vehicle according to the recommendations in this booklet is required to ensure that your warranty coverage remains intact. You should keep detailed records of vehicle maintenance, including date of service, mileage at time of service and a description of service and/or parts installation performed. The maintenance logs in this booklet are a good place to record this information. If you sell your vehicle, be sure to give your maintenance records to the new owner.

Lexus will not deny a warranty claim solely because you do not have records to show that you maintained your vehicle. However, damage or failures caused by lack of proper maintenance are not covered under warranty.

Maintenance and repair services may be performed by you or by any automotive service provider you choose. Lexus will not deny a warranty claim solely because you used a service provider other than a Lexus dealership for maintenance and repairs. However, damage

or failures caused by improper maintenance or repairs are not covered under warranty.

Your dealer may recommend more frequent maintenance intervals or more maintenance services than those listed in the scheduled maintenance log. These additional services are not required to maintain your warranty coverage. Ask your dealer for an explanation of any recommended maintenance not included in the scheduled maintenance log.

For a complete description of Lexus warranty coverages, see pages 16–33 of this booklet.

## LEXUS DEALERSHIP SERVICE

To ensure that your vehicle receives first-quality service and factory-authorized parts, Lexus recommends having maintenance performed by an authorized Lexus dealership. To locate your nearest authorized Lexus dealership, contact Lexus Customer Satisfaction at (800) 255-3987 or log on to [www.lexus.com](http://www.lexus.com).

Lexus dealership technicians are experts in the maintenance and repair of Lexus vehicles. They stay current on the latest service information through Lexus technical bulletins, service publications and training courses. Many are also certified through the Lexus Commitment to Perfection Certification Program, which requires specialized, state-of-the-art training as well as rigorous exams through both Lexus and the National Institute for Automotive Service Excellence.

Additionally, when you have your vehicle serviced at a Lexus dealership, your service information is recorded in the Lexus National Service History database. This is the first database of its kind in the automotive industry. It can be accessed by any Lexus dealership in

the U.S. — a great convenience if you relocate or need to have your vehicle serviced while traveling.

You can be confident you're getting the best possible service for your vehicle when you take it to a Lexus dealership. Don't trust your investment to anything less than a team of Lexus specialists.

Maintenance and repairs not performed by an authorized Lexus dealership should be performed by a qualified technician following procedures in Lexus service and repair publications.

In addition to scheduled maintenance, your Lexus requires ongoing general maintenance such as fluid checks and visual inspections. The recommended guidelines for inspections are listed below. Please refer to the “Maintenance” section of the *Owner’s Manual* for a detailed description of inspection procedures.

### **When Refueling**

When refueling, perform these inspections:

- Check engine oil level using the dipstick
- Visually check engine coolant level on the see-through reservoir
- Visually check brake fluid level on the see-through reservoir
- Visually check condition of battery
- Check level of windshield washer fluid

### **Every 30 Days**

At least once every 30 days, perform these inspections:

- Check tire pressure
- Check tires for damage and wear

### Determining Your Maintenance Interval: Months vs. Mileage

Lexus recommends obtaining scheduled maintenance for your vehicle every six months or 5,000 miles, whichever occurs first.

For example:

- If at six months you have driven less than 5,000 miles, you should obtain maintenance at **six months**; don't wait until 5,000 miles.
- If you drive 5,000 miles in less than six months, you should obtain maintenance at **5,000 miles**; don't wait until six months.

Be sure to keep an eye on your mileage so that you obtain maintenance when recommended. If you are a low-mileage driver, mark your calendar to remind yourself to obtain maintenance every six months.

### Complimentary First Scheduled Maintenance Service

Lexus provides your first scheduled maintenance service at no charge. The service is performed at six months or 5,000 miles, whichever occurs first, and includes the service items listed on page 44. To obtain this complimentary scheduled maintenance service, contact your Lexus dealership.

### Complimentary Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be personalized to your preferences. For example, doors can be programmed to remain locked when you shift into “Park.” Programming of these preferences is performed once at no charge, provided you obtain the service at the time of delivery or within 12 months of the vehicle’s in-service date. Programming of your Lexus Personalized Settings requires special equipment and may be performed only by an authorized Lexus dealership.

To obtain your Lexus Personalized Settings, please contact your Lexus dealership. The dealership may verify performance of the service in the box on this page.



#### Lexus Personalized Settings\*

Must be obtained within 12 months of vehicle's in-service date.

In-service date: \_\_\_\_\_

Date personalized settings programmed: \_\_\_\_\_

Notes:

\*This service is complimentary when performed by an authorized Lexus dealership.

## SCHEDULED MAINTENANCE LOG

### 6 Months or 5,000 Miles\*

- Replace engine oil and oil filter<sup>1</sup>
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

### 12 Months or 10,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Measure thickness of front brake pads and rotors (GS 430, IS)
- Replace air conditioner filter (GS 300, GS 430, IS 350, LS 430, SC)
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

\*This service is complimentary when performed by an authorized Lexus dealership.

## 18 Months or 15,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Clean air conditioner filter (IS 250)
- Inspect engine air filter<sup>2</sup>
- Inspect nuts and bolts on chassis<sup>2</sup>
- Re-torque axle shaft flange bolts (all models except ES)
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:
 

<input type="checkbox"/> Axle shaft boots	<input type="checkbox"/> Front differential oil (AWD GS 300, AWD IS 250)
<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Body	<input type="checkbox"/> Rear differential oil (IS, GS 300, GS 430, LS 430, SC)
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Engine coolant <sup>3</sup>	
<input type="checkbox"/> Exhaust pipes and mountings	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

- <sup>1</sup> Reset the oil replacement reminder (“MAINT REQD”) light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).



## SCHEDULED MAINTENANCE LOG

### 24 Months or 20,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Measure thickness of front brake pads and rotors (GS 430, IS)
- Replace air conditioner filter (GS 300, GS 430, IS 350, LS 430, SC)
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

### 30 Months or 25,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

## 36 Months or 30,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Inspect nuts and bolts on chassis<sup>2</sup>
- Measure brake pad thickness and rotor runout
- Measure thickness of brake rotors (GS 430, IS)
- Replace air conditioner filter
- Replace brake fluid
- Replace engine air filter
- Re-torque axle shaft flange bolts (all models except ES)
- Rotate tires (all models except IS with different size front and rear tires)
- Road-test vehicle
- Inspect the following:
 

<input type="checkbox"/> Axle shaft boots	<input type="checkbox"/> Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Fuel tank cap gasket
<input type="checkbox"/> Body	<input type="checkbox"/> Manual transmission oil (IS 250)
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Engine coolant <sup>3</sup>	<input type="checkbox"/> Rear differential oil (IS, GS, LS, SC)
<input type="checkbox"/> Exhaust pipes and mountings	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Front differential oil (AWD GS 300, AWD IS 250)	<input type="checkbox"/> Transmission fluid (ES 330, SC)

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

- <sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).

## SCHEDULED MAINTENANCE LOG

### 42 Months or 35,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

### 48 Months or 40,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Measure thickness of front brake pads and rotors (GS 430, IS)
- Replace air conditioner filter (GS 300, GS 430, IS 350, LS 430, SC)
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

## 54 Months or 45,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Clean air conditioner filter (IS 250)
- Inspect engine air filter<sup>2</sup>
- Inspect nuts and bolts on chassis<sup>2</sup>
- Re-torque axle shaft flange bolts (all models except ES)
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:
 

___ Axle shaft boots	___ Front differential oil (AWD GS 300, AWD IS 250)
___ Ball joints and dust covers	___ Rack and pinion assembly
___ Body	___ Rear differential oil (IS, GS 300, GS 430, LS 430, SC)
___ Brake lines and hoses	___ Steering linkage and boots
___ Engine coolant <sup>3</sup>	
___ Exhaust pipes and mountings	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

- <sup>1</sup> Reset the oil replacement reminder (“MAINT REQD”) light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).

## SCHEDULED MAINTENANCE LOG

### 60 Months or 50,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Measure thickness of front brake pads and rotors (GS 430, IS)
- Replace air conditioner filter (GS 300, GS 430, IS 350, LS 430, SC)
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

### 66 Months or 55,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

## 72 Months or 60,000 Miles

- |   |   |   |   |
|---|---|---|---|
| <ul style="list-style-type: none"> <li><input type="checkbox"/> Replace engine oil and oil filter<sup>1</sup></li> <li><input type="checkbox"/> Measure brake pad thickness and rotor runout</li> <li><input type="checkbox"/> Measure thickness of brake rotors (GS 430, IS)</li> <li><input type="checkbox"/> Replace brake fluid</li> <li><input type="checkbox"/> Replace engine air filter</li> <li><input type="checkbox"/> Replace spark plugs (GS 300, IS)<sup>5</sup></li> <li><input type="checkbox"/> Replace transmission fluid (ES 330, LS 430)<sup>3</sup></li> <li><input type="checkbox"/> Re-torque axle shaft flange bolts (all models except ES)</li> <li><input type="checkbox"/> Rotate tires (all models except IS with different size front and rear tires)</li> <li><input type="checkbox"/> Road-test vehicle</li> <li><input type="checkbox"/> Inspect the following:             <table border="0" style="width: 100%; margin-top: 5px;"> <tr> <td style="width: 50%; vertical-align: top;"> <ul style="list-style-type: none"> <li>___ Axle shaft boots</li> <li>___ Ball joints and dust covers</li> <li>___ Body</li> <li>___ Brake lines and hoses</li> <li>___ Drive belts</li> <li>___ Engine coolant<sup>6</sup></li> <li>___ Engine valve clearance (ES, GS 430, LS, SC)</li> <li>___ Exhaust pipes and mountings</li> <li>___ Front differential oil (AWD GS 300, AWD IS 250)</li> </ul> </td> <td style="width: 50%; vertical-align: top;"> <ul style="list-style-type: none"> <li>___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> <li>___ Fuel tank cap gasket</li> <li>___ Manual transmission oil (IS 250)</li> <li>___ Rack and pinion assembly</li> <li>___ Rear differential oil (IS, GS, LS, SC)</li> <li>___ Steering linkage and boots</li> <li>___ Transmission fluid (ES 330, SC)</li> </ul> </td> </tr> </table> </li> </ul> | <ul style="list-style-type: none"> <li>___ Axle shaft boots</li> <li>___ Ball joints and dust covers</li> <li>___ Body</li> <li>___ Brake lines and hoses</li> <li>___ Drive belts</li> <li>___ Engine coolant<sup>6</sup></li> <li>___ Engine valve clearance (ES, GS 430, LS, SC)</li> <li>___ Exhaust pipes and mountings</li> <li>___ Front differential oil (AWD GS 300, AWD IS 250)</li> </ul>  | <ul style="list-style-type: none"> <li>___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> <li>___ Fuel tank cap gasket</li> <li>___ Manual transmission oil (IS 250)</li> <li>___ Rack and pinion assembly</li> <li>___ Rear differential oil (IS, GS, LS, SC)</li> <li>___ Steering linkage and boots</li> <li>___ Transmission fluid (ES 330, SC)</li> </ul> | <ul style="list-style-type: none"> <li><input type="checkbox"/> Inspect nuts and bolts on chassis<sup>2</sup></li> <li><input type="checkbox"/> Replace air conditioner filter</li> <li><input type="checkbox"/> Replace differential oil (ES 330<sup>3</sup>, IS<sup>4</sup>)</li> </ul> |
| <ul style="list-style-type: none"> <li>___ Axle shaft boots</li> <li>___ Ball joints and dust covers</li> <li>___ Body</li> <li>___ Brake lines and hoses</li> <li>___ Drive belts</li> <li>___ Engine coolant<sup>6</sup></li> <li>___ Engine valve clearance (ES, GS 430, LS, SC)</li> <li>___ Exhaust pipes and mountings</li> <li>___ Front differential oil (AWD GS 300, AWD IS 250)</li> </ul>  | <ul style="list-style-type: none"> <li>___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> <li>___ Fuel tank cap gasket</li> <li>___ Manual transmission oil (IS 250)</li> <li>___ Rack and pinion assembly</li> <li>___ Rear differential oil (IS, GS, LS, SC)</li> <li>___ Steering linkage and boots</li> <li>___ Transmission fluid (ES 330, SC)</li> </ul> |   |   |

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

- 1 Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2 Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- 3 Required only if vehicle is operated primarily while towing.
- 4 If equipped with limited-slip differential.
- 5 Required under the terms of the Emission Control Warranty.
- 6 Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).

## SCHEDULED MAINTENANCE LOG

### 78 Months or 65,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

### 84 Months or 70,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Measure thickness of front brake pads and rotors (GS 430, IS)
- Replace air conditioner filter (GS 300, GS 430, IS 350, LS 430, SC)
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

## 90 Months or 75,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Clean air conditioner filter (IS 250)
- Inspect engine air filter<sup>2</sup>
- Inspect nuts and bolts on chassis<sup>2</sup>
- Re-torque axle shaft flange bolts (all models except ES)
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:
 

<input type="checkbox"/> Axle shaft boots	<input type="checkbox"/> Front differential oil (AWD GS 300, AWD IS 250)
<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Body	<input type="checkbox"/> Rear differential oil (IS, GS 300, GS 430, LS 430, SC)
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Drive belts	
<input type="checkbox"/> Engine coolant <sup>3</sup>	
<input type="checkbox"/> Exhaust pipes and mountings	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

- <sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).



## SCHEDULED MAINTENANCE LOG

### 96 Months or 80,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Measure thickness of front brake pads and rotors (GS 430, IS)
- Replace air conditioner filter (GS 300, GS 430, IS 350, LS 430, SC)
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

### 102 Months or 85,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

## 108 Months or 90,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Inspect nuts and bolts on chassis<sup>2</sup>
- Measure brake pad thickness and rotor runout
- Measure thickness of brake rotors (GS 430, IS)
- Replace air conditioner filter
- Replace brake fluid
- Replace engine air filter
- Replace timing belt (ES, GS 430, LS, SC)
- Re-torque axle shaft flange bolts (all models except ES)
- Rotate tires (all models except IS with different size front and rear tires)
- Road-test vehicle
- Inspect the following:
 

<input type="checkbox"/> Axle shaft boots	<input type="checkbox"/> Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Fuel tank cap gasket
<input type="checkbox"/> Body	<input type="checkbox"/> Manual transmission oil (IS 250)
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Engine coolant <sup>3</sup>	<input type="checkbox"/> Rear differential oil (IS, GS, LS, SC)
<input type="checkbox"/> Exhaust pipes and mountings	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Front differential oil (AWD GS 300, AWD IS 250)	<input type="checkbox"/> Transmission fluid (ES 330, SC)

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

- <sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).

## SCHEDULED MAINTENANCE LOG

### 114 Months or 95,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

### 120 Months or 100,000 Miles

- Replace engine oil and oil filter<sup>1</sup>       Replace engine coolant<sup>3</sup>
- Measure thickness of front brake pads and rotors (GS 430, IS)
- Replace air conditioner filter (GS 300, GS 430, IS 350, LS 430, SC)
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

## 126 Months or 105,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Clean air conditioner filter (IS 250)
- Inspect engine air filter<sup>2</sup>
- Inspect nuts and bolts on chassis<sup>2</sup>
- Re-torque axle shaft flange bolts (all models except ES)
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:
 

<input type="checkbox"/> Axle shaft boots	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Rear differential oil (IS, GS 300, GS 430, LS 430, SC)
<input type="checkbox"/> Body	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Brake lines and hoses	
<input type="checkbox"/> Exhaust pipes and mountings	
<input type="checkbox"/> Front differential oil (AWD GS 300, AWD IS 250)	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

- <sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).

## SCHEDULED MAINTENANCE LOG

### 132 Months or 110,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Measure thickness of front brake pads and rotors (GS 430, IS)
- Replace air conditioner filter (GS 300, GS 430, IS 350, LS 430, SC)
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

### 138 Months or 115,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Inspect engine coolant<sup>3</sup>
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

## 144 Months or 120,000 Miles

- |  |   |   |   |
|--|---|---|---|
| <ul style="list-style-type: none"> <li><input type="checkbox"/> Replace engine oil and oil filter<sup>1</sup></li> <li><input type="checkbox"/> Measure brake pad thickness and rotor runout</li> <li><input type="checkbox"/> Measure thickness of brake rotors (GS 430, IS)</li> <li><input type="checkbox"/> Replace brake fluid</li> <li><input type="checkbox"/> Replace engine air filter</li> <li><input type="checkbox"/> Replace spark plugs<sup>6</sup></li> <li><input type="checkbox"/> Replace transmission fluid (ES 330, LS 430)<sup>4</sup></li> <li><input type="checkbox"/> Re-torque axle shaft flange bolts (all models except ES)</li> <li><input type="checkbox"/> Rotate tires (all models except IS with different size front and rear tires)</li> <li><input type="checkbox"/> Road-test vehicle</li> <li><input type="checkbox"/> Inspect the following:             <table border="0" style="width: 100%; margin-left: 20px;"> <tr> <td style="width: 50%; vertical-align: top;"> <ul style="list-style-type: none"> <li>___ Axle shaft boots</li> <li>___ Ball joints and dust covers</li> <li>___ Body</li> <li>___ Brake lines and hoses</li> <li>___ Drive belts</li> <li>___ Engine valve clearance (ES, GS 430, LS, SC)</li> <li>___ Exhaust pipes and mountings</li> <li>___ Front differential oil (AWD GS 300, AWD IS 250)</li> </ul> </td> <td style="width: 50%; vertical-align: top;"> <ul style="list-style-type: none"> <li>___ Inspect nuts and bolts on chassis<sup>2</sup></li> <li>___ Replace air conditioner filter</li> <li>___ Replace differential oil (ES 330<sup>4</sup>, IS<sup>5</sup>)</li> <li>___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> <li>___ Fuel tank cap gasket</li> <li>___ Manual transmission oil (IS 250)</li> <li>___ Rack and pinion assembly</li> <li>___ Rear differential oil (IS, GS, LS, SC)</li> <li>___ Steering linkage and boots</li> <li>___ Transmission fluid (ES 330, SC)</li> </ul> </td> </tr> </table> </li> </ul> | <ul style="list-style-type: none"> <li>___ Axle shaft boots</li> <li>___ Ball joints and dust covers</li> <li>___ Body</li> <li>___ Brake lines and hoses</li> <li>___ Drive belts</li> <li>___ Engine valve clearance (ES, GS 430, LS, SC)</li> <li>___ Exhaust pipes and mountings</li> <li>___ Front differential oil (AWD GS 300, AWD IS 250)</li> </ul>  | <ul style="list-style-type: none"> <li>___ Inspect nuts and bolts on chassis<sup>2</sup></li> <li>___ Replace air conditioner filter</li> <li>___ Replace differential oil (ES 330<sup>4</sup>, IS<sup>5</sup>)</li> <li>___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> <li>___ Fuel tank cap gasket</li> <li>___ Manual transmission oil (IS 250)</li> <li>___ Rack and pinion assembly</li> <li>___ Rear differential oil (IS, GS, LS, SC)</li> <li>___ Steering linkage and boots</li> <li>___ Transmission fluid (ES 330, SC)</li> </ul> | <ul style="list-style-type: none"> <li><input type="checkbox"/> Inspect nuts and bolts on chassis<sup>2</sup></li> <li><input type="checkbox"/> Replace air conditioner filter</li> <li><input type="checkbox"/> Replace differential oil (ES 330<sup>4</sup>, IS<sup>5</sup>)</li> </ul> |
| <ul style="list-style-type: none"> <li>___ Axle shaft boots</li> <li>___ Ball joints and dust covers</li> <li>___ Body</li> <li>___ Brake lines and hoses</li> <li>___ Drive belts</li> <li>___ Engine valve clearance (ES, GS 430, LS, SC)</li> <li>___ Exhaust pipes and mountings</li> <li>___ Front differential oil (AWD GS 300, AWD IS 250)</li> </ul>   | <ul style="list-style-type: none"> <li>___ Inspect nuts and bolts on chassis<sup>2</sup></li> <li>___ Replace air conditioner filter</li> <li>___ Replace differential oil (ES 330<sup>4</sup>, IS<sup>5</sup>)</li> <li>___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> <li>___ Fuel tank cap gasket</li> <li>___ Manual transmission oil (IS 250)</li> <li>___ Rack and pinion assembly</li> <li>___ Rear differential oil (IS, GS, LS, SC)</li> <li>___ Steering linkage and boots</li> <li>___ Transmission fluid (ES 330, SC)</li> </ul> |   |   |

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

- <sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).
- <sup>4</sup> Required only if vehicle is operated primarily while towing.
- <sup>5</sup> If equipped with limited-slip differential.
- <sup>6</sup> Required under the terms of the Emission Control Warranty.

## SCHEDULED MAINTENANCE LOG

### 150 Months or 125,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

### 156 Months or 130,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Inspect engine coolant<sup>3</sup>
- Measure thickness of front brake pads and rotors (GS 430, IS)
- Replace air conditioner filter (GS 300, GS 430, IS 350, LS 430, SC)
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

## 162 Months or 135,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Clean air conditioner filter (IS 250)
- Inspect engine air filter<sup>2</sup>
- Inspect nuts and bolts on chassis<sup>2</sup>
- Re-torque axle shaft flange bolts (all models except ES)
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:
 

<input type="checkbox"/> Axle shaft boots	<input type="checkbox"/> Front differential oil (AWD GS 300, AWD IS 250)
<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Body	<input type="checkbox"/> Rear differential oil (IS, GS 300, GS 430, LS 430, SC)
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Drive belts	
<input type="checkbox"/> Exhaust pipes and mountings	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

- <sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).



## SCHEDULED MAINTENANCE LOG

### 168 Months or 140,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Measure thickness of front brake pads and rotors (GS 430, IS)
- Replace air conditioner filter (GS 300, GS 430, IS 350, LS 430, SC)
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

### 174 Months or 145,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Inspect engine coolant<sup>3</sup>
- Re-torque axle shaft flange bolts (all models except ES)<sup>2</sup>
- Rotate tires (all models except IS with different size front and rear tires)
- Visually inspect brake pads and rotors
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Axle shaft boots	___Nuts and bolts on chassis
___Ball joints and dust covers	___Steering linkage and boots
___Engine air filter	

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

## 180 Months or 150,000 Miles

- Replace engine oil and oil filter<sup>1</sup>
- Inspect nuts and bolts on chassis<sup>2</sup>
- Measure brake pad thickness and rotor runout
- Measure thickness of brake rotors (GS, 430, IS)
- Replace air conditioner filter
- Replace brake fluid
- Replace engine air filter
- Replace engine coolant<sup>3</sup>
- Re-torque axle shaft flange bolts (all models except ES)
- Rotate tires (all models except IS with different size front and rear tires)
- Road-test vehicle
- Inspect the following:
 

<ul style="list-style-type: none"> <li><input type="checkbox"/> Axle shaft boots</li> <li><input type="checkbox"/> Ball joints and dust covers</li> <li><input type="checkbox"/> Body</li> <li><input type="checkbox"/> Brake lines and hoses</li> <li><input type="checkbox"/> Drive belts</li> <li><input type="checkbox"/> Exhaust pipes and mountings</li> <li><input type="checkbox"/> Front differential oil (AWD GS 300, AWD IS 250)</li> </ul>	<ul style="list-style-type: none"> <li><input type="checkbox"/> Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> <li><input type="checkbox"/> Fuel tank cap gasket</li> <li><input type="checkbox"/> Manual transmission oil (IS 250)</li> <li><input type="checkbox"/> Rack and pinion assembly</li> <li><input type="checkbox"/> Rear differential oil (IS, GS, LS, SC)</li> <li><input type="checkbox"/> Steering linkage and boots</li> <li><input type="checkbox"/> Transmission fluid (ES 330, SC)</li> </ul>
--	--

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

Notes:

- <sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).

## EXPLANATION OF MAINTENANCE ITEMS

The following descriptions are provided to give you a better understanding of the maintenance services that should be performed on your vehicle. The scheduled maintenance log indicates at which time/mileage intervals each service should be performed. Please note that many maintenance services should be performed only by a qualified technician.

For further information on maintenance services that you can perform yourself, see the “Service Procedures and Specifications” section of your *Owner’s Manual*.

**Air Conditioner Filter**

Refer to your *Owner’s Manual* for service details.

**Axle Shaft Boots**

At driven wheels, check the axle shaft boots and clamps for cracks, deterioration and damage. Replace any damaged parts and, if necessary, repack the grease. Re-torque the axle shaft flange bolts at the indicated intervals. A qualified technician should perform these operations.

**Ball Joints and Dust Covers**

Check the suspension and steering linkage ball joints for looseness and damage. Check all dust covers for deterioration and damage. A qualified technician should perform these inspections.

**Body Inspection**

Visually check for corrosion, scratches and other damage. Check outer body panels, inner panels of the hood and doors, and underneath the vehicle. Apply touch-up paint to any chips and scratches or have them repaired by a qualified technician.

**Brake Fluid**

Replace using fluid type specified in your *Owner's Manual*. A qualified technician should perform this operation.

**Brake Lines and Hoses**

Visually inspect for proper installation. Check for chafing, cracks, deterioration and signs of leakage. Replace any deteriorated or damaged parts. A qualified technician should perform these operations.

**Brake Linings/Drums and Brake Pads/Rotors**

Check the parking brake linings (shoes) and drums for scoring, burning, fluid leakage, broken parts and excessive wear. Check brake pads and rotors for excessive wear; check brake rotors for runout. Check brake calipers for fluid leakage. A qualified technician should perform these inspections.

**Charcoal Canister**

Check for internal damage and clogging. If necessary, clean with compressed air or replace. A qualified technician should perform these operations.

**Differential Oil**

Check for correct oil level and inspect each differential component for signs of leakage. If you discover any leakage, have it repaired by a qualified technician immediately. Refer to your *Owner's Manual* for fluid specifications.

**Drive Belts**

Inspect for cracks, excessive wear and oiliness. Check the belt tension and adjust if necessary. Replace the belts if they are damaged.

**Engine Air Filter**

Check for damage, excessive wear and oiliness. Replace if necessary.

**Engine Coolant**

Drain and flush the cooling system and refill with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates

and organic acids). A qualified technician should perform this operation.

**Note:** Initial replacement is at 120 months/100,000 miles. Replace every 60 months/50,000 miles thereafter.

#### **Engine Oil and Oil Filter**

Replace the oil filter and drain and refill the engine oil at specified intervals. For recommended oil grade and viscosity, refer to your *Owner's Manual*. Some models are equipped with a replaceable oil filter element and oil filter cap O-ring; replace both at each oil change. Refer to your *Owner's Manual*.

#### **Engine Valve Clearance (except GS 300 and IS)**

Inspect for excessive lifter noise and engine vibration and adjust if necessary. A qualified technician should perform this operation. (The GS 300 and IS are equipped with hydraulic valve lash adjusters, which require no periodic clearance inspection or adjustment.)

#### **Exhaust Pipes and Mountings**

Visually inspect the exhaust pipes, muffler and hangers for cracks, deterioration and damage. Start the engine and listen carefully for any exhaust gas leakage. Tighten connections or replace parts as necessary.

#### **Fuel Lines and Connections, Fuel Tank Band and Fuel Tank Vapor Vent System Hoses**

Visually inspect for corrosion, damage, cracks and loose or leaking connections. Tighten connections or replace parts as necessary.

#### **Fuel Tank Cap Gasket**

Visually inspect for cracks, deterioration and damage and replace if necessary.

#### **Nuts and Bolts on Chassis**

Re-tighten the seat mounting bolts and front/rear suspension member retaining bolts to specified torque.

### Rack and Pinion Assembly

Inspect the rack and pinion assembly for signs of leakage, damage and loose electrical connections. Tighten connections and if you discover any leakage or damage, have it repaired immediately by a qualified technician.

### Road Test

While driving the vehicle, check for proper operation of engine, transmission, brakes and steering. Also check for abnormal noise or vibration from any part of the vehicle.

### Spark Plugs

Install new plugs of the same type as originally equipped. Refer to your *Owner's Manual*. A qualified technician should perform this operation.

### Steering Linkage and Boots

With the vehicle stopped, check for excessive freeplay in the steering wheel. Inspect the linkage for bending and damage and the dust boots for deterioration,

cracks and damage. Replace any damaged parts. A qualified technician should perform these operations.

### Timing Belt (except GS 300 and IS)

Replace every 90,000 miles or 108 months. A qualified technician should perform this operation. (The GS 300 and IS are equipped with a timing chain, which requires no periodic inspection.)

### Tire Rotation

Tires should be rotated according to the instructions in your *Owner's Manual*. When rotating tires, check pressure and check for damage and uneven wear. If the spare is not rotated, check the condition and pressure of the spare.

### Transfer Case Fluid (GS 300 All-Wheel Drive, IS 250 All-Wheel Drive)

Periodic fluid checks and replacement of the transfer case fluid are not required. Any repairs that require adding or replacing fluid should be performed by a qualified technician following procedures in Lexus service and repair publications.

**Transmission Fluid**

Check for correct fluid level and inspect each transmission component for signs of leakage. If you discover any leakage, have it repaired by a qualified technician immediately.

**Note:** On the LS 430, GS and IS, the transmission and transmission fluid are a completely sealed unit. Therefore, periodic checks and replacement of the transmission fluid are not required, and there is no dipstick on the transmission on these vehicles. Any repairs that require adding or replacing fluid should be performed by a qualified technician following procedures in Lexus service and repair publications.

**Variable Gear Ratio Steering Assembly (GS 430)**

Inspect the variable gear ratio steering assembly for damage and loose electrical connections. Tighten connections and if you discover any damage, have it repaired immediately by a qualified technician.

## VEHICLE IDENTIFICATION

Model \_\_\_\_\_

Body style \_\_\_\_\_

In-service date \_\_\_\_\_

Mileage at delivery \_\_\_\_\_

Selling dealership \_\_\_\_\_

Selling dealership phone number \_\_\_\_\_

Key number \_\_\_\_\_

Vehicle Identification Number \_\_\_\_\_



NOTES




NOTES

A large rectangular area for notes, divided into two columns by a vertical line. The area is filled with horizontal lines for writing.