


Position of Parts in Engine Compartment <4GR-FSE>

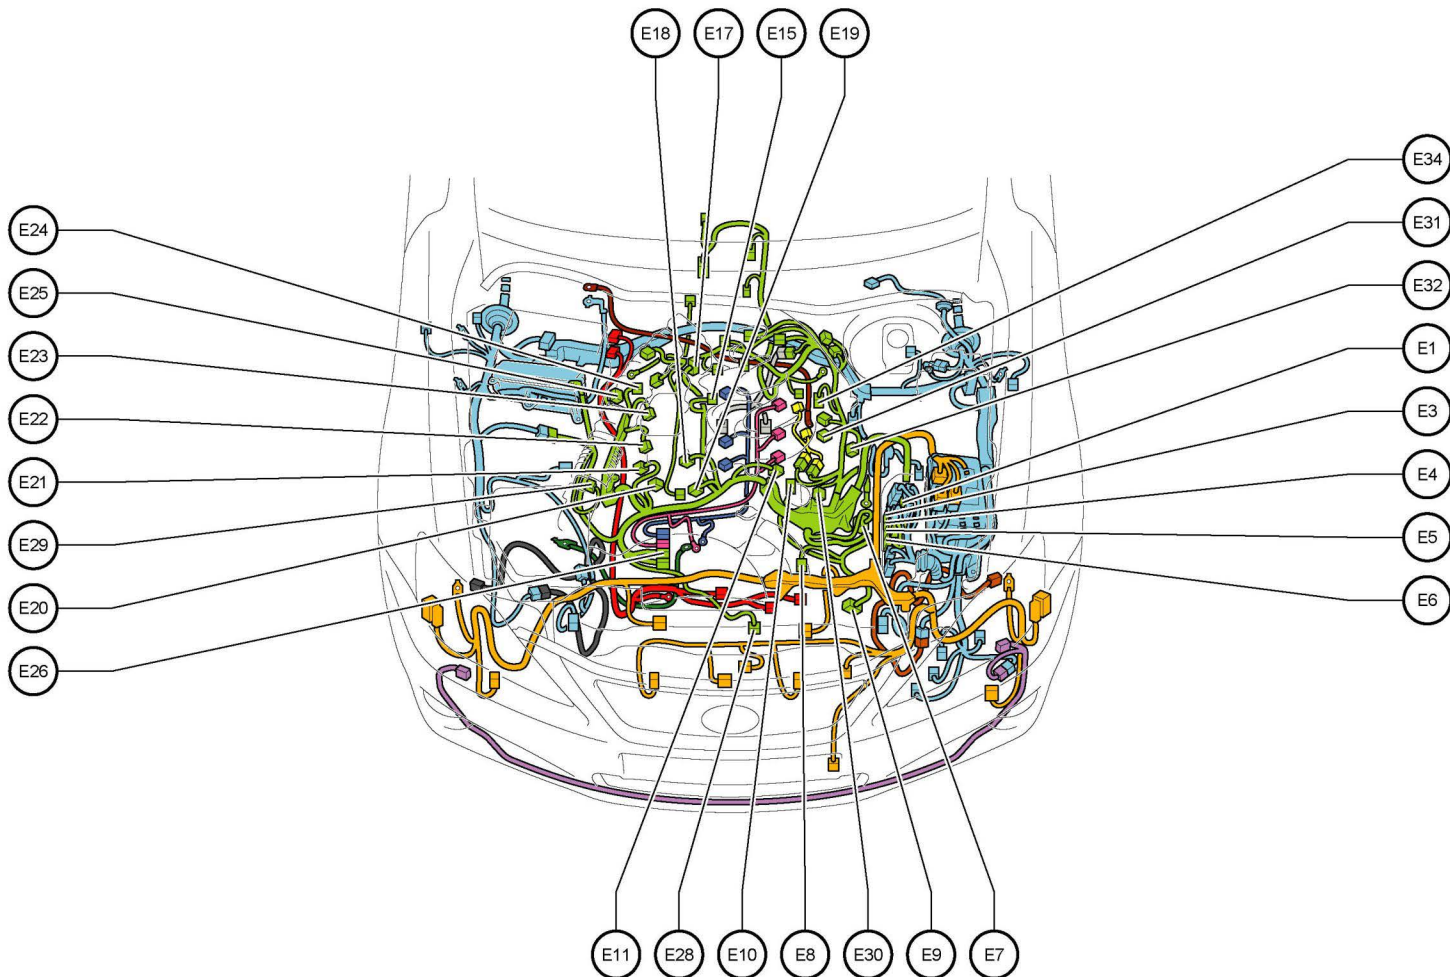


## Position of Parts in Engine Compartment <4GR-FSE>

---

- E 1 Junction Connector
- E 3 ECM
- E 4 ECM
- E 5 ECM
- E 6 ECM
- E 7 Generator Assembly
- E 8 With Magnet Clutch Compressor Assembly
- E 9 Crank Position Sensor
- E 10 Starter Assembly
- E 11 Cam Timing Oil Control Valve Assembly (Bank 2 Intake Side)
- E 15 Purge VSV
- E 17 Throttle with Motor Body Assembly
- E 18 Cam Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- E 19 VVT Sensor (Bank 1 Intake Side)
- E 20 Noise Filter (Ignition No. 1)
- E 21 Cam Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
- E 22 Ignition Coil Assembly No. 1
- E 23 Ignition Coil Assembly No. 3
- E 24 Ignition Coil Assembly No. 5
- E 25 VVT Sensor (Bank 1 Exhaust Side)
- E 26 Injector Driver
- E 28 Engine Oil Pressure Switch Assembly
- E 29 Intake Mass Air Flow Meter Sub-Assembly
- E 30 VVT Sensor (Bank 2 Intake Side)
- E 31 Cam Timing Oil Control Valve Assembly (Bank 2 Exhaust Side)
- E 32 Ignition Coil Assembly No. 2
- E 34 VVT Sensor (Bank 2 Exhaust Side)

Position of Parts in Engine Compartment <4GR-FSE>

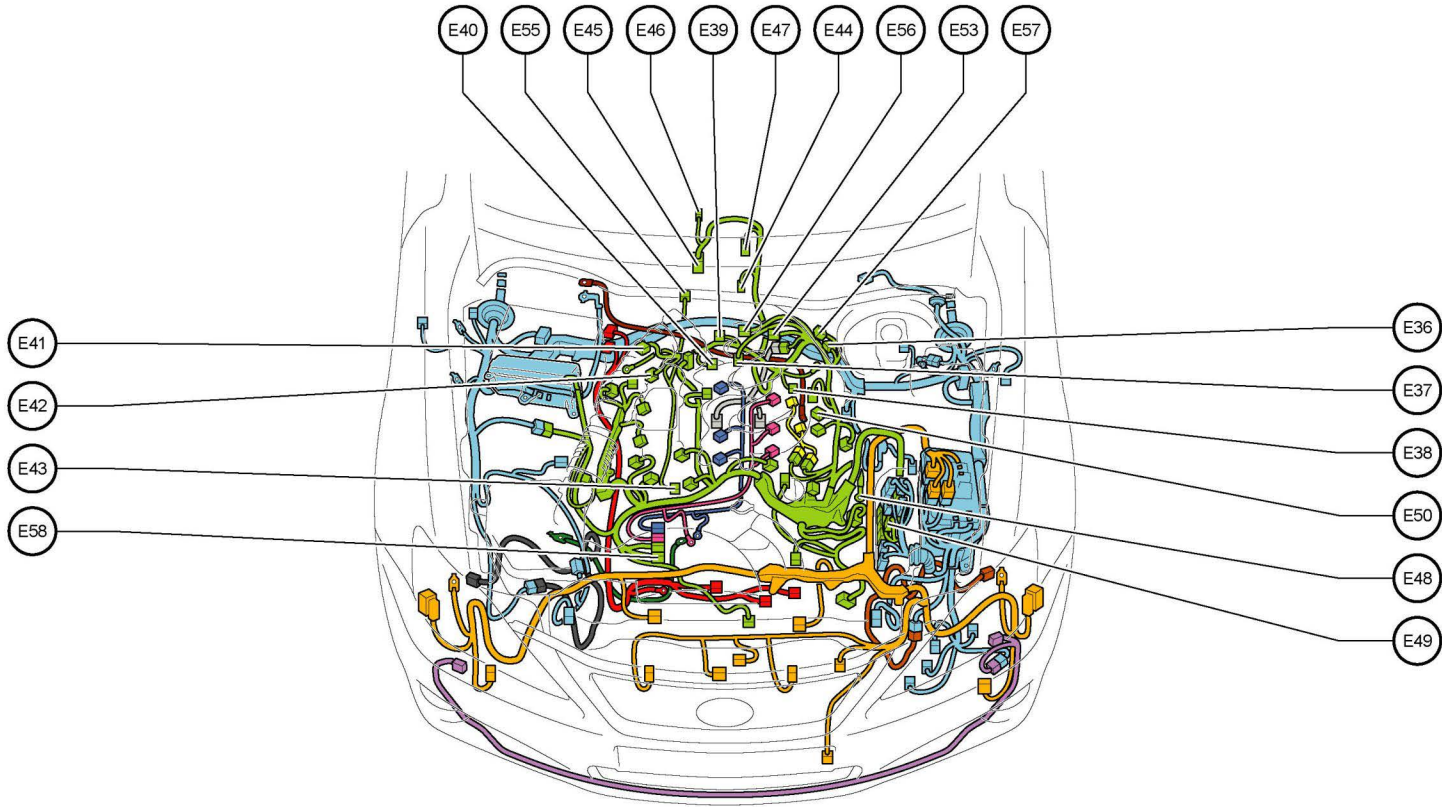


## Position of Parts in Engine Compartment <4GR-FSE>

---

- E 36 Noise Filter (Ignition No. 2)
- E 37 Fuel Pressure Sensor
- E 38 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- E 39 Water By-Pass Glow Plug
- E 40 E.F.I. Engine Coolant Temperature Sensor
- E 41 Spill Control Valve Assembly
- E 42 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- E 43 Engine Oil Level Sensor
- E 44 Transmission Revolution Sensor (Turbine)
- E 45 Park/Neutral Position Switch Assembly
- E 46 Transmission Revolution Sensor (Counter Gear)
- E 47 Electronically Controlled Transmission Solenoid
- E 48 Generator Assembly
- E 49 Junction Connector
- E 50 VSV (ACIS)
- E 53 Swirl Control Valve Actuator (Intake Manifold)
- E 55 Back-Up Light Switch Assembly
- E 56 Swirl Control Valve Sensor (Intake Manifold)
- E 57 Cold Start Fuel Injector Assembly
- E 58 Injector Driver

Position of Parts in Engine Compartment <4GR-FSE>

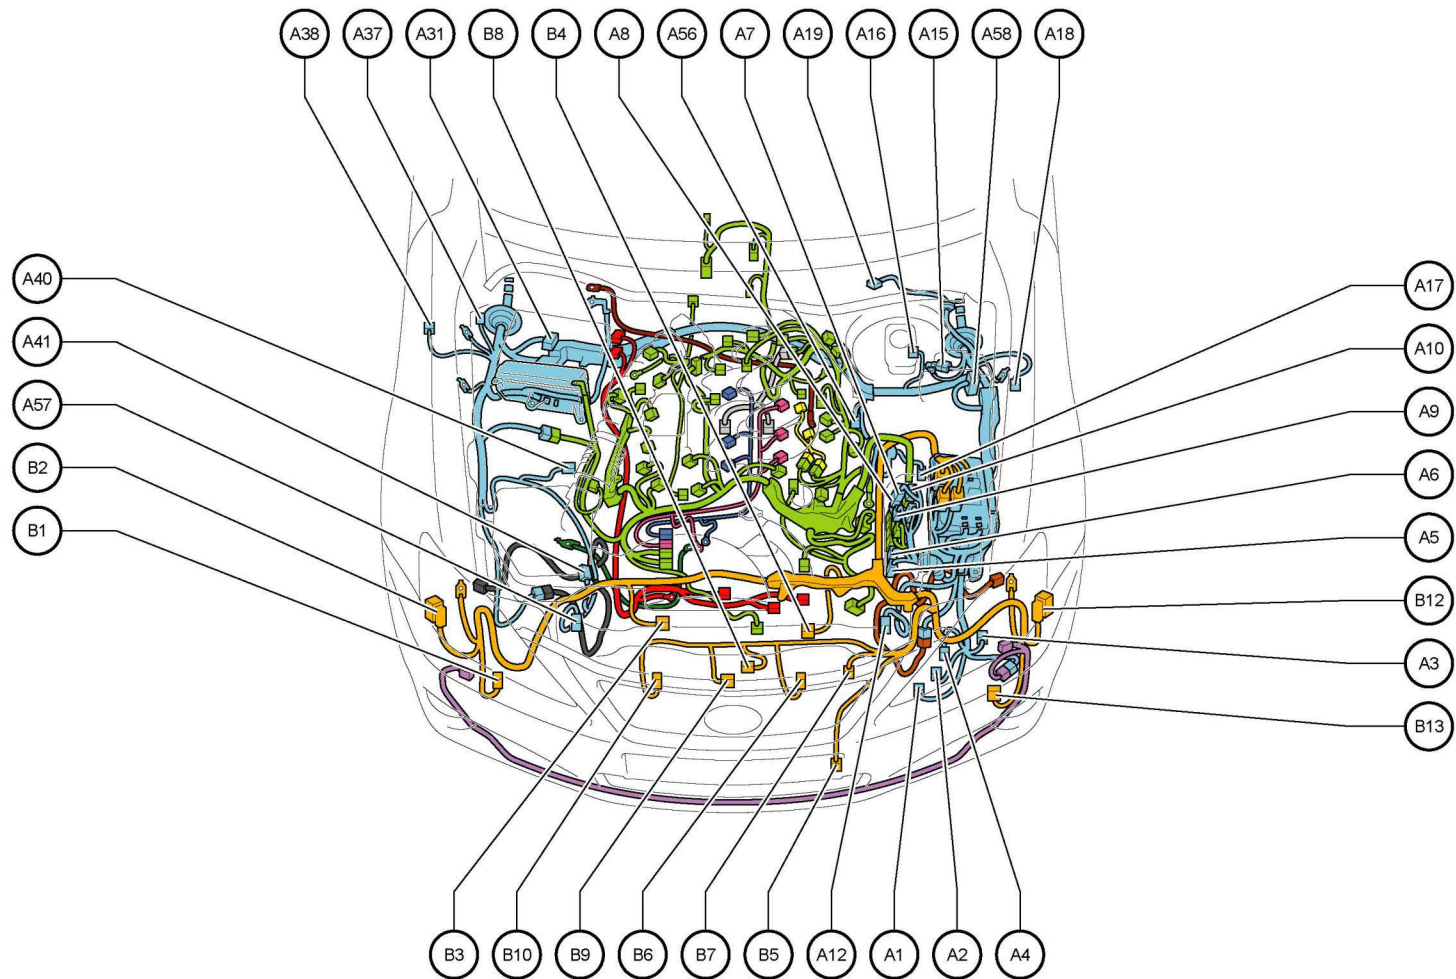




## Position of Parts in Engine Compartment <4GR-FSE>

---

- A 1 Level Warning Switch Assembly
- A 2 Headlight Cleaner Motor and Pump Assembly
- A 3 Headlight Cleaner Control Relay
- A 4 Windshield Washer Motor and Pump Assembly
- A 5 ECM
- A 6 ECM
- A 7 Junction Connector
- A 8 Junction Connector
- A 9 Junction Connector
- A 10 Junction Connector
- A 12 Front Airbag Sensor LH
- A 15 Junction Connector
- A 16 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Sub-Assembly)
- A 17 Front Height Control Sensor Sub-Assembly LH
- A 18 Wireless Door Lock Buzzer
- A 19 Windshield Wiper Motor Assembly
- A 31 Power Steering ECU Assembly
- A 37 Security Horn Assembly
- A 38 Front Tire Pressure Warning Antenna RH
- A 40 Fuel Pump Resistor
- A 41 Front Airbag Sensor RH
- A 56 A/C Pressure Sensor (Suction Pipe Sub-Assembly)
- A 57 Noise Filter (Ghost Buster)
- A 58 Brake Actuator Assembly

- B 1 Fog Light Assembly RH
- B 2 Headlight Assembly RH
- B 3 No. 2 Cooling Fan Motor
- B 4 Cooling Fan Motor
- B 5 Cooler (Ambient Temperature Sensor) Thermistor
- B 6 Low Pitched Horn Assembly
- B 7 A/C Pressure Sensor
- B 8 Engine Hood Courtesy Switch
- B 9 Millimeter Wave Radar Sensor Assembly
- B 10 High Pitched Horn Assembly
- B 12 Headlight Assembly LH
- B 13 Fog Light Assembly LH

Position of Parts in Engine Compartment <4GR-FSE>

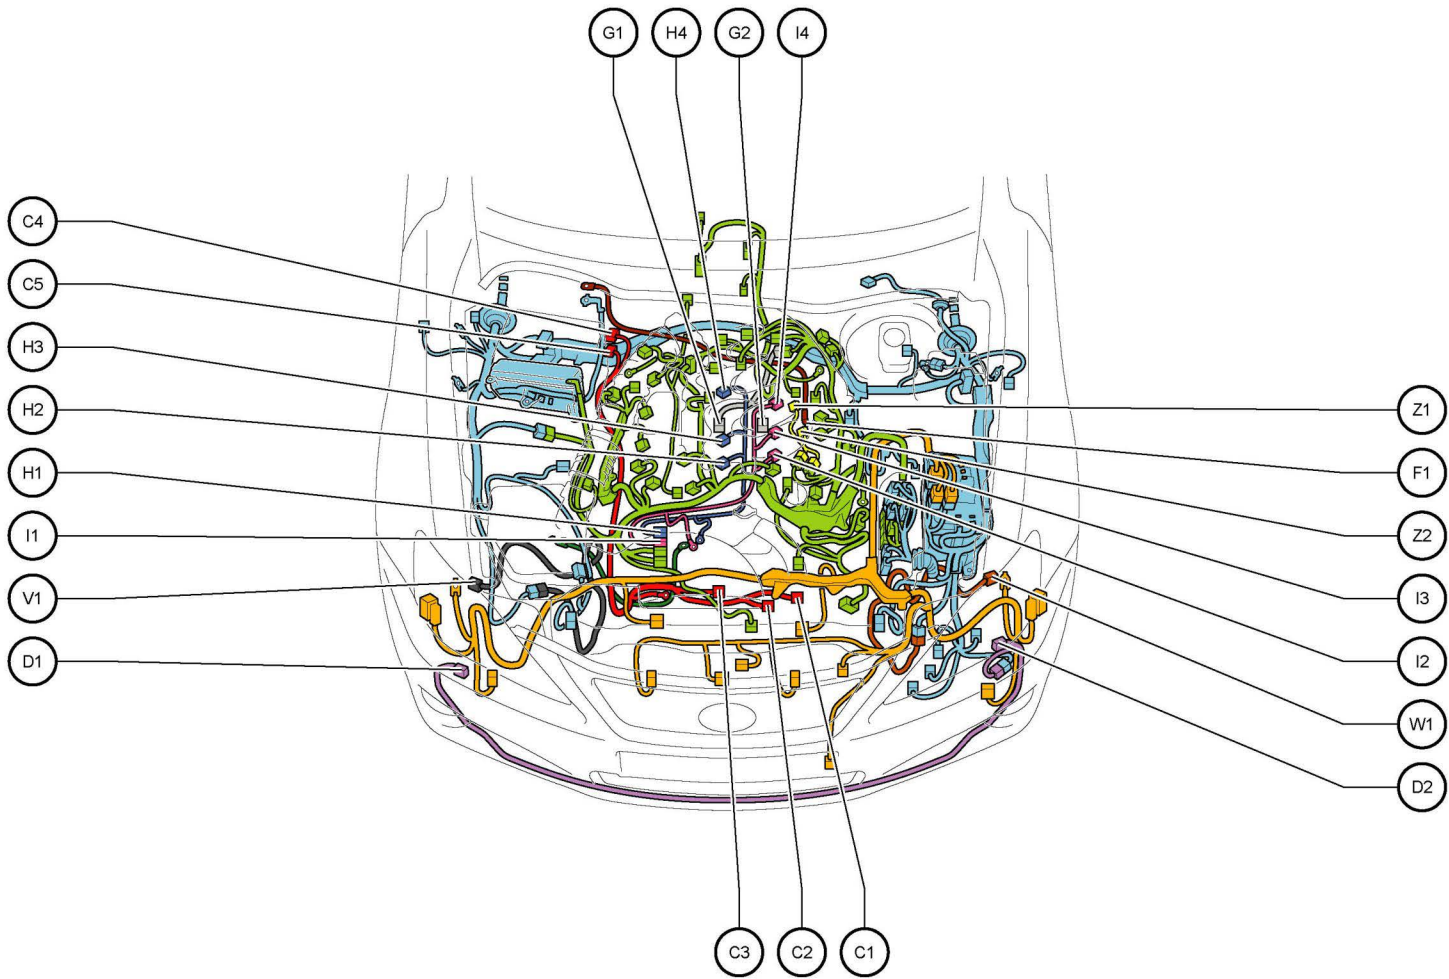

## Position of Parts in Engine Compartment <4GR-FSE>

---

- C 1 Steering Torque Sensor (Power Steering Link Assembly)
- C 2 Power Steering Motor (Power Steering Link Assembly)
- C 3 Power Steering Motor (Power Steering Link Assembly)
- C 4 Power Steering ECU Assembly
- C 5 Power Steering ECU Assembly
  
- D 1 Front No. 1 Ultrasonic Sensor RH
- D 2 Front No. 1 Ultrasonic Sensor LH
  
- F 1 Starter Assembly
  
- G 1 Knock Control Sensor (Bank 1)
- G 2 Knock Control Sensor (Bank 2)
  
- H 1 Injector Driver
- H 2 Direct Fuel Injector Assembly No. 1
- H 3 Direct Fuel Injector Assembly No. 3
- H 4 Direct Fuel Injector Assembly No. 5
  
- I 1 Injector Driver
- I 2 Direct Fuel Injector Assembly No. 2
- I 3 Direct Fuel Injector Assembly No. 4
- I 4 Direct Fuel Injector Assembly No. 6
  
- V 1 Front Speed Sensor RH
  
- W 1 Front Speed Sensor LH
  
- Z 1 Ignition Coil Assembly No. 4
- Z 2 Ignition Coil Assembly No. 6