

NAVIGATION SYSTEM

PRECAUTION

NOTICE:


If the negative (-) battery terminal is disconnected, initialize the following systems after the terminal is reconnected.


NS

System Name	See procedure
Power Window Control System	IN-46

PARTS LOCATION

NS

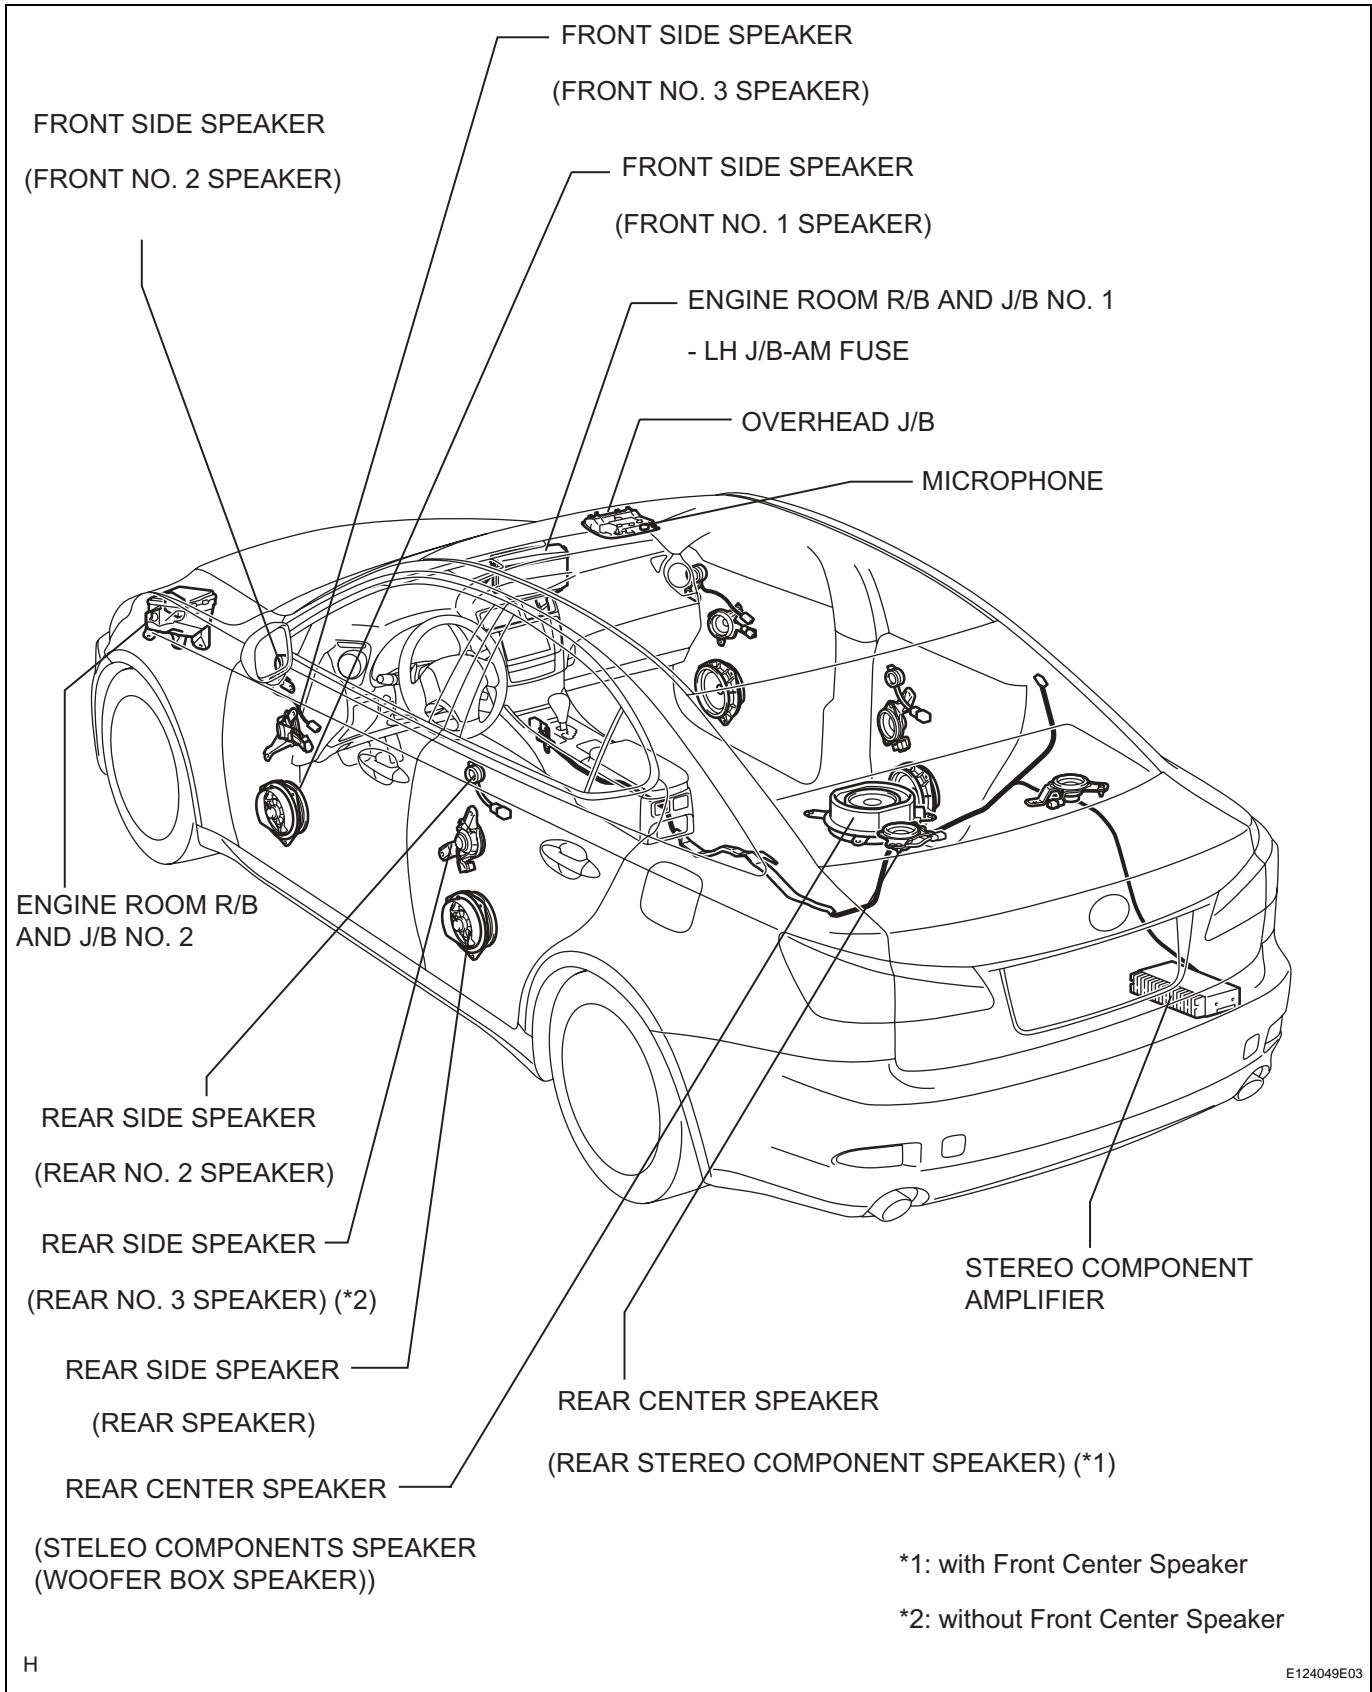

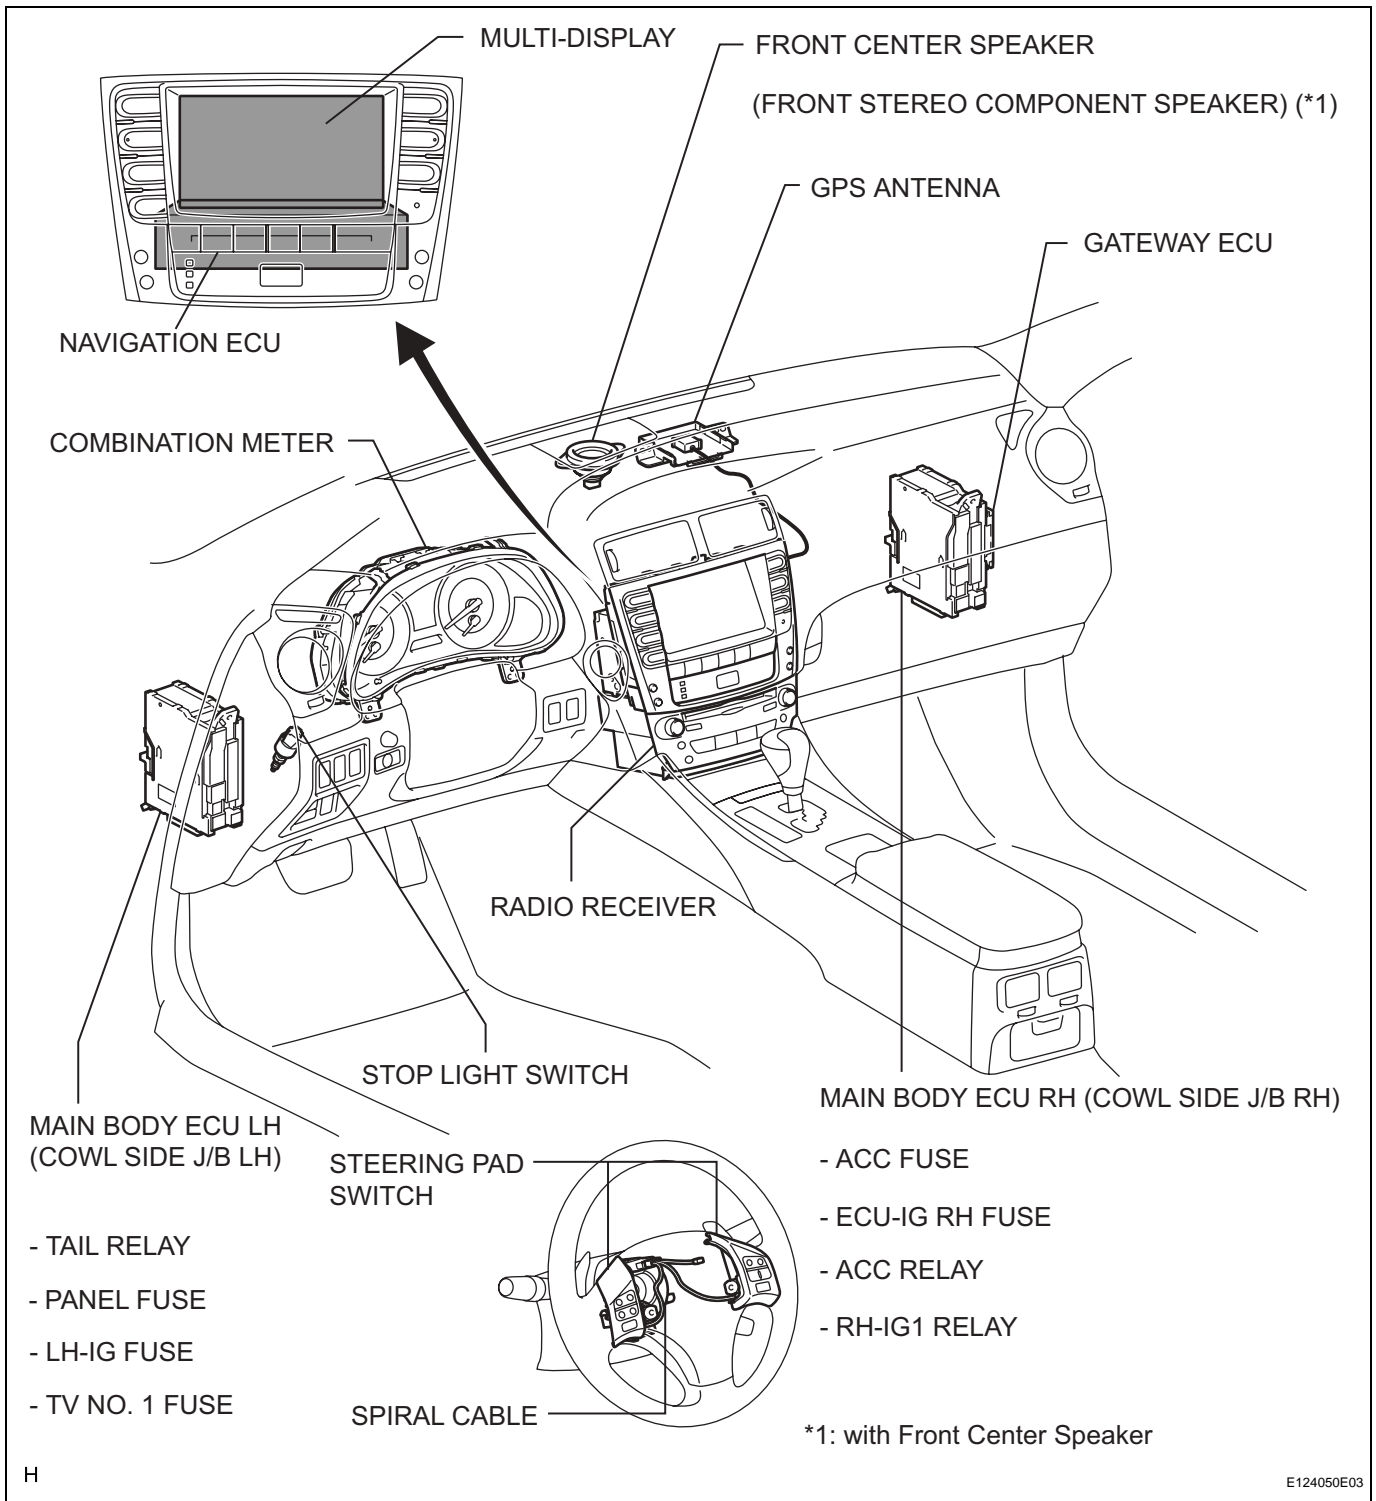

H