

Last Modified: 12-13-2019	6.10:8.0.50	Doc ID: RM1000000006IIN
Model Year Start: 2016	Model: IS200T	Prod Date Range: [04/2013 - 10/2016]
Title: SEAT: REAR SEAT ASSEMBLY(for Fold Down Seat Type): REMOVAL; 2014 - 2016 MY IS200T IS250 IS300 IS350 [04/2013 - 10/2016]		

REMOVAL

CAUTION / NOTICE / HINT

CAUTION:

- Be sure to read Precaution thoroughly before servicing.

Click here [INFO](#)

- Wear protective gloves. Sharp areas on the seat frame may injure your hands.

PROCEDURE

1. PRECAUTION

NOTICE:

After turning the engine switch off, waiting time may be required before disconnecting the cable from the negative (-) battery terminal. Therefore, make sure to read the disconnecting the cable from the negative (-) battery terminal notices before proceeding with work.

Click here [INFO](#)

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected.

Click here [INFO](#)

3. REMOVE REAR SEAT CUSHION ASSEMBLY

- Lift up the front edge of the rear seat cushion assembly as shown in the illustration and disengage the 2 hooks on the front side of the rear seat cushion frame from the rear seat cushion lock hooks.


NOTICE:

Be sure to hold the part of the seat cushion assembly directly next to the rear seat cushion lock hooks when lifting it up. Lifting a different part of the cushion may deform the rear seat cushion frame.

Standard Measurement:

AREA	MEASUREMENT


AREA	MEASUREMENT
A	100 mm (3.94 in.) or less

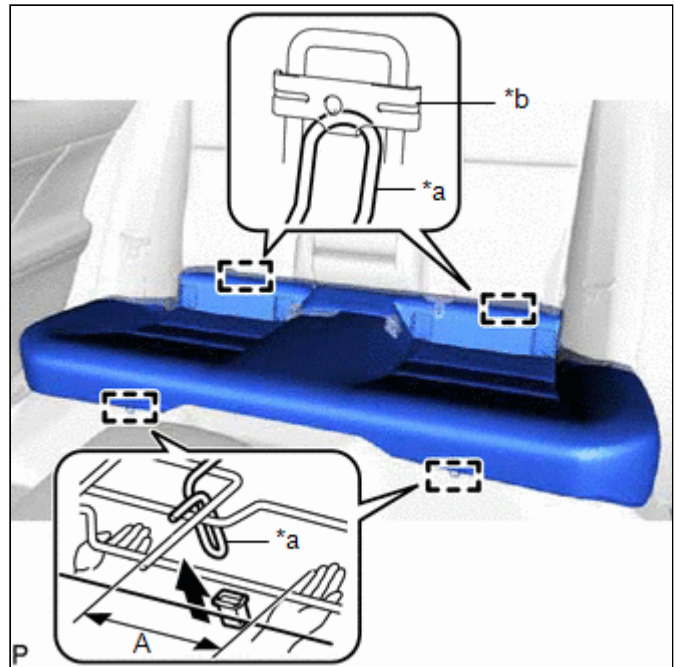

*a	Rear Seat Cushion Frame Hook
*b	Child Restraint Seat Anchor Bracket Hook

(b) Disengage the 2 hooks on the rear side of the rear seat cushion frame from the child restraint seat anchor bracket hooks.

(c) Pass the rear seat inner belt assembly through the rubber band of the rear seat cushion assembly.

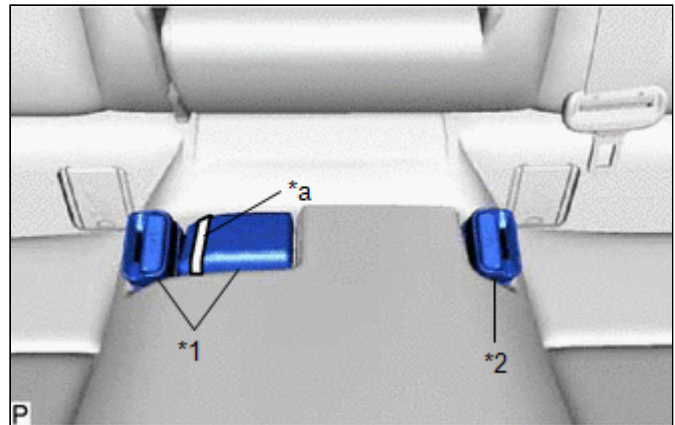

*1	Rear Seat Inner Belt Assembly
*2	Rear No. 1 Seat Inner Belt Assembly LH
*a	Rubber Band

(d) Pass the 2 rear seat inner belts through the rear seat cushion assembly and remove the rear seat cushion assembly.

NOTICE:


Be careful not to damage the vehicle body.

4. REMOVE REAR SEAT CUSHION LOCK HOOK

- (a) Disengage the 2 claws to remove the rear seat cushion lock hook as shown in the illustration.

HINT:

Use the same procedure for the RH side and LH side.

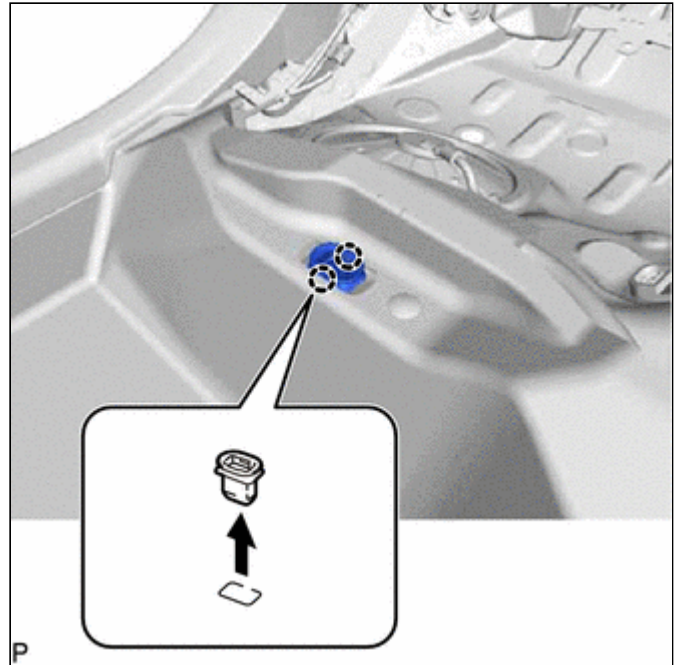**5. REMOVE REAR SEAT HEADREST ASSEMBLY**

- (a) Remove the 2 rear seat headrest assemblies.

6. REMOVE REAR SEAT CENTER HEADREST ASSEMBLY

- (a) Remove the rear seat center headrest assembly.

7. REMOVE REAR NO. 1 SEAT INNER BELT ASSEMBLY LH


Click here [INFO](#)

8. REMOVE REAR SIDE SEATBACK ASSEMBLY RH

- (a) Disconnect the airbag connector.

NOTICE:

When disconnecting any airbag connector, take care not to damage the airbag wire harness.

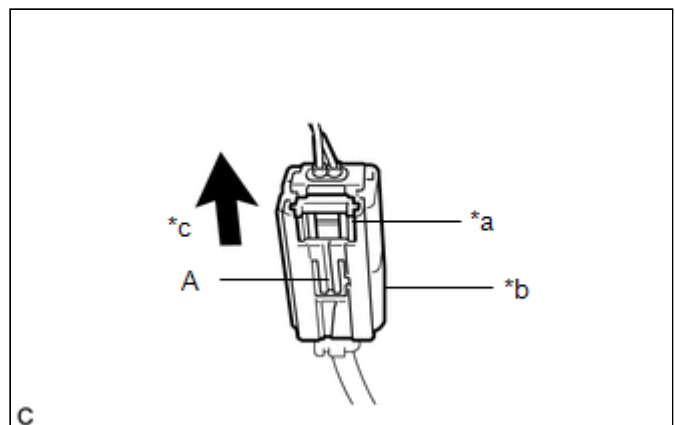


*a	White Housing Lock
*b	Yellow CPA
*c	Slide

- (b) Push down the white housing lock and slide the yellow CPA. (At this time, the connector cannot be disconnected yet.)
- (c) Push down the white housing lock again and disconnect the connector.

NOTICE:

Do not push down the part (A) shown in the illustration when disconnecting the connector.

- (d) Remove the bolt.

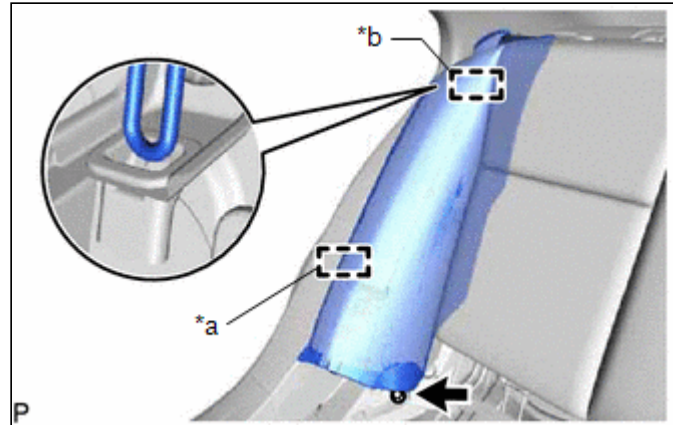


*a	Guide
*b	Hook

- (e) Disengage the guide and hook.

- (f) Using a screwdriver, disengage the claw as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

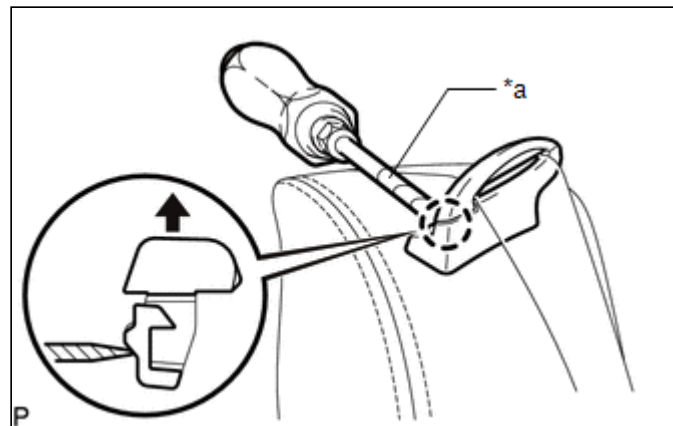

*a	Protective Tape
----	-----------------

- (g) Disconnect the rear seat 3 point type outer belt assembly RH from the rear seat shoulder belt guide RH.
- (h) Remove the rear side seatback assembly RH.

NOTICE:

Be careful not to damage the vehicle body.


9. REMOVE REAR SIDE SEATBACK ASSEMBLY LH**HINT:**

Use the same procedure as for the RH side.



10. REMOVE REAR SEATBACK ASSEMBLY RH

(a) Fold the rear seatback assembly RH forward.


(b) Disengage the 2 clips.

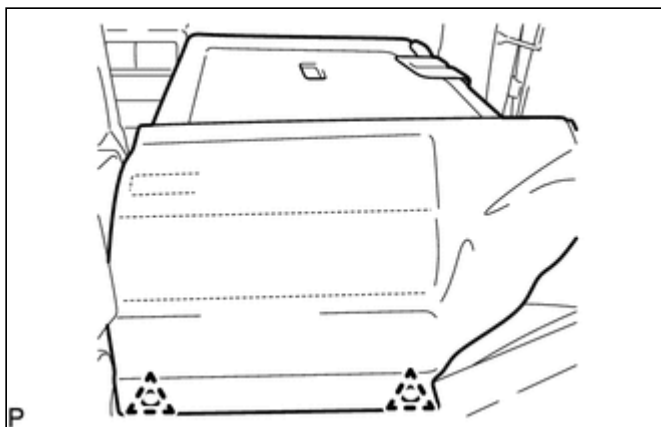

(c) Disengage the 4 fasteners as shown in the illustration.

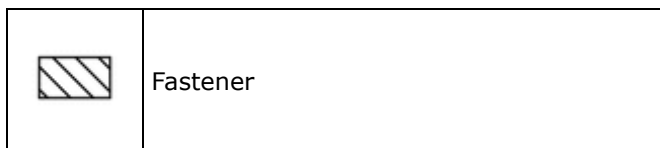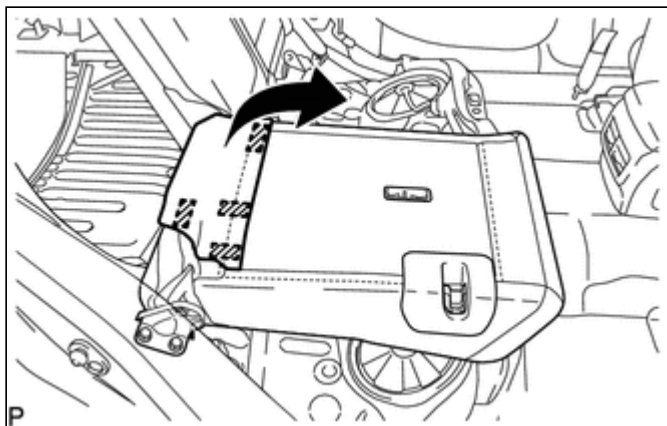

(d) Remove the 3 bolts.

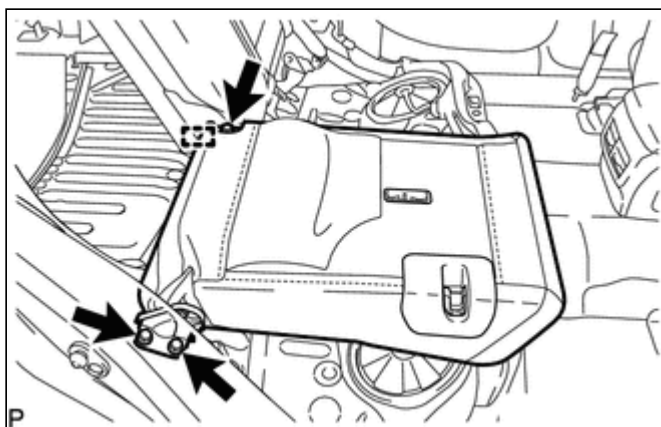

(e) Disengage the guide to remove the rear seatback assembly RH.


NOTICE:

Be careful not to damage the vehicle body.



11. REMOVE REAR SEATBACK ASSEMBLY LH

(a) Fold the rear seatback assembly LH forward.


(b) Disengage the 3 clips.

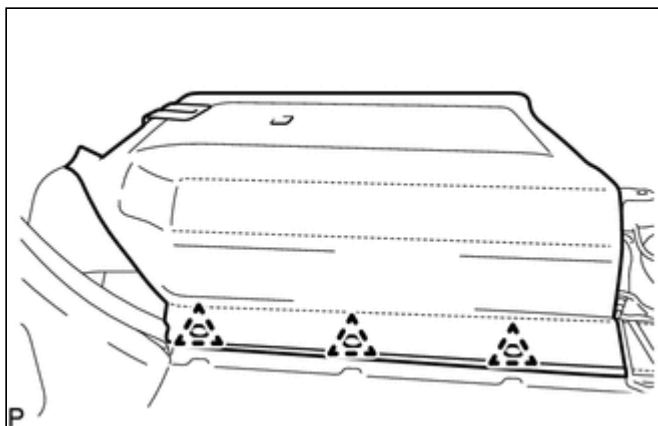

(c) Disengage the 5 fasteners as shown in the illustration.

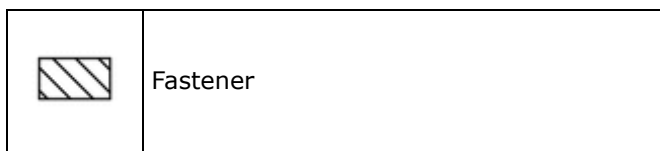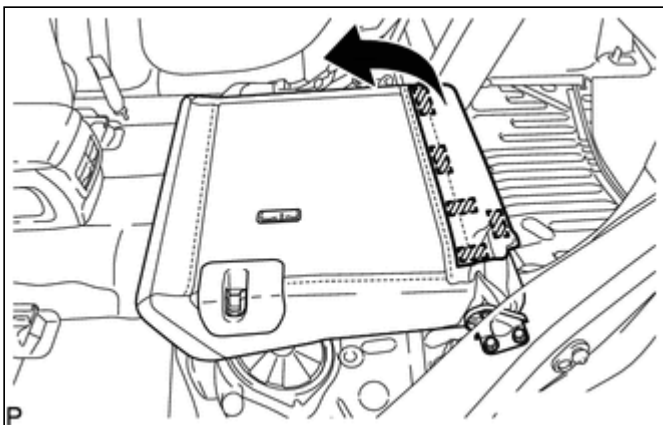

(d) Remove the 3 bolts.

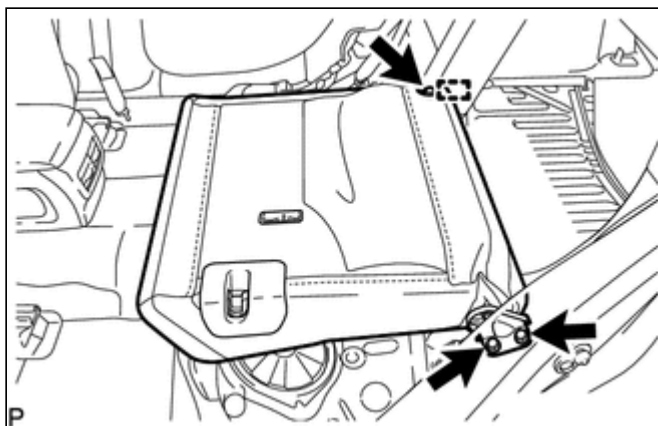

(e) Disengage the guide to remove the rear seatback assembly LH.

NOTICE:

Be careful not to damage the vehicle body.

