

REAR SEAT ASSEMBLY REMOVAL


PROCEDURE

1. REMOVE REAR SEAT CUSHION ASSEMBLY

- a. Move both front seats to the frontmost position and collapse them to the front in advance.
- b. Place your hands at the positions shown in the illustration and pull in the removal direction to detach the 2 hooks on the front of the rear seat cushion from the 2 rear seat cushion lock hooks.

Note

- Detach the rear seat cushion front side hooks one at a time.
- If the hook on the front of the rear seat cushion assembly is detached, replace the rear seat cushion lock hook with a new one.

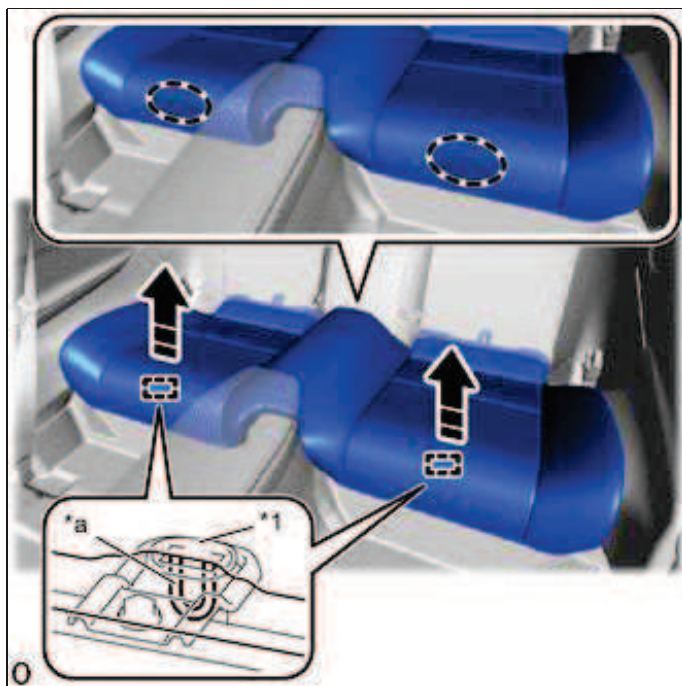

*1

Rear Seat Cushion Lock Hook

*a

Hook on Front of Rear Seat Cushion



Place Hand Here



Remove in this Direction

- c. Pull in the removal direction shown in the illustration to detach the hooks on the rear of the rear seat cushion assembly from the 2 child restraint seat anchor brackets.


- d. Remove the rear seat cushion assembly.

Note

Do not damage the rear seat cushion assembly, body and body interior.

2.



*1	Child Restraint Seat Anchor Bracket
*a	Hook on Rear of Rear Seat Cushion
	Remove in this Direction

REMOVE REAR SEAT CUSHION LOCK HOOK


Note

- If the hook on the front of the rear seat cushion assembly is detached, replace the rear seat cushion lock hook with a new one.
- Do not reuse the rear seat cushion lock hook after removing it.

Tech Tips

Use the same procedure for the other side.

- Insert 2 thin-bladed screwdrivers between the sleeve and body of the rear seat cushion lock hook.**
- Pull up the 2 thin-bladed screwdrivers to detach the claws and remove the rear seat cushion lock hook.**

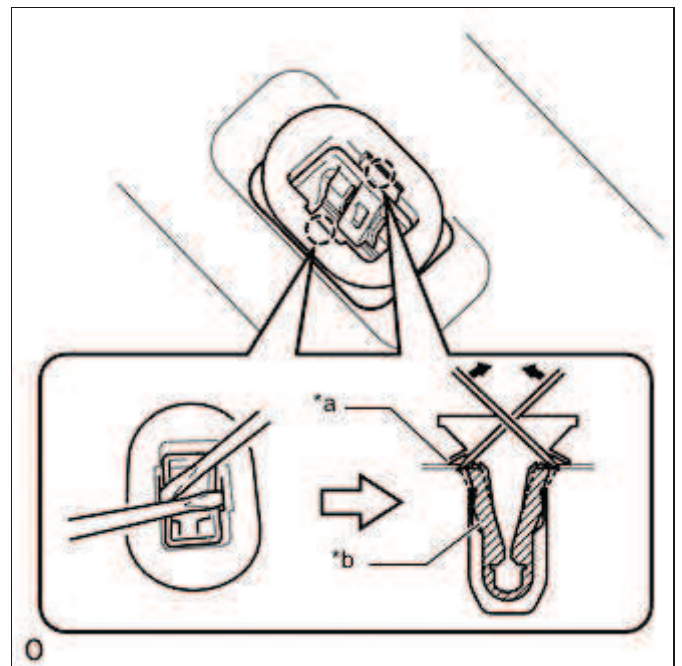

*a	Body
*b	Sleeve

3. REMOVE REAR SEAT CUSHION HOLDER BRACKET

Tech Tips

Use the same procedure for the other side.

- Remove the bolt and rear seat cushion holder bracket.**

4.