



RADIO AND TAPE PLAYER

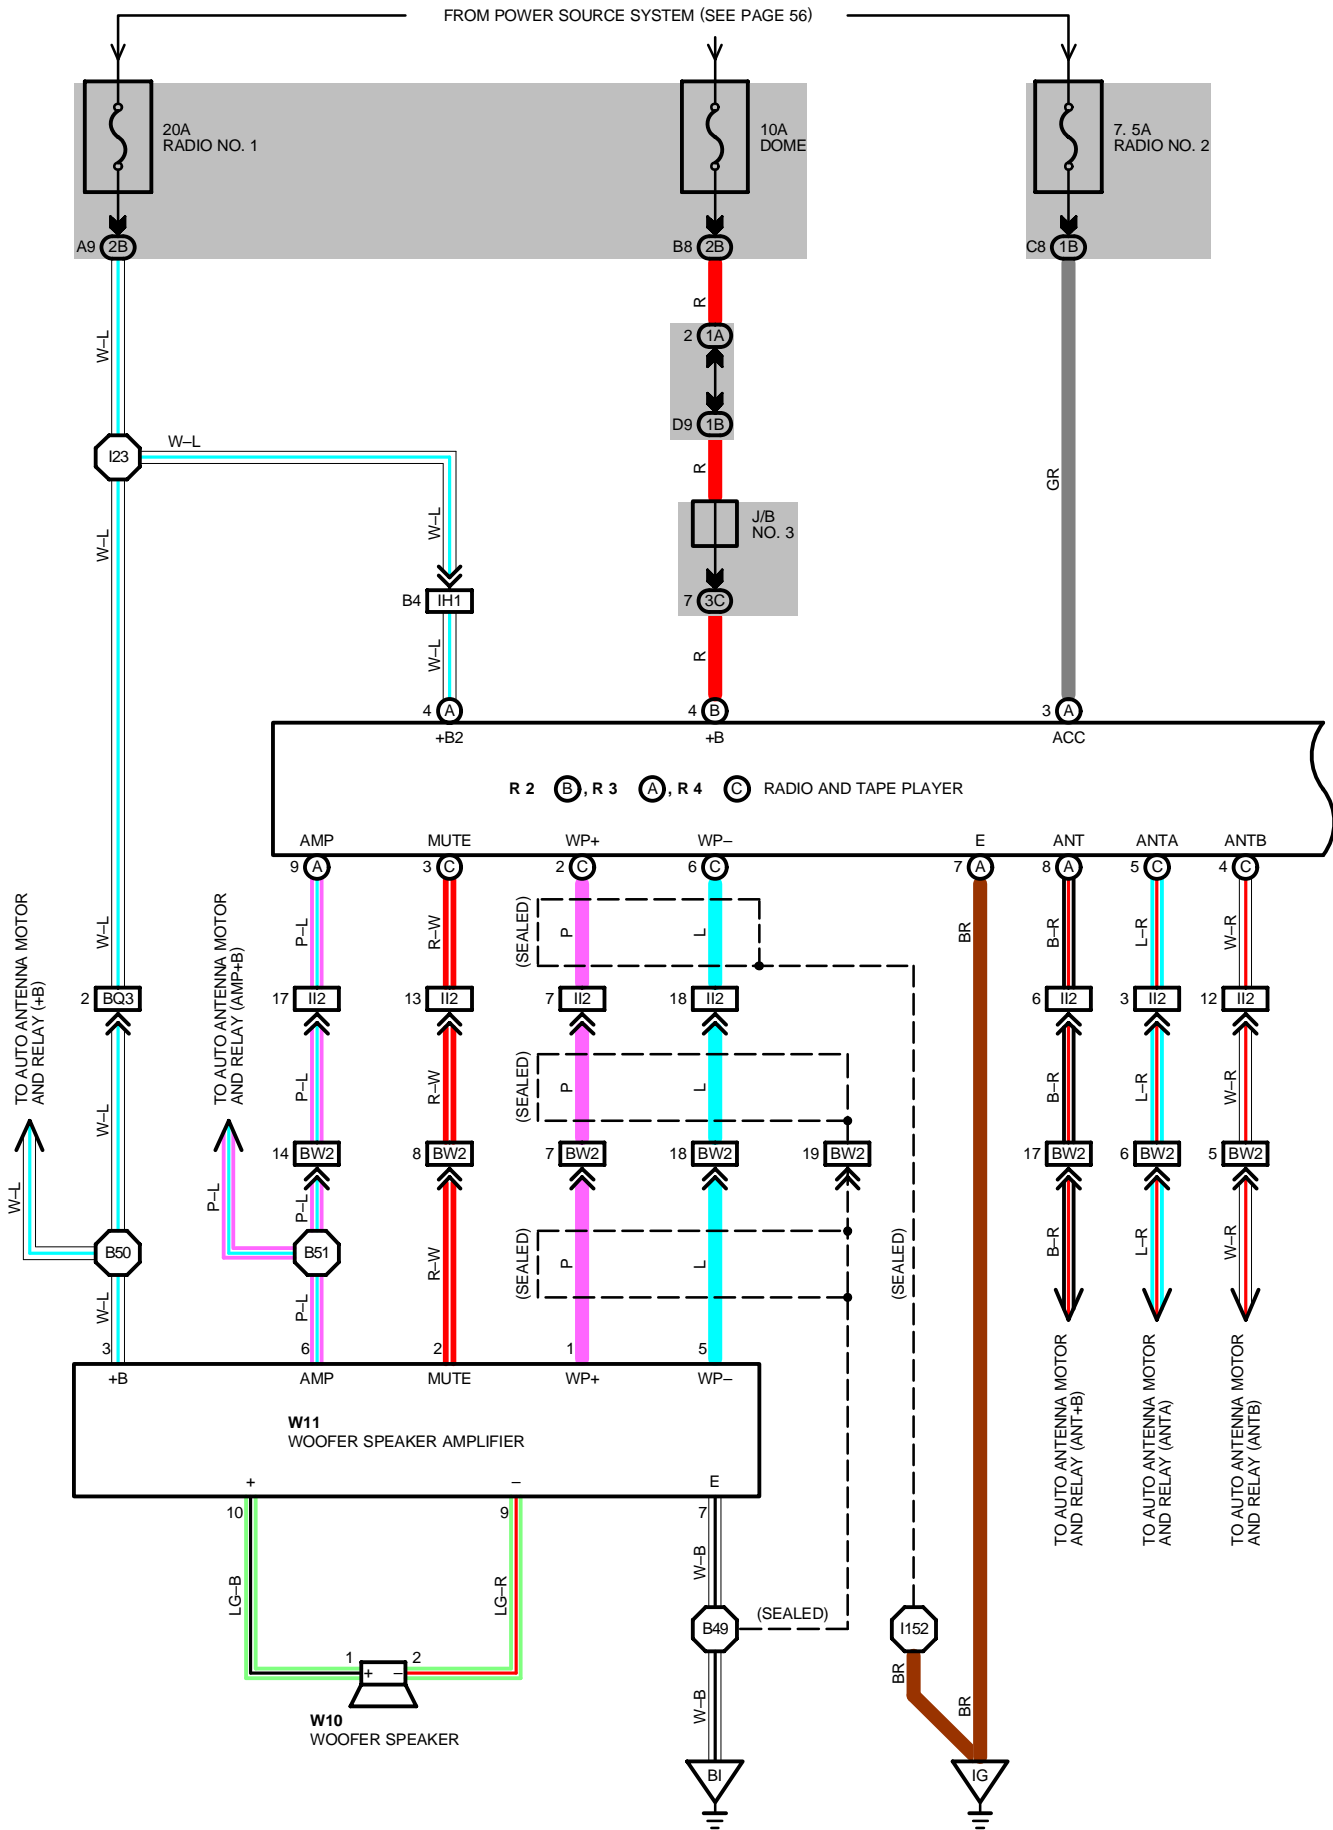

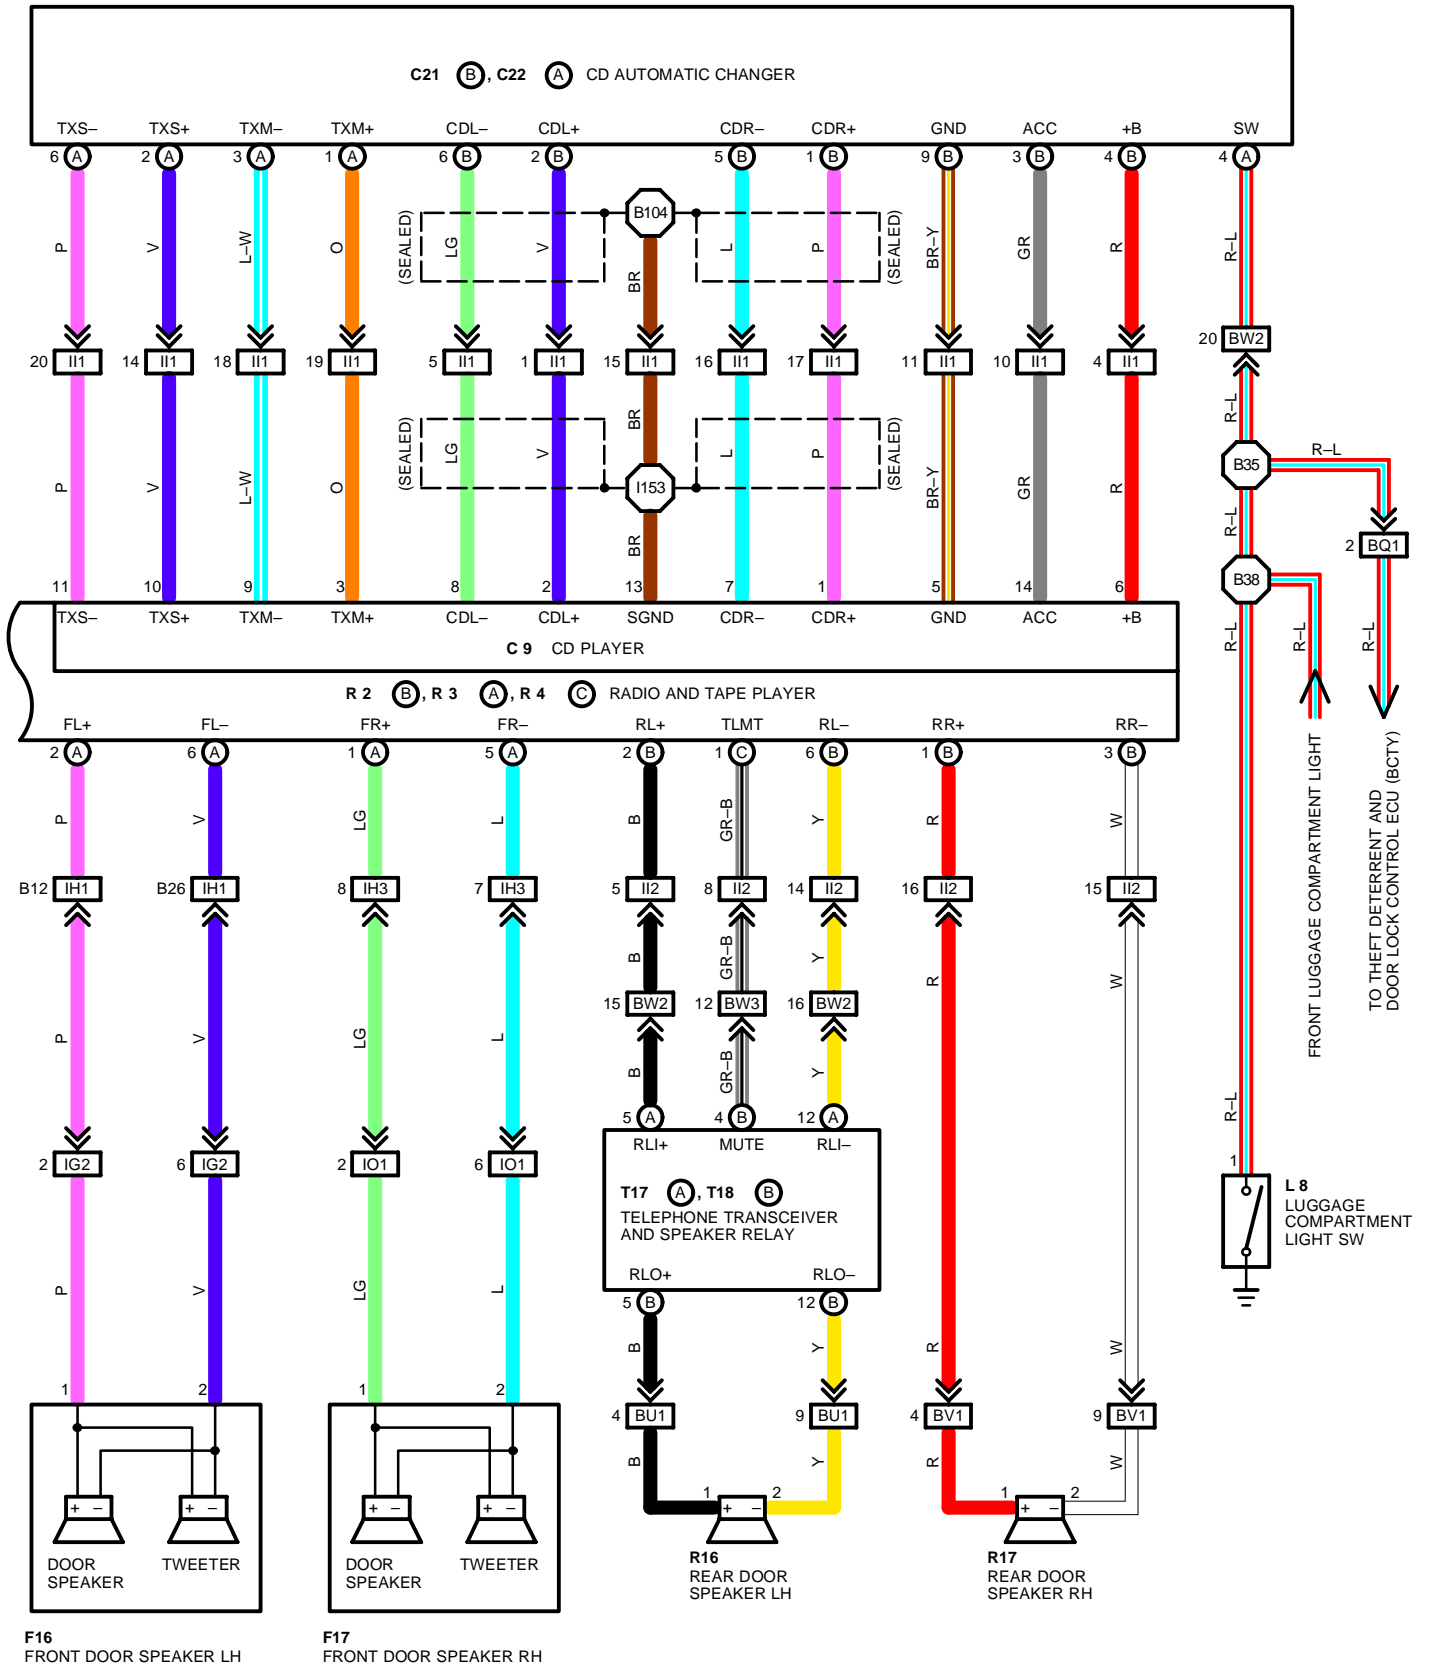

RADIO AND TAPE PLAYER

SERVICE HINTS

R 3 (A) RADIO AND TAPE PLAYER

(A) 3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION

(A) 4-GROUND : ALWAYS APPROX. 12 VOLTS

(A) 7-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 9	26	L 8	28	R17	29
C21	B 28	R 2	B 27	T17	A 29
C22	A 28	R 3	A 27	T18	B 29
F16	28	R 4	C 27	W10	29
F17	28	R16	29	W11	29

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
1B	18	INSTRUMENT PANEL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
2B	20	COWL WIRE AND J/B NO.2 (ENGINE COMPARTMENT LEFT)
3C	22	INSTRUMENT PANEL WIRE AND J/B NO.3 (BEHIND THE INSTRUMENT PANEL CENTER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IG2	34	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IH1	34	INSTRUMENT PANEL WIRE AND COWL WIRE (J/B NO.1)
IH3	34	INSTRUMENT PANEL WIRE AND COWL WIRE (BEHIND GLOVE BOX)
II1	34	INSTRUMENT PANEL WIRE AND FLOOR NO.1 WIRE (UNDER THE INSTRUMENT PANEL BRACE RH)
II2		
IO1	36	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BQ1	38	COWL WIRE AND FLOOR NO.2 WIRE (LEFT KICK PANEL)
BQ3		
BU1	38	REAR DOOR LH WIRE AND FLOOR NO.2 WIRE (LEFT CENTER PILLAR)
BV1	38	REAR DOOR RH WIRE AND FLOOR NO.1 WIRE (RIGHT CENTER PILLAR)
BW2	38	FLOOR NO.1 WIRE AND FLOOR NO.2 WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)
BW3		

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IG	34	INSTRUMENT PANEL BRACE RH
BI	38	UNDER THE LEFT REAR PILLAR

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 23	36	COWL WIRE	B 49	38	FLOOR NO.2 WIRE
I152			B 50		
I153			B 51		
B 35	B104				
B 38	38	FLOOR NO.2 WIRE			

