


DTC	51	Engine Malfunction Detection Circuit
------------	-----------	---

— CIRCUIT DESCRIPTION —

If trouble (trouble which causes the CHECK malfunction indicator light to light up) occurs in the engine control system, this circuit senses the trouble and prohibits TRAC control.

DTC No.	Diagnostic Trouble Code Detecting Condition	Trouble Area
51	Conditions (1) or (2) continue for 1 sec.: 1. Engine Speed: 500 rpm or more. 2. Voltage of TRAC ECU terminal TR5: 1 V or less	<ul style="list-style-type: none"> • Short in TR5 circuit • ECM • TRAC ECU

— DIAGNOSTIC CHART —

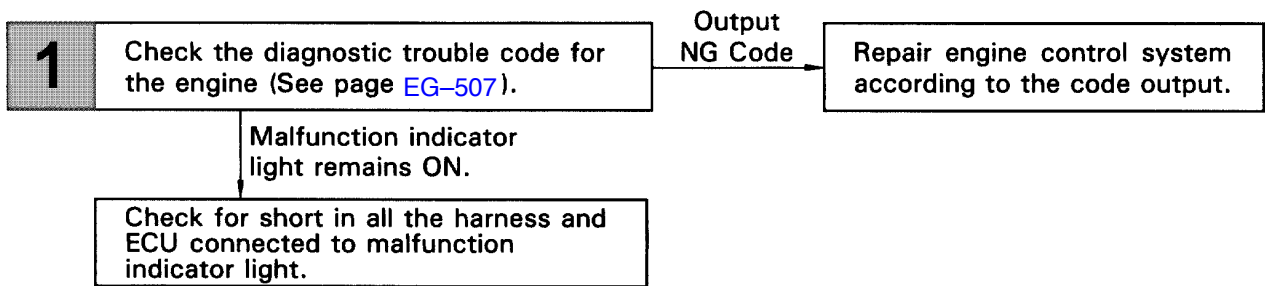

— WIRING DIAGRAM —

