


REMOVAL

CAUTION:

Do not smoke or work near an open flame when working on the fuel pump.

1. REMOVE LUGGAGE COMPARTMENT FLOOR MAT
2. REMOVE LUGGAGE COMPARTMENT TRIM COVER
3. DISCONNECT FUEL PUMP CONNECTOR
4. REMOVE SEAT CUSHION AND BACK
5. REMOVE PARTITION COVER


Using a scraper, pry out the partition cover.

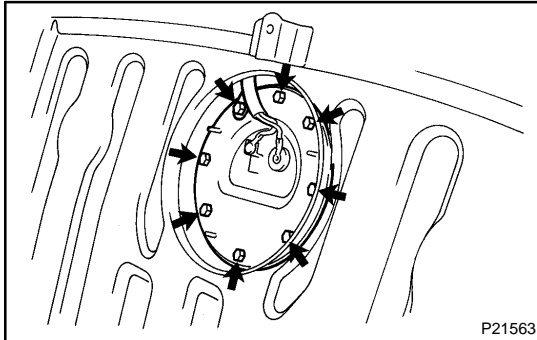

6. REMOVE FUEL PUMP, BRACKET AND SET PLATE ASSEMBLY

- (a) Remove the 8 bolts, and disconnect the fuel pump set plate from the fuel tank.

Torque: 3.0 N·m (30 kgf·cm, 26 in.-lbf)

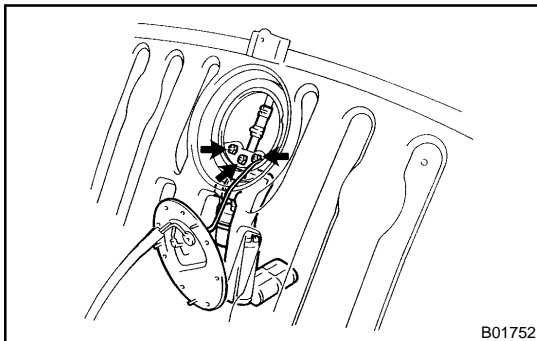

- (b) Remove the 3 nuts, and disconnect the fuel pump bracket from the fuel tank.

Torque: 5.5 N·m (55 kgf·cm, 48 in.-lbf)

- (c) Disconnect the fuel hose from the fuel pump bracket, and remove the fuel pump, bracket, set plate, assembly and gasket.

HINT:

At the time of installation, please refer to the following items.
Use a new gasket.