

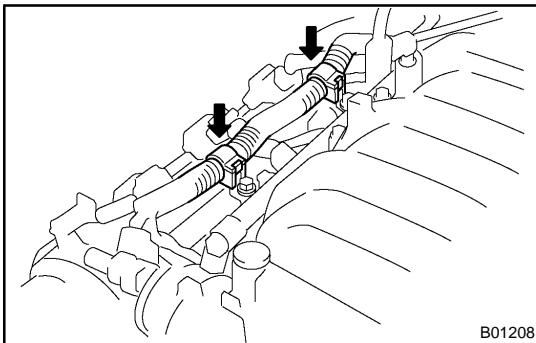



- (c) Disconnect these hoses:
- (1) Brake booster vacuum hose from union on intake manifold
 - (2) PCV hose from PCV valve on LH cylinder head
 - (3) EVAP hose (from charcoal canister) from VSV for EVAP
 - (4) EVAP hose (from charcoal canister) from EVAP pipe on the intake manifold
 - (5) EVAP hose (from intake air connector) from EVAP pipe on the intake manifold
 - (6) **PS air hose from intake manifold**
 - (7) No.1 water bypass hose (from water inlet housing) from throttle body
 - (8) No.7 water bypass hose (from front water bypass joint) from throttle body
- (d) Disconnect the 2 wire clamp from the throttle body.

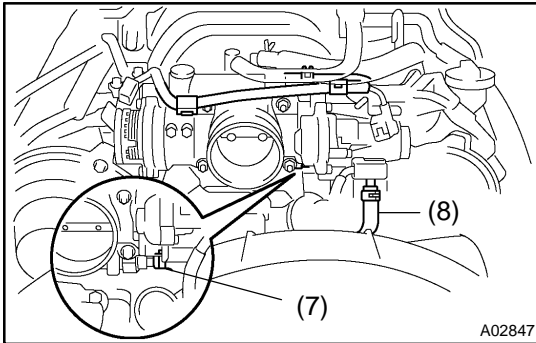

- (e) Disconnect the engine wire from the RH delivery pipe, rear water bypass joint, intake manifold and cylinder head.
- (1) Disconnect the 2 wire clamps from the wire clamp bracket on the RH delivery pipe.

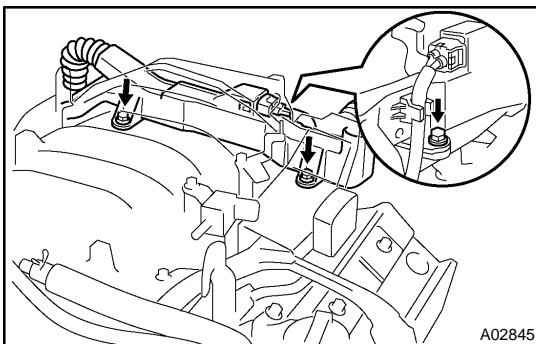

- (2) Remove the 3 bolts, and disconnect the engine wire protector from the rear water bypass joint and RH cylinder head.

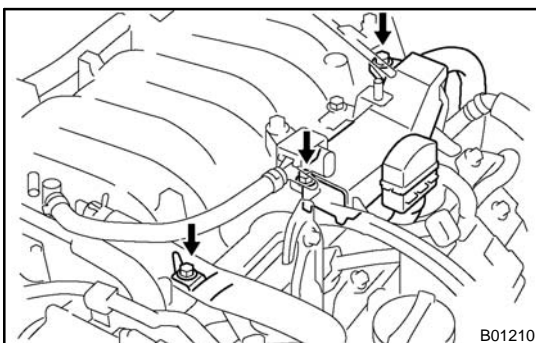

- (3) Remove the 3 bolts, and disconnect the engine wire protector and wire clamp bracket from the intake manifold.