




# RADIO AND PLAYER


FROM POWER SOURCE SYSTEM (SEE PAGE 66)

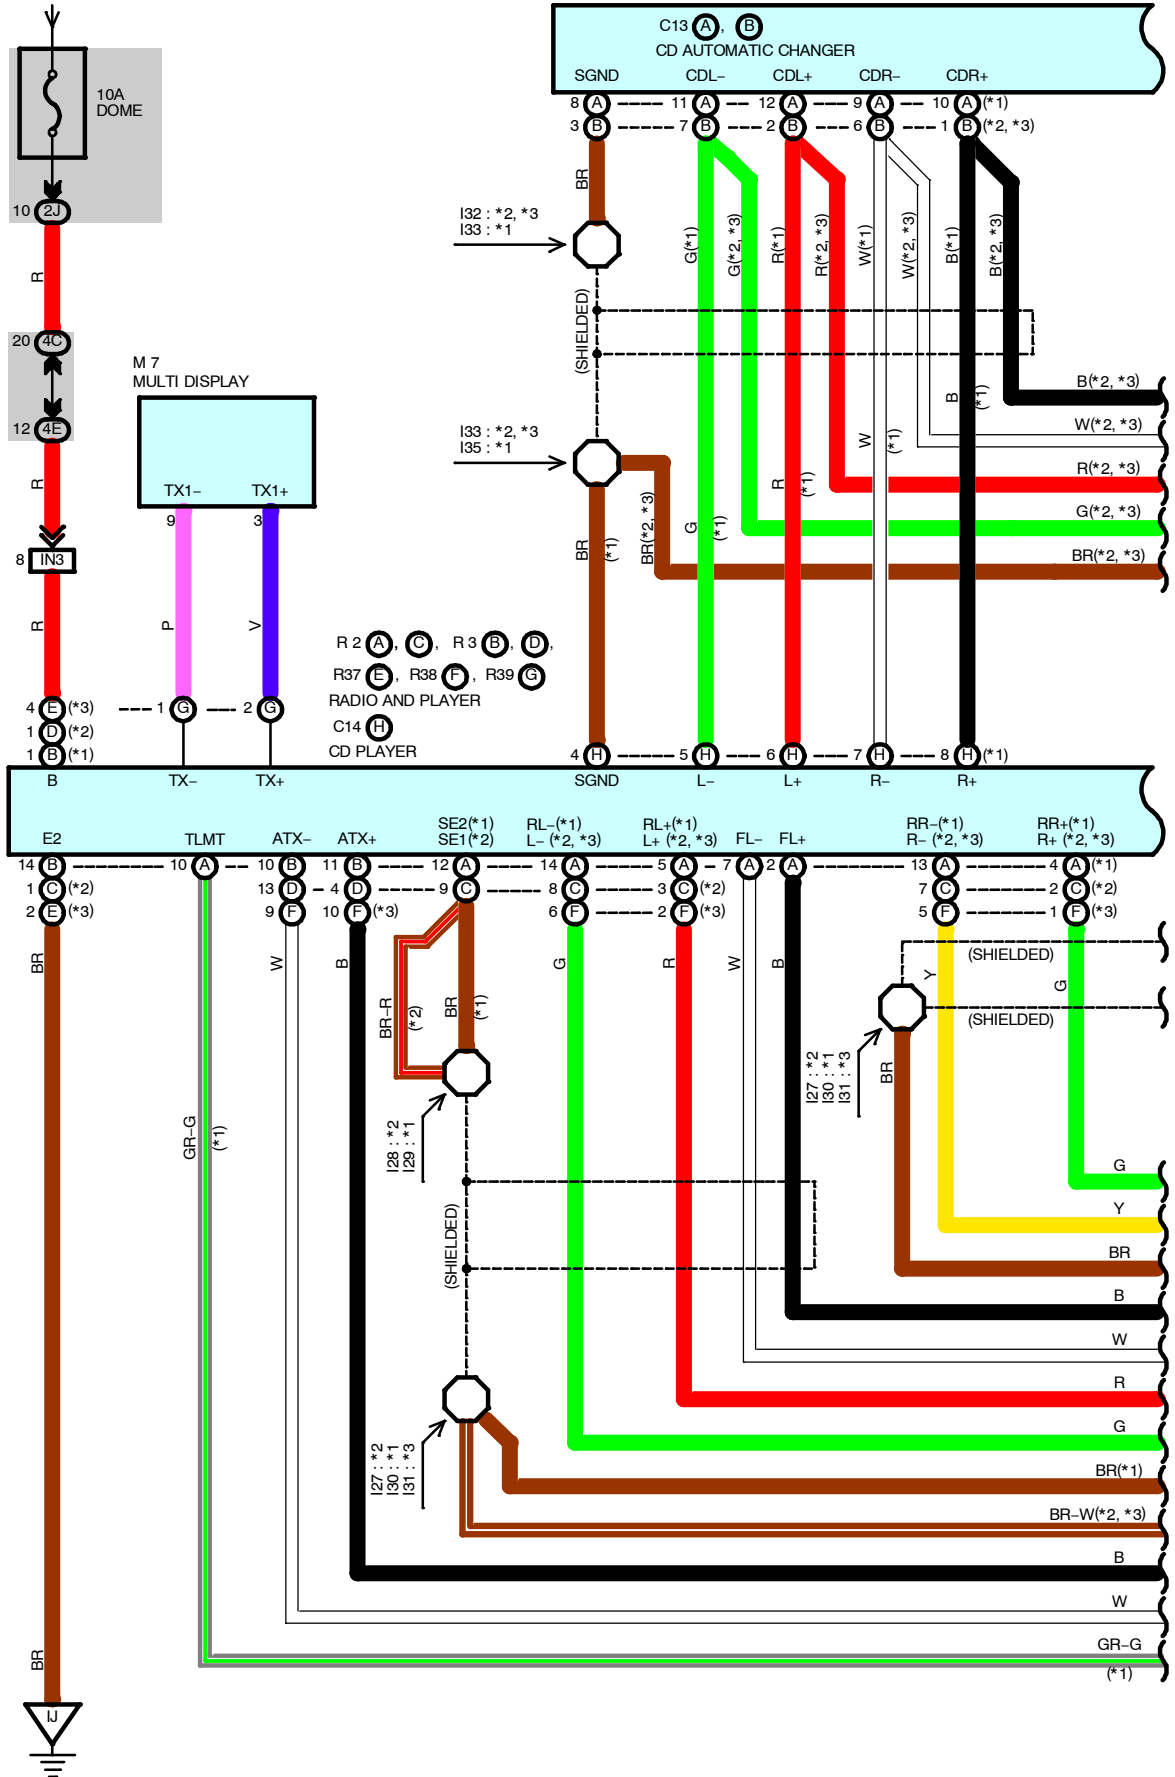

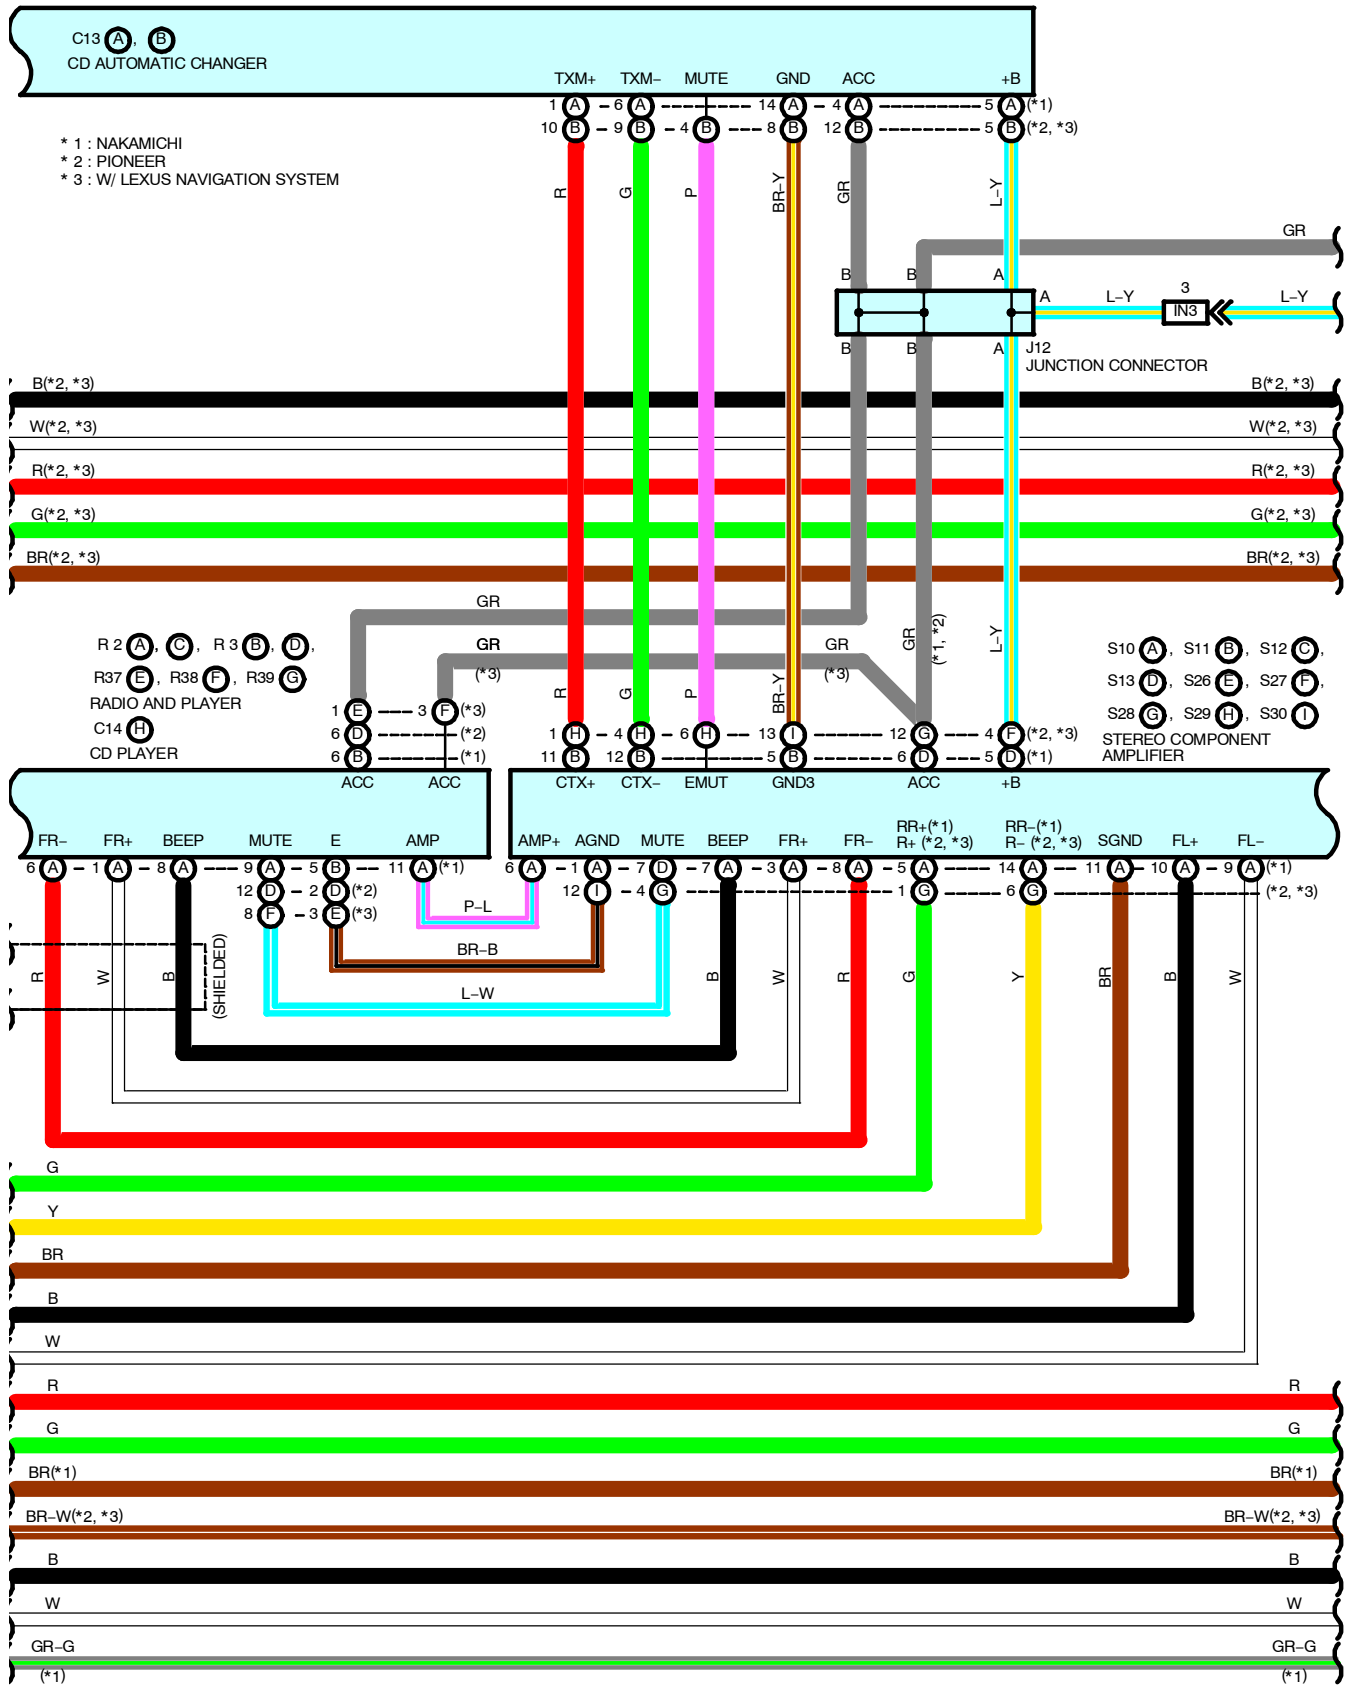

# RADIO AND PLAYER

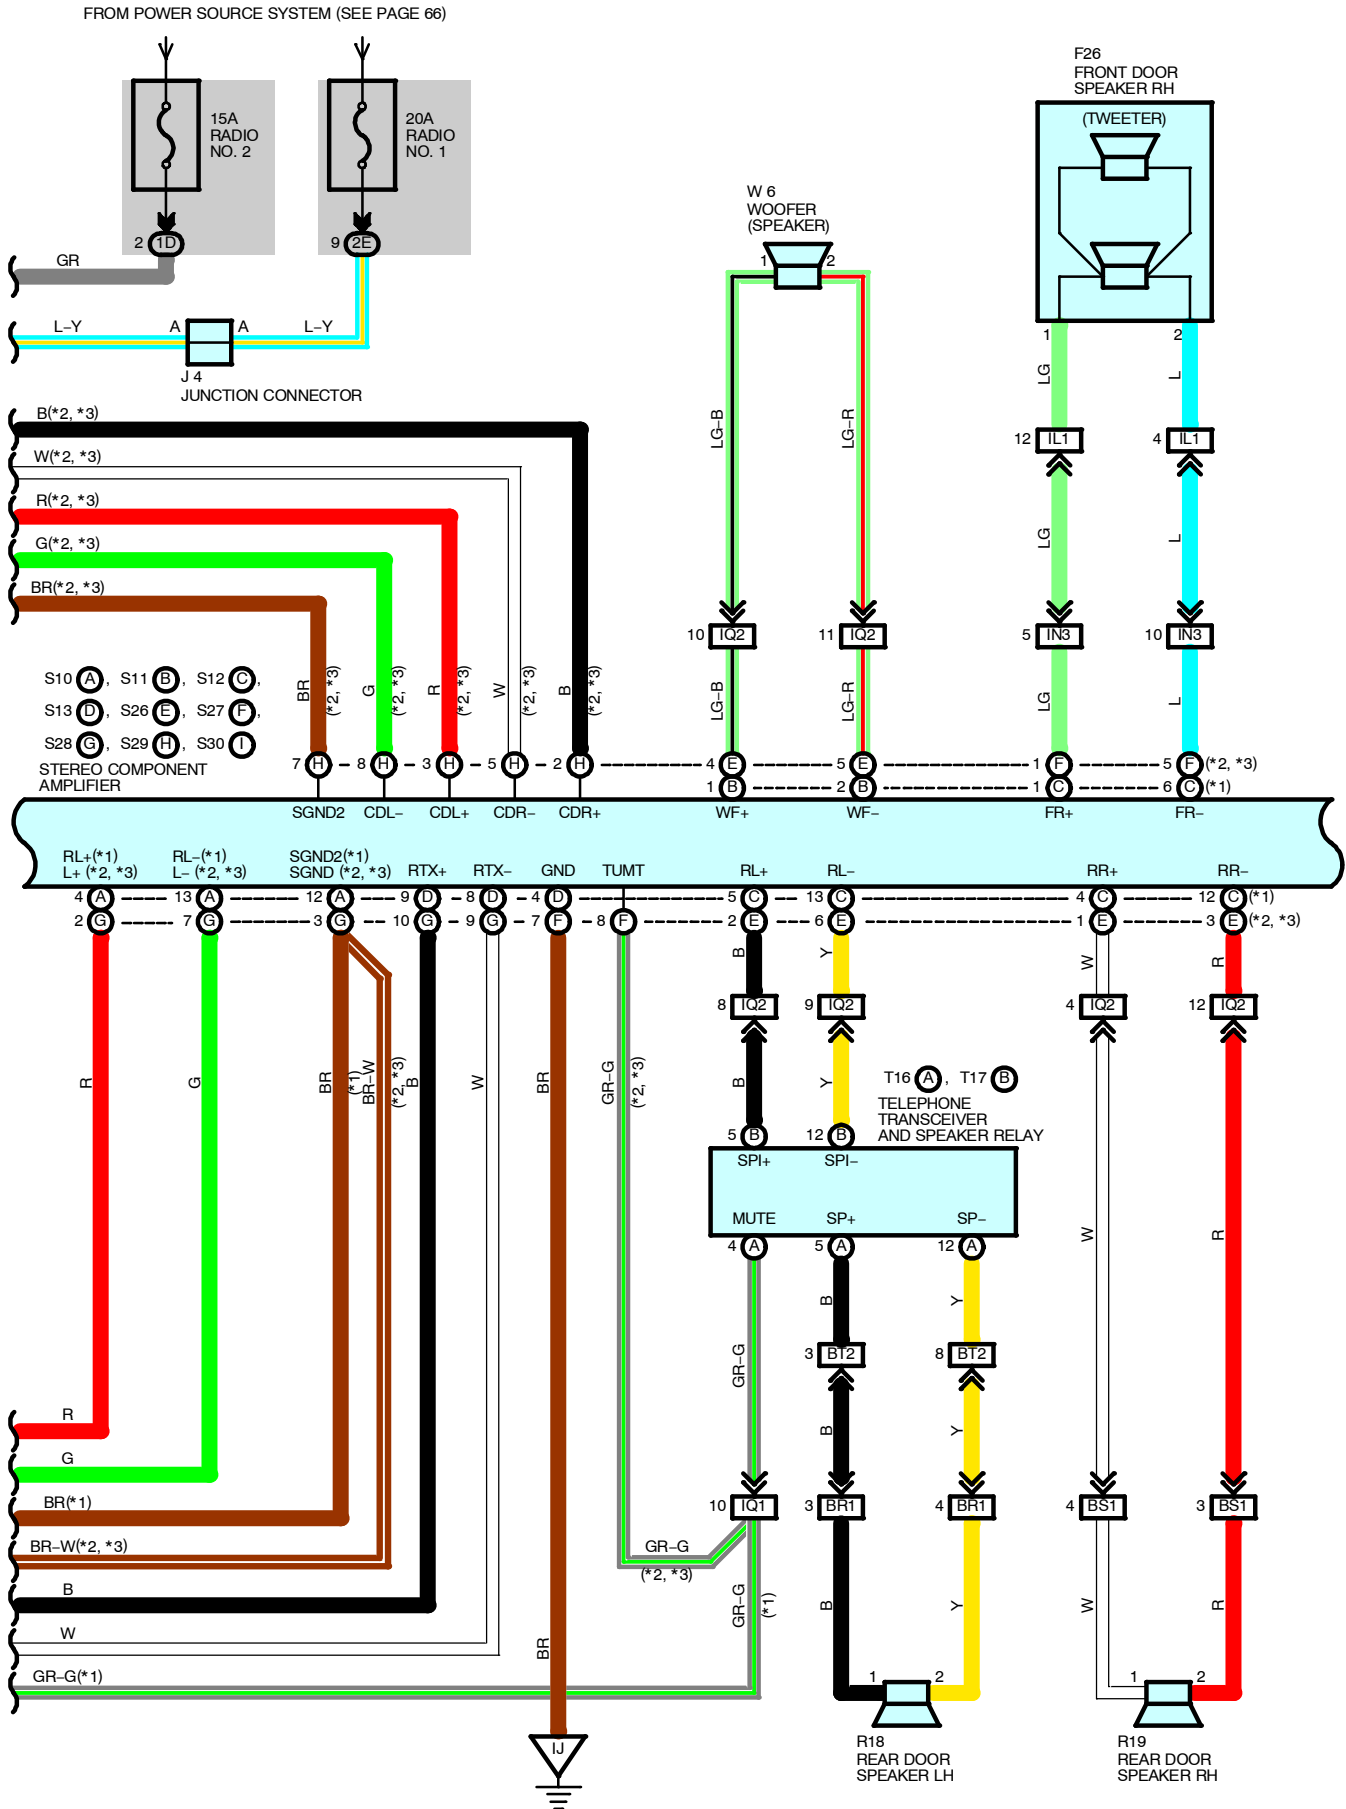

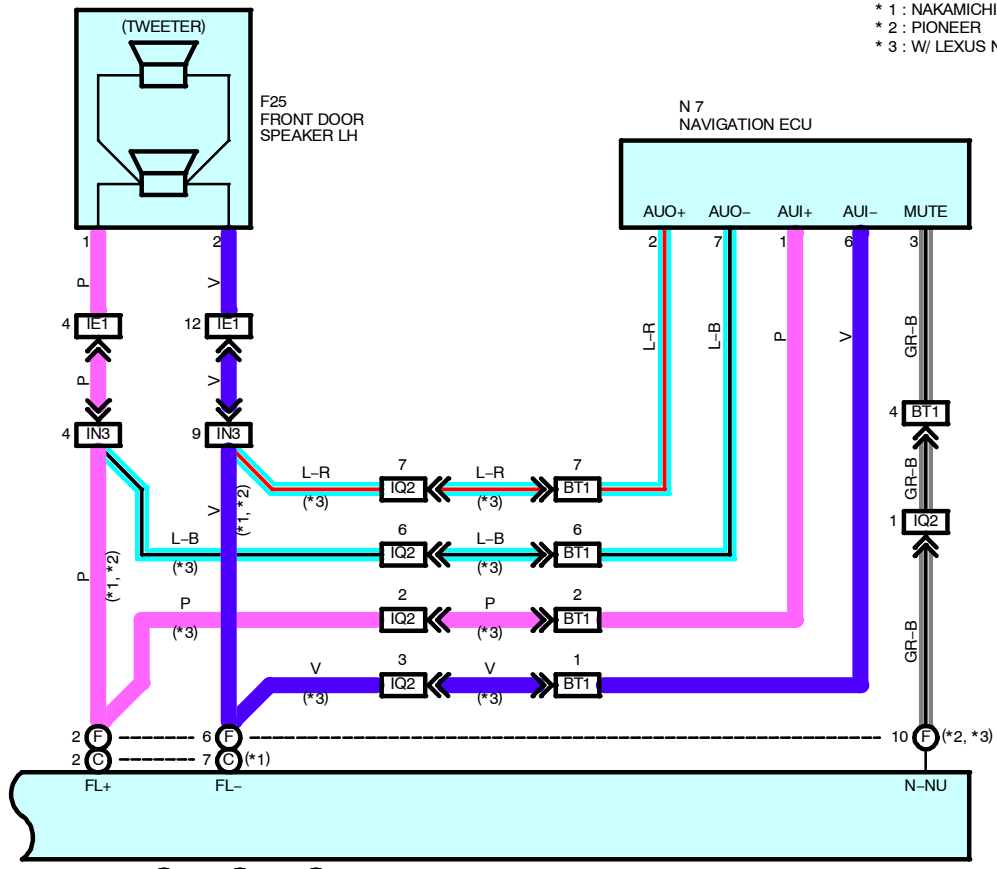

\* 1 : NAKAMICHI  
 \* 2 : PIONEER  
 \* 3 : W/ LEXUS NAVIGATION SYSTEM

- S10 (A), S11 (B), S12 (C),  
 S13 (D), S26 (E), S27 (F),  
 S28 (G), S29 (H), S30 (I)  
 STEREO COMPONENT  
 AMPLIFIER

# RADIO AND PLAYER

## SERVICE HINTS

### R2 (C), R3 (B), (D), R37 (E) RADIO AND PLAYER

(B) 6, (D) 6, (E) 1-GROUND : Approx. 12 volts with ignition SW at **ACC** or **ON** position  
 (B) 1, (D) 1, (E) 4-GROUND : Always approx. 12 volts  
 (B) 14, (C) 1, (E) 2-GROUND : Always continuity

### S13 (D), S27 (F), S28 (G) STEREO COMPONENT AMPLIFIER

(D) 4, (F) 7-GROUND : Always continuity  
 (D) 6, (G) 12-GROUND : Approx. 12 volts with ignition SW at **ACC** or **ON** position  
 (D) 5, (F) 4-GROUND : Always approx. 12 volts

## ○ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
C13	A	34	R2	C	35	S12	C	35
	B	34	R3	B	35	S13	D	35
C14	H	34		D	35	S26	E	35
F25		36	R18		37	S27	F	35
F26		36	R19		37	S28	G	35
J4		33	R37	E	35	S29	H	35
J12		35	R38	F	35	S30	I	35
M7		35	R39	G	35	T16	A	37
N7		36	S10	A	35	T17	B	37
R2	A	35	S11	B	35	W6		37

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	20	Instrument Panel Wire and Instrument Panel J/B (Rear of Parking Brake Release Lever)
2E	22	Cowl Wire and Engine Room J/B (Engine Compartment Left)
2J		
4C	26	Cowl Wire and Driver Side J/B (Left Kick Panel)
4E		

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	42	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IL1	44	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IN3	46	Instrument Panel Wire and Cowl Wire (Behind the Radio and Player)
IQ1	46	Instrument Panel Wire and Floor Wire (Right Side of Shift Lever)
IQ2		
BR1	48	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BS1	48	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BT1	48	Floor Wire and Floor No.2 Wire (Under the Left Rear Cushion)
BT2		

## ▽ : GROUND POINTS


Code	See Page	Ground Points Location
IJ	46	Instrument Panel Brace RH




**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I27	46	Instrument Panel Wire	I31	46	Instrument Panel Wire
I28			I32		
I29			I33		
I30			I35		


(NAKAMICHI) C13 (A)

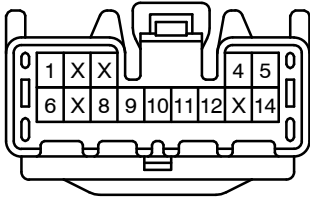

(PIONEER) C13 (B)

 


C14 (H) BLUE

 

F25, F26 BLUE




J4 BLUE

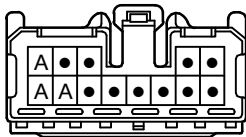


(Hint : See Page 7)

J12 GRAY

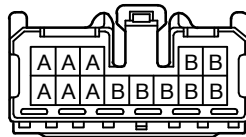


(Hint : See Page 7)


M7 BLUE

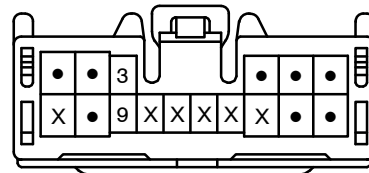


N7

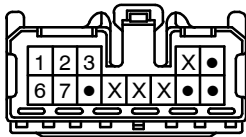


(NAKAMICHI) R2 (A)

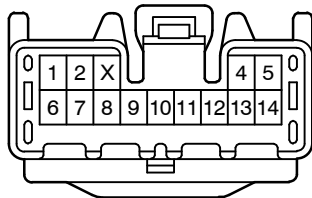


(PIONEER) R2 (C)

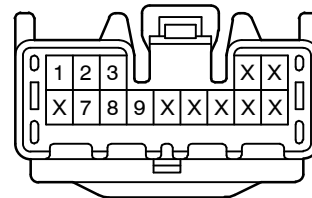

(NAKAMICHI) R3 (B) GRAY

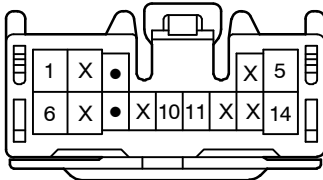


(PIONEER) R3 (D)

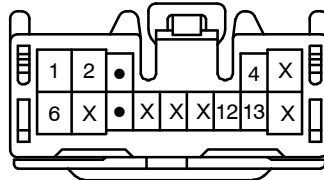


R18, R19 BLUE



 
R37 (E)




R38 (F)

 


R39 (G)

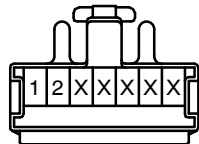

S10 (A)

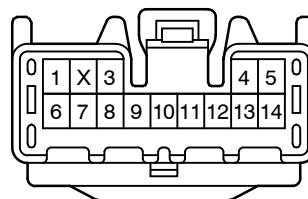


S11 (B) GRAY

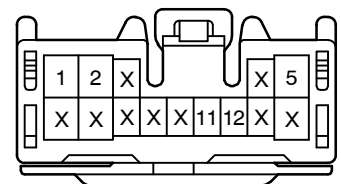


# RADIO AND PLAYER

---


S12 (C) GREEN

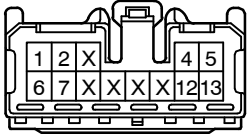


S13 (D) ORANGE

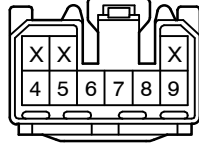


S26 (E)

 


S27 (F)

 


S28 (G) BLACK

 


S29 (H) ORANGE

 


S30 (I)

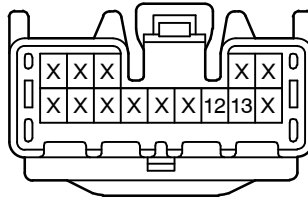

T16 (A)

 

T17 (B)

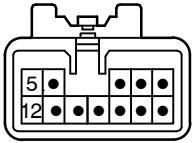

W6 BLUE



