



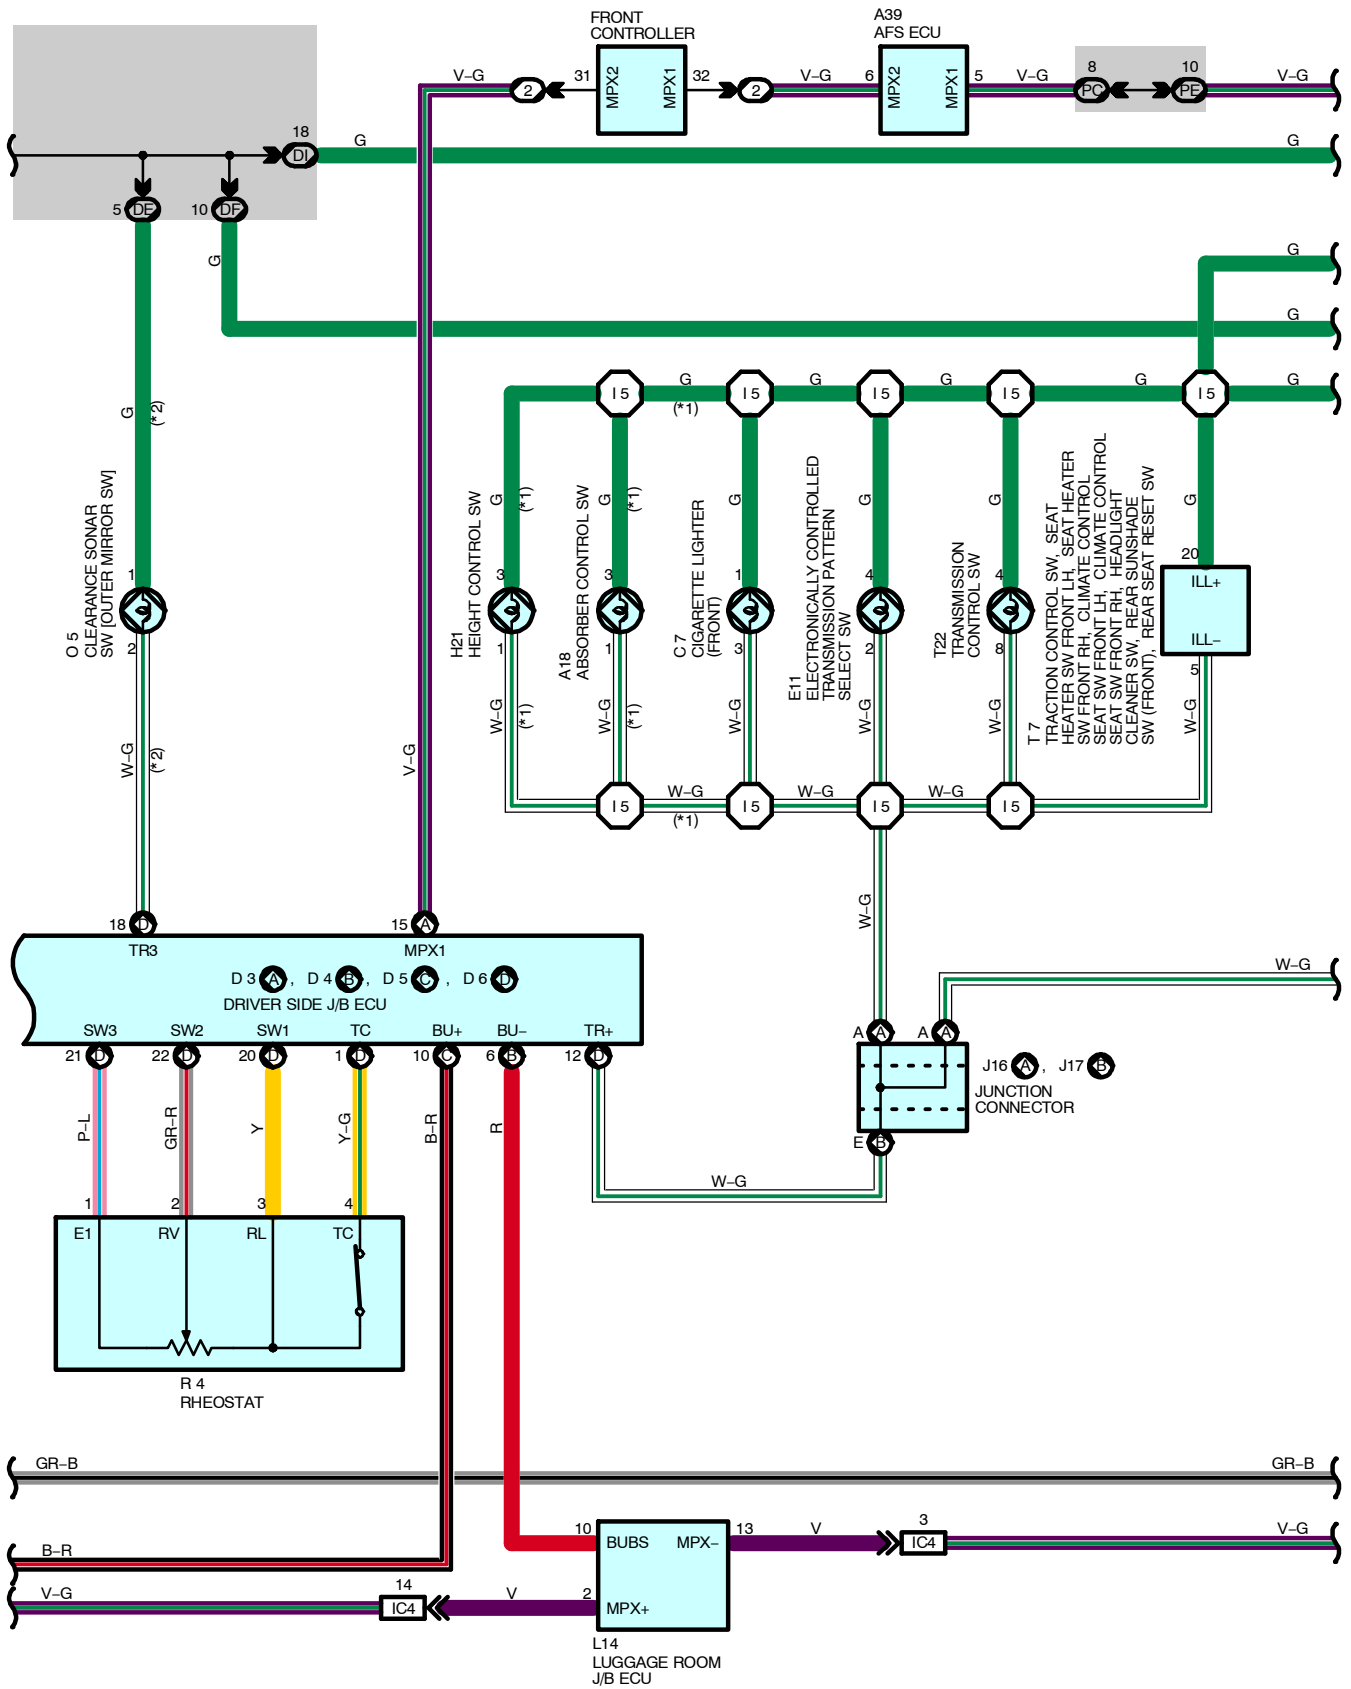


- \* 1 : W/ ELECTRONIC MODULATED AIR SUSPENSION
- \* 2 : W/ LEXUS PARKING ASSIST (CLEARANCE SONAR)




# Illumination

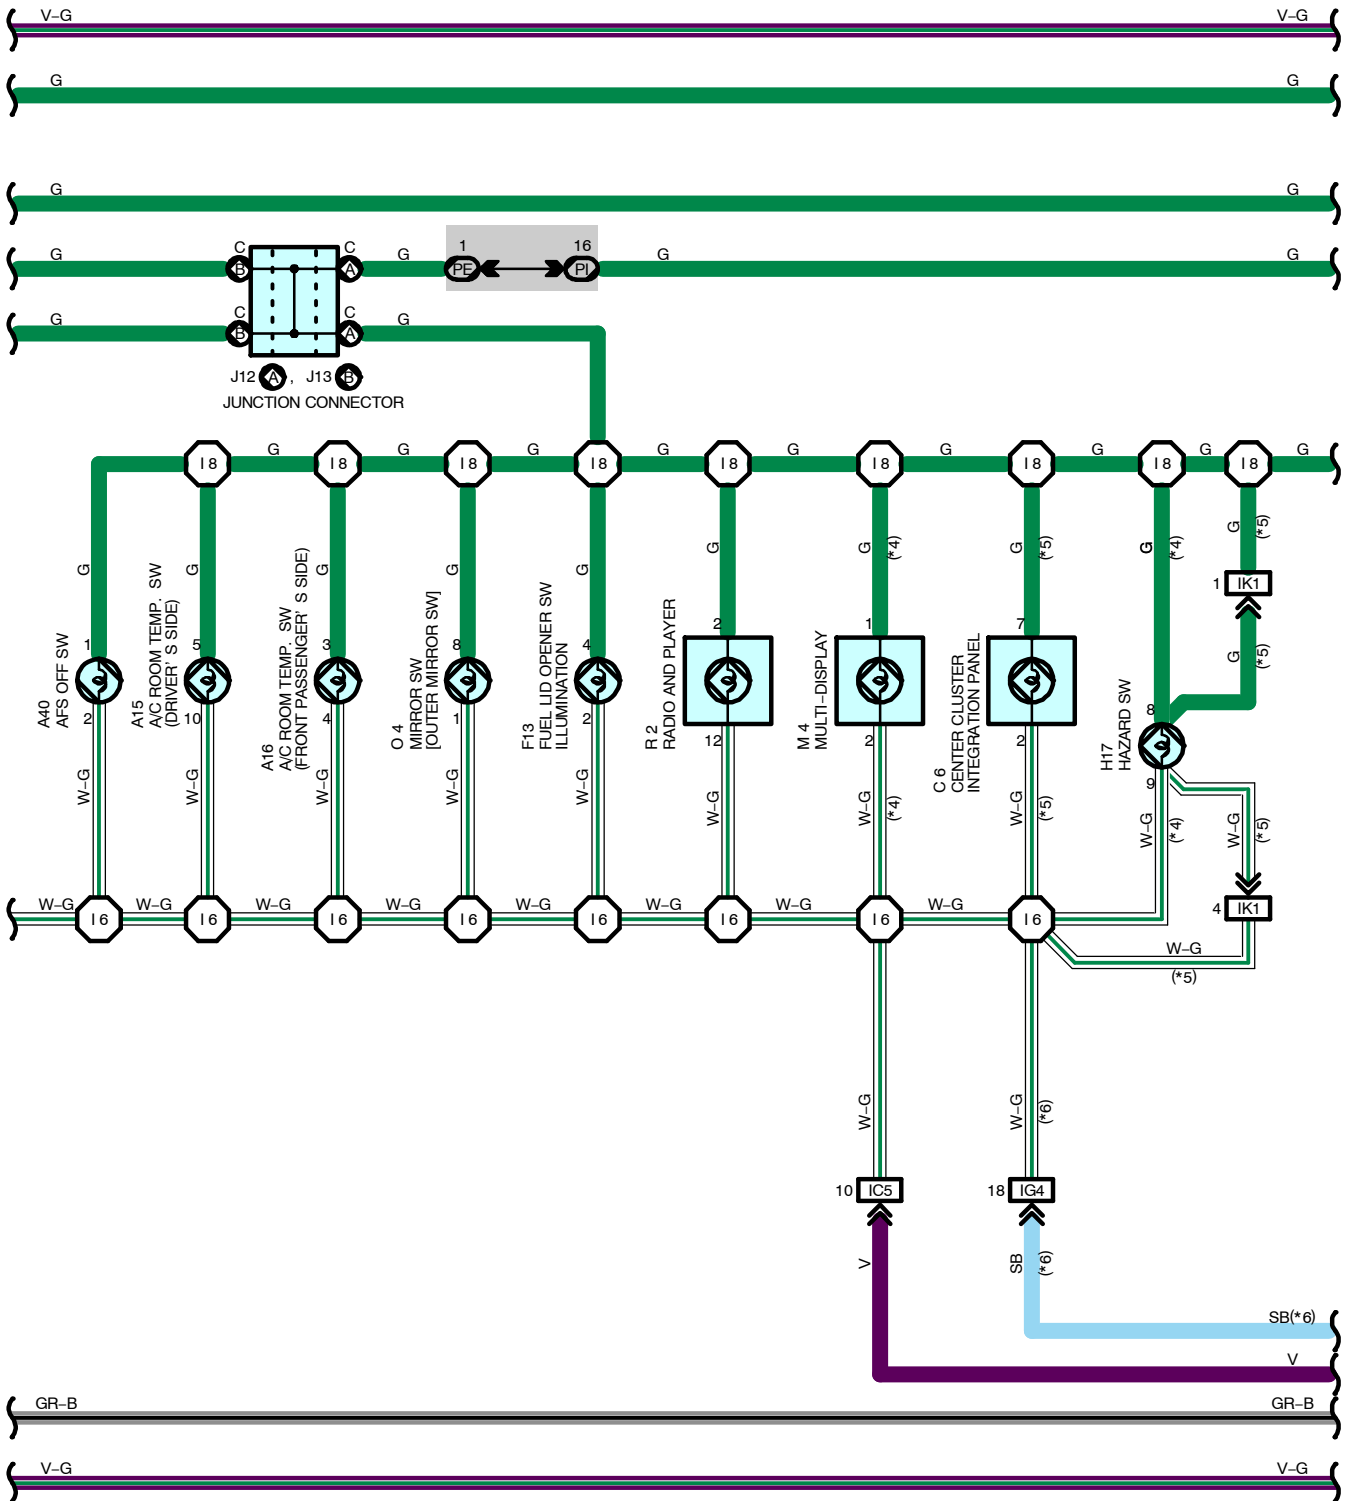


- \* 3 : W/ GARAGE DOOR OPENER
- \* 4 : W/ LEXUS NAVIGATION SYSTEM
- \* 5 : W/O LEXUS NAVIGATION SYSTEM
- \* 6 : W/ REAR POWER SEAT
- \* 7 : W/ REAR SEAT HEATER W/O REAR POWER SEAT

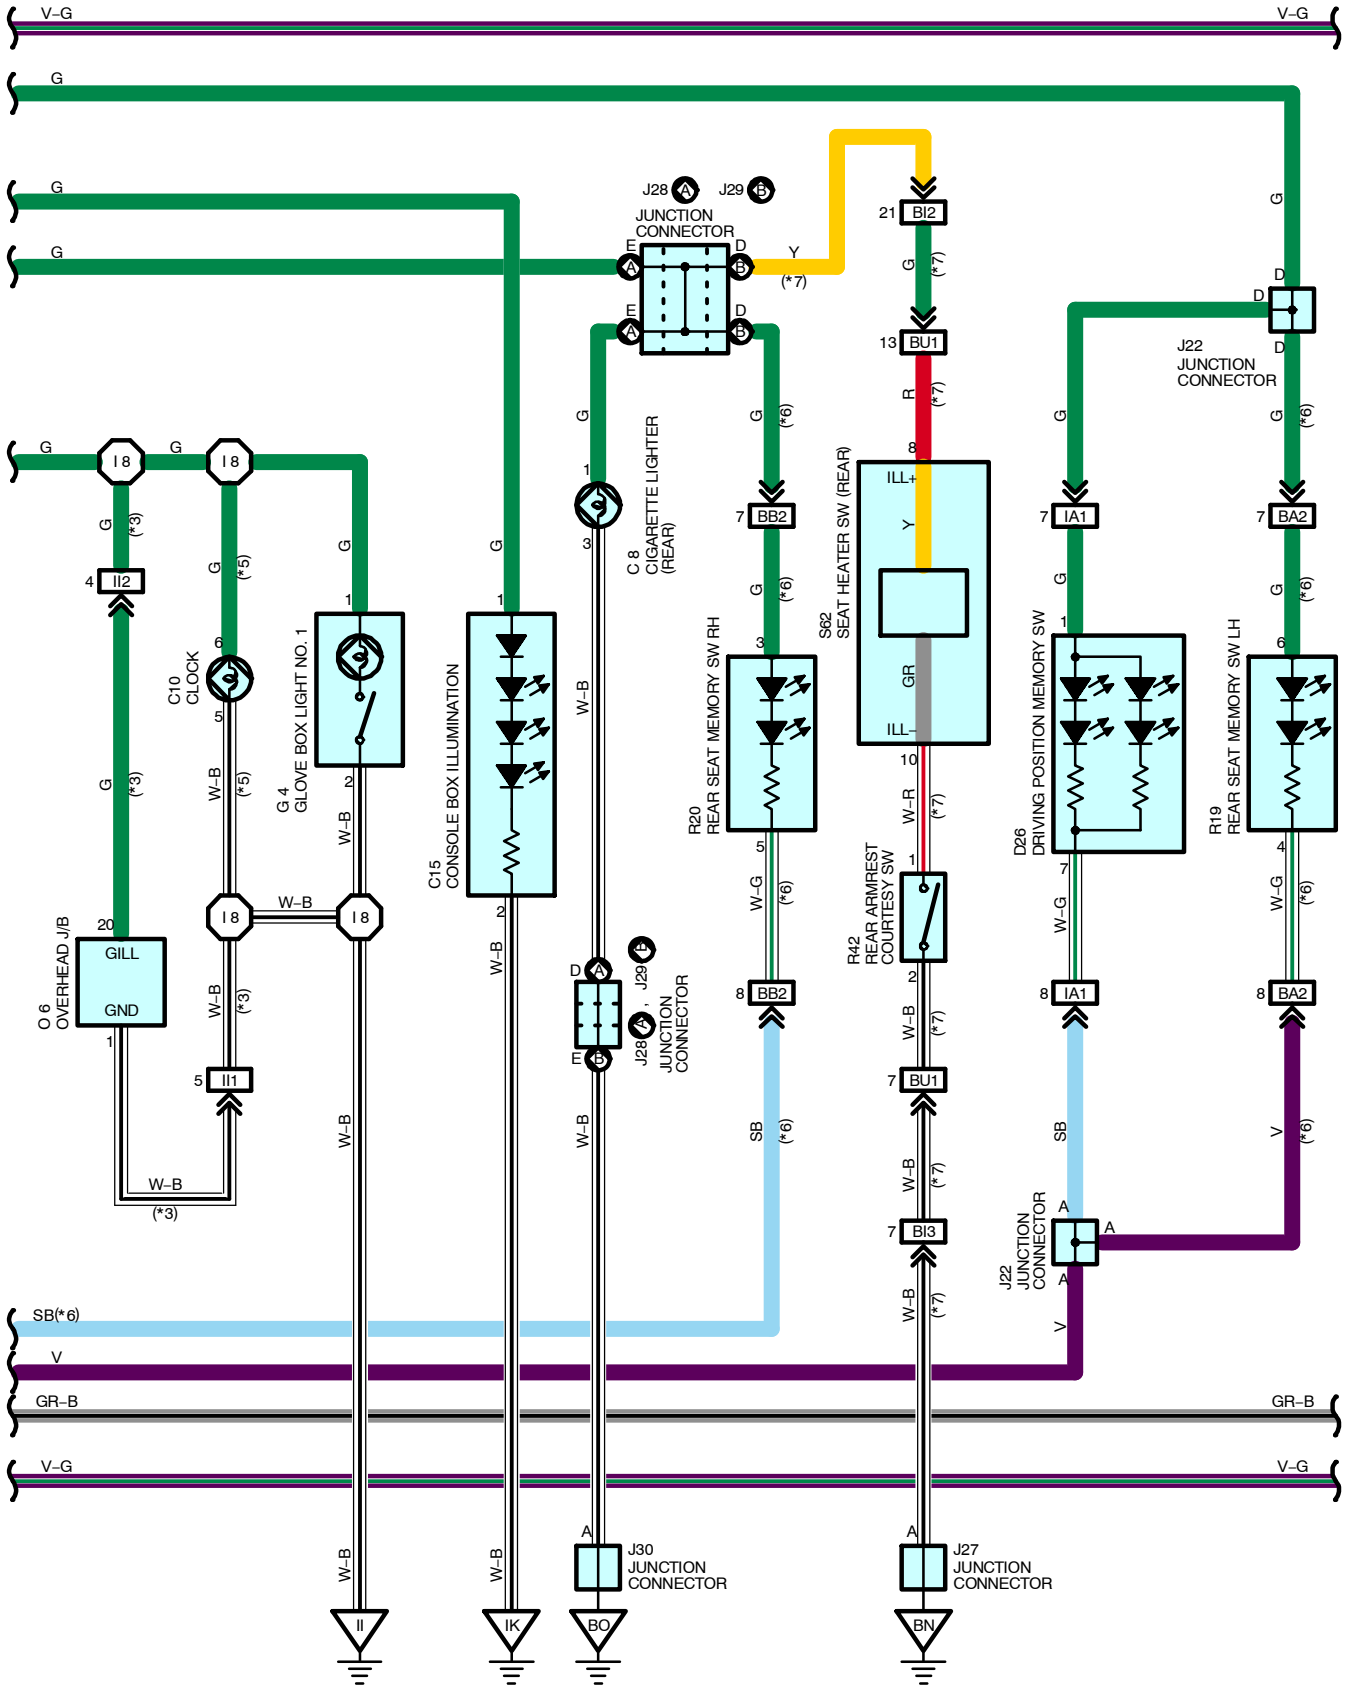

# Illumination

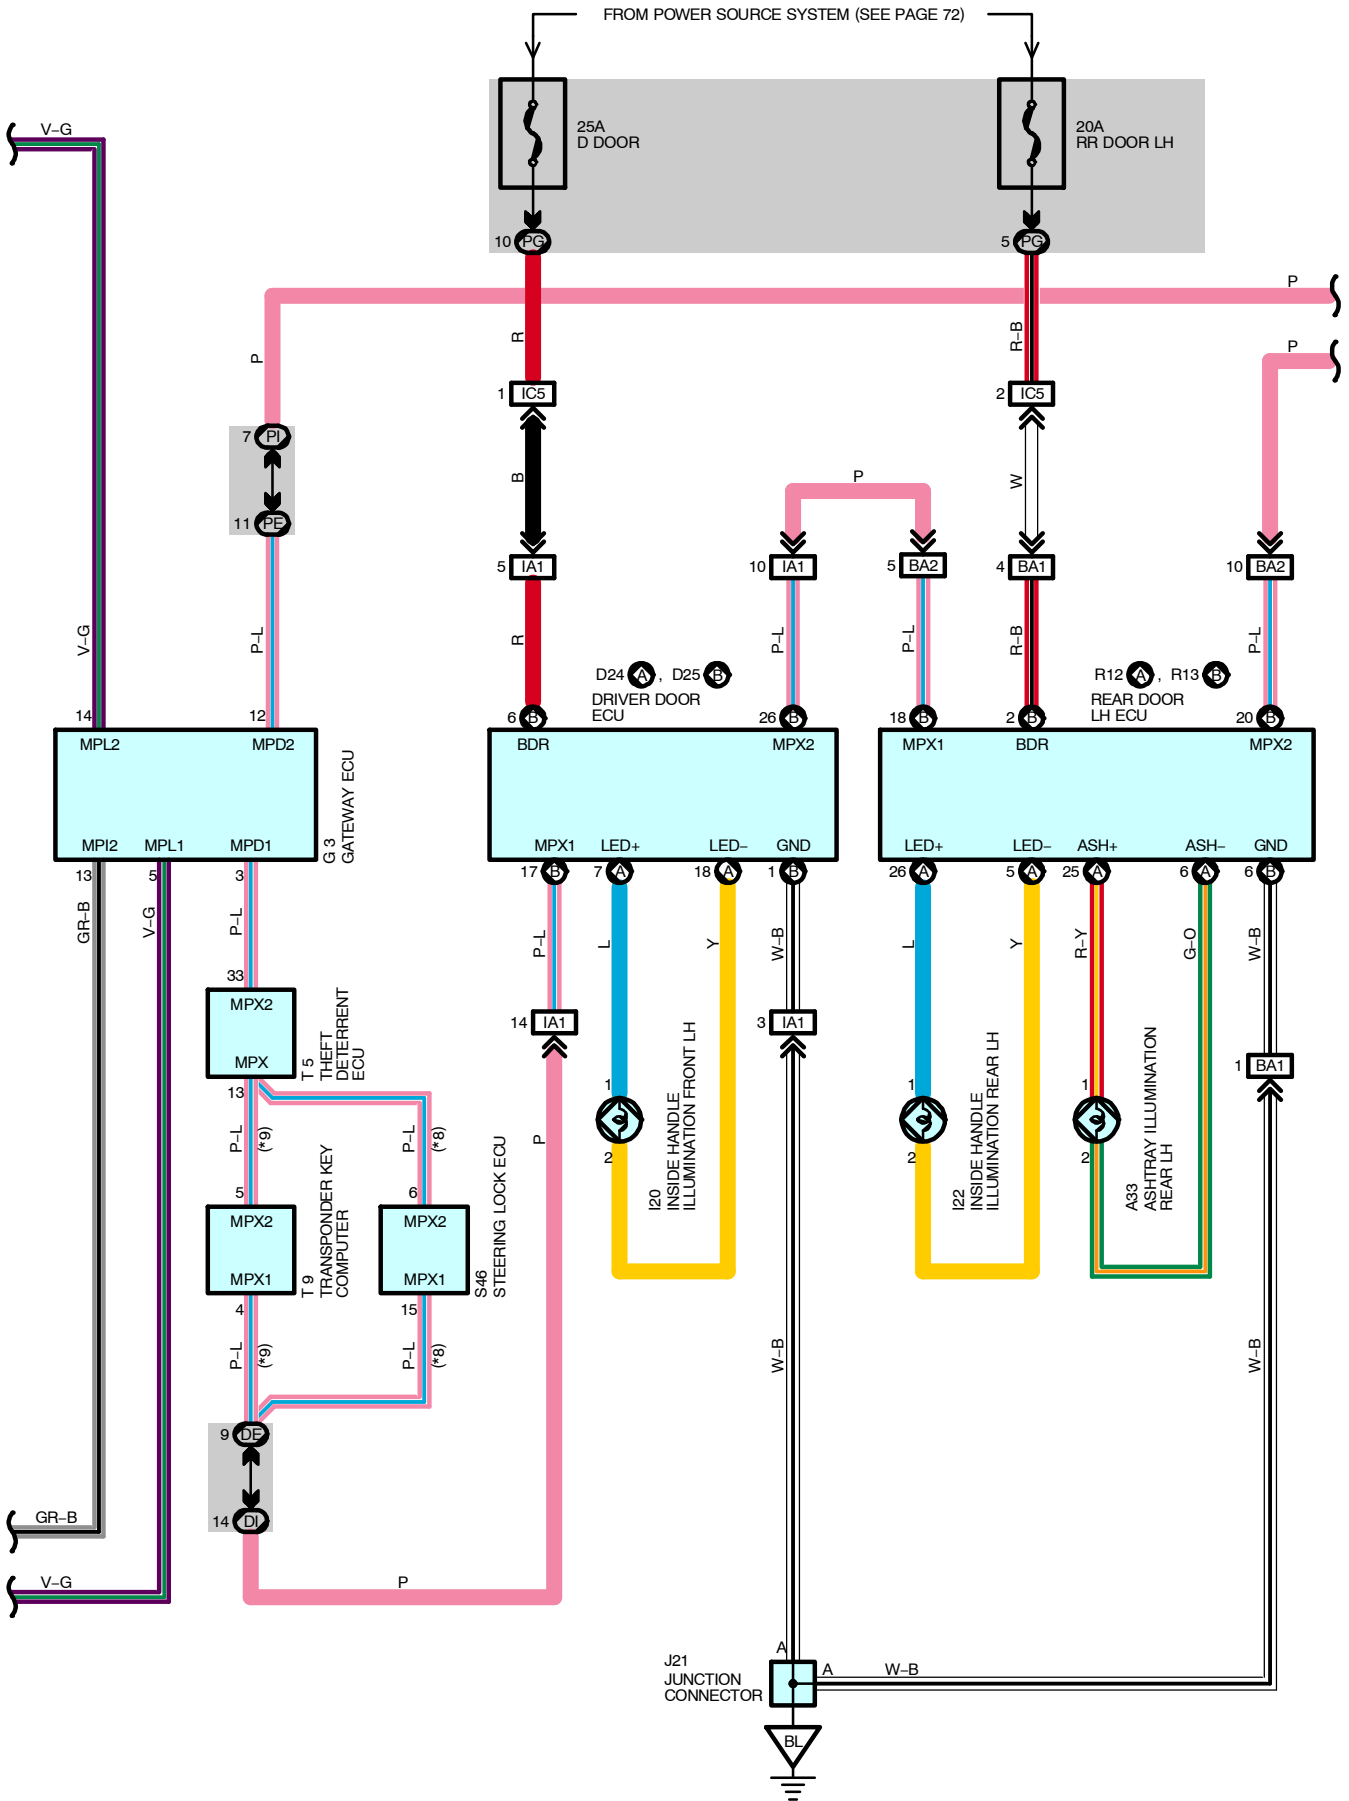

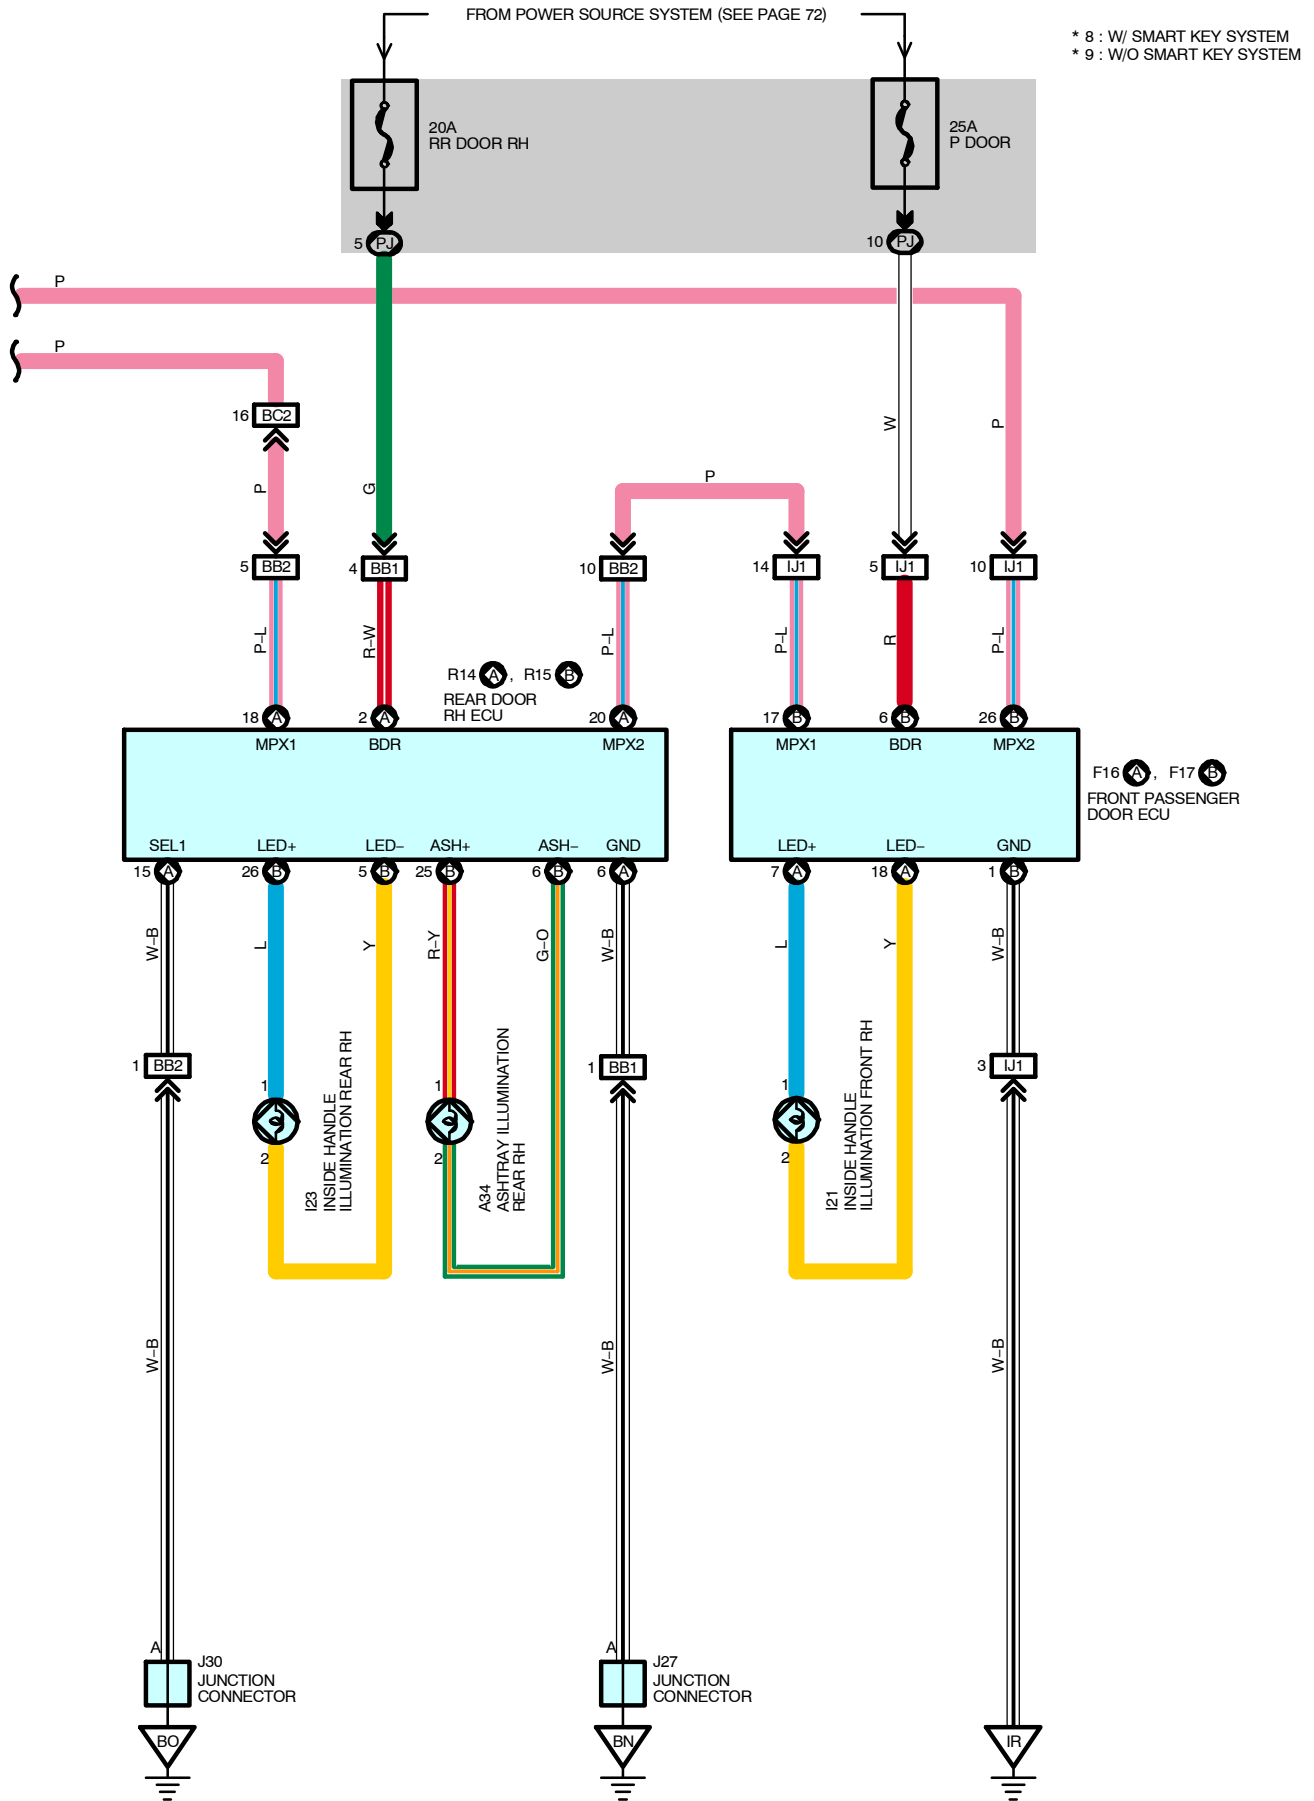

# Illumination

## SERVICE HINTS

### C14 COMBINATION SW

- 1-GROUND : Always approx. 12 volts
- 2-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- 8-GROUND : Always continuity

### DRIVER SIDE J/B ECU

- 9-GROUND : Always approx. 12 volts
- 6-GROUND : Always continuity

### D25 (B) DRIVER DOOR ECU

- (B) 6-GROUND : Always approx. 12 volts
- (B) 1-GROUND : Always continuity

### F17 (B) FRONT PASSENGER DOOR ECU

- (B) 6-GROUND : Always approx. 12 volts
- (B) 1-GROUND : Always continuity

### R13 (B) REAR DOOR LH ECU

- (B) 2-GROUND : Always approx. 12 volts
- (B) 6-GROUND : Always continuity

### R14 (A) REAR DOOR RH ECU

- (A) 2-GROUND : Always approx. 12 volts
- (A) 6-GROUND : Always continuity
- (A)15-GROUND : Always continuity

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A15	46	F13	47	J30	51
A16	46	F16   A	50	L14	51
A18	46	F17   B	50	M4	48
A33	50	G3	47	O3	48
A34	50	G4	47	O4	48
A39	46	H17	47	O5	48
A40	46	H21	47	O6	52
C6	46	I20	51	P8	48
C7	46	I21	51	R2	49
C8	46	I22	51	R4	49
C10	46	I23	51	R12   A	52
C11	46	J10	47	R13   B	52
C12	46	J12   A	47	R14   A	52
C14	46	J13   B	47	R15   B	52
C15	46	J14   A	47	R19	52
D3   A	47	J15   B	47	R20	52
D4   B	47	J16   A	47	R42	55
D5   C	47	J17   B	47	S46	49
D6   D	47	J21	51	S62	55
D24   A	50	J22	51	T5	49
D25   B	50	J27	51	T7	49
D26	50	J28   A	51	T9	49
E11	47	J29   B	51	T22	49

## ○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	25	Engine Room No.2 R/B (Engine Compartment Left)

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	29	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DF		
DG		
DI	31	Floor No.2 Wire and Driver Side J/B (Left Kick Panel)
PC	35	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
PE	36	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PF		
PG		
PI	37	Floor Wire and Passenger Side J/B (Right Kick Panel)
PJ		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	58	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IC4	58	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IC5		
IG4	60	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
II1	60	Instrument Panel Wire and Roof Wire (Cowl Side Panel RH)
II2		
IJ1	60	Front Door RH Wire and Floor Wire (Right Kick Panel)
IK1	60	Instrument Panel Wire and Switch Wire (Center of Instrument Panel)
BA1	62	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BA2		
BB1	62	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BB2		
BC2	62	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)
BI2	68	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)
BI3		
BU1	68	Switch Wire and Rear Seat RH Wire (Back the Rear Seat RH)

 : GROUND POINTS

Code	See Page	Ground Points Location
IG	58	Left Side of Instrument Panel
II	58	Right Side of Shift Lever
IK	58	Cowl Side Panel RH
IR	58	Under the Front Passenger's Seat
BL	62	Rear Floor Partition Panel LH
BN	62	Rear Floor Partition Panel RH
BO	62	Quarter Panel RH

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I5	60	Instrument Panel Wire	I8	60	Instrument Panel Wire
I6					