



SYSTEM DIAGRAM

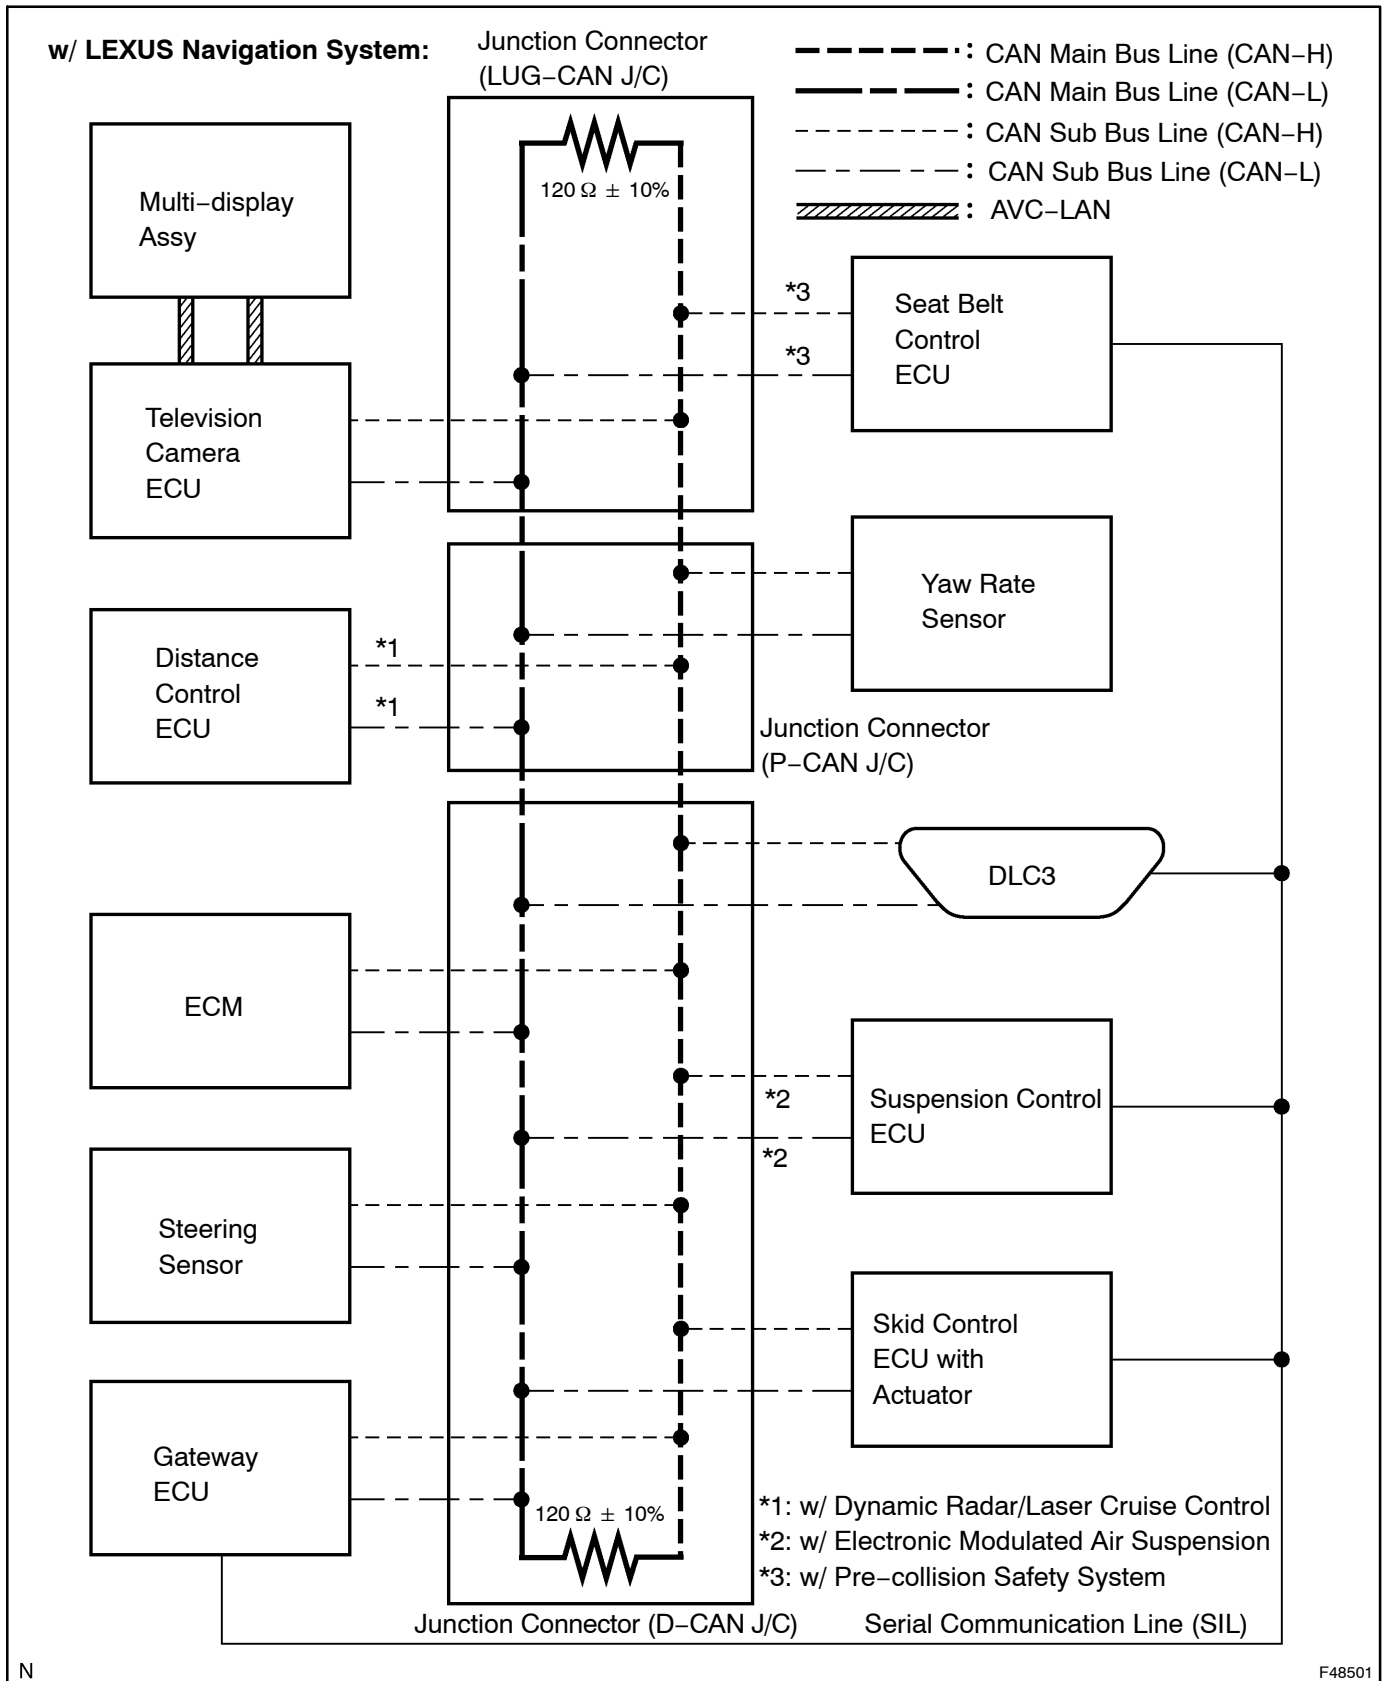

N

F48501

w/o LEXUS Navigation System:

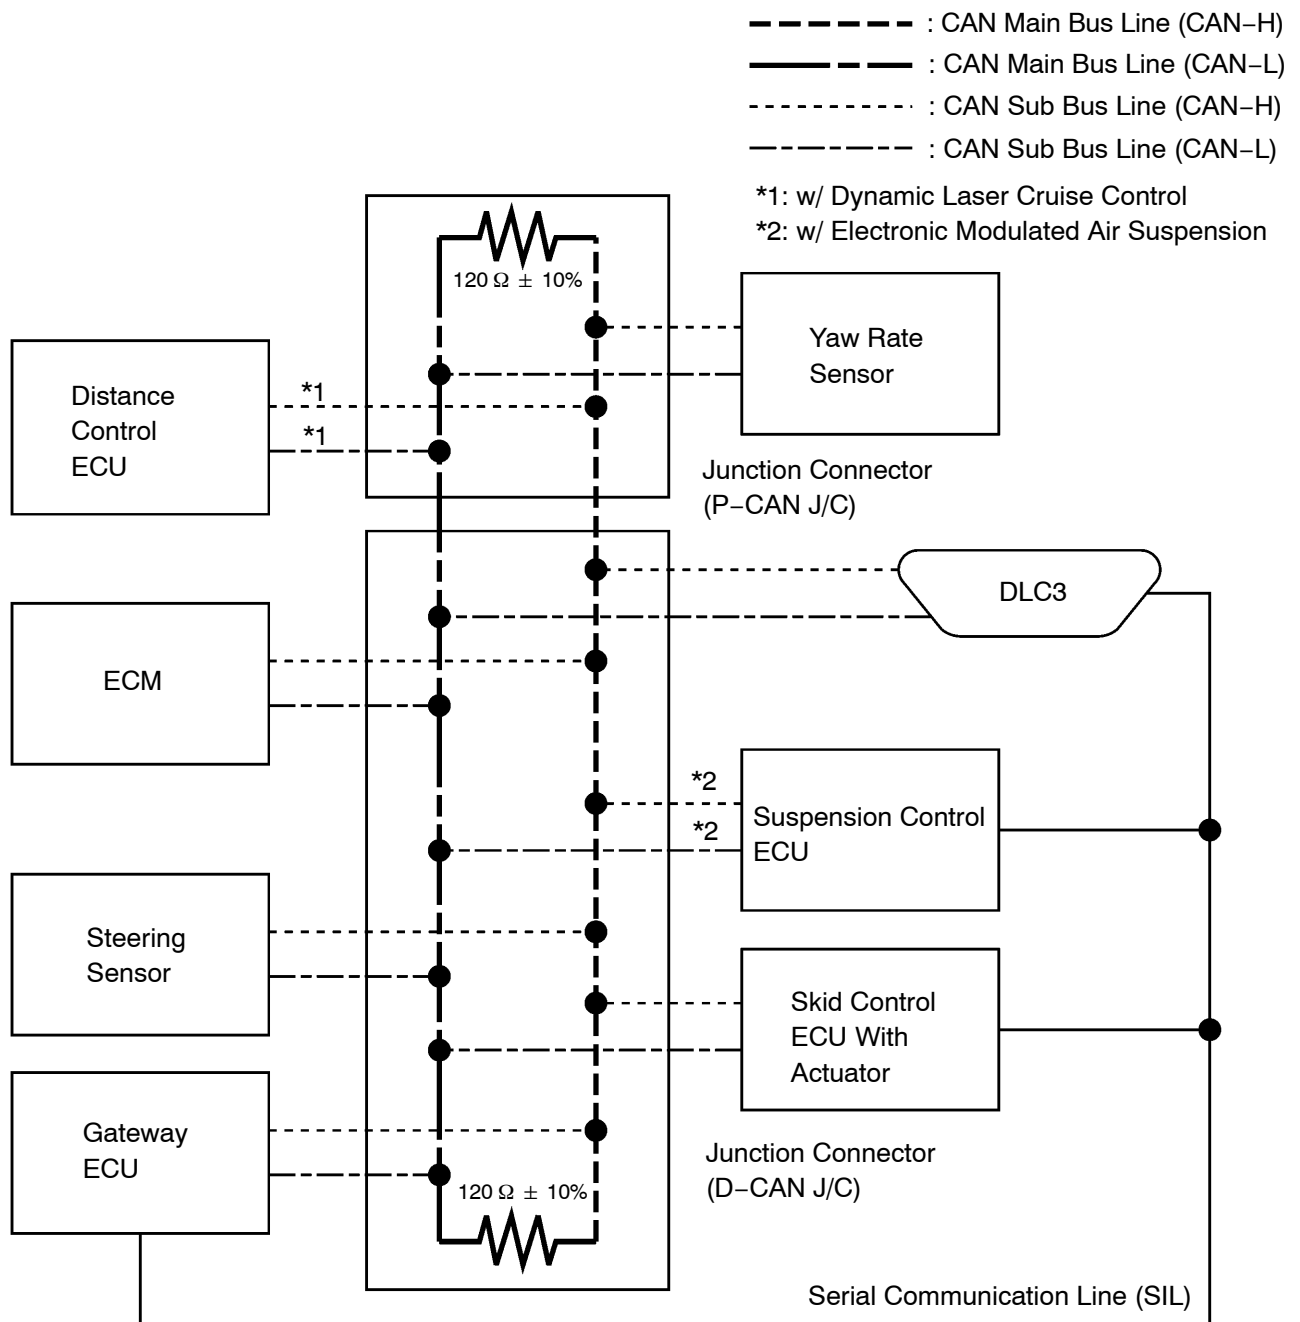

C G29513

G30565

HINT:

- The position of the terminus circuit differs in vehicles with and without the LEXUS navigation system.
- The skid control ECU with actuator detects and stores steering sensor and yaw rate sensor DTCs and performs DTC communication by receiving information from the steering sensor and yaw rate sensor.
- The ECM detects and stores distance control ECU DTCs, and performs DTC communication by receiving information from the distance control ECU.
- The ECM uses the CAN communication system to perform DTC communication instead of the conventional communication line (SIL).