

## Maintenance information



This system informs you when to replace certain parts or components and shows dealer information (if registered) on the screen. (See “Information items” on page 97.) When the navigation system begins operating after either the information item’s pre-set data arrives or the driving distance reaches a pre-determined setting, the “Information” screen will be displayed. This screen will appear every time the system is turned on until you touch the “Do not display this message again” switch.

To prevent this information screen from being displayed again, touch the “Do not display this message again” switch.



1. Push the “OPTION” button to display the “Option” screen and touch the “Information” switch.



2. Touch the “Maintenance” switch to display the “Maintenance” screen.




3. Touch the desired icon and input the conditions.



**Notice of “Date”:** You can input the next maintenance date.

**Notice of “Distance”:** You can input the driving distance until the next maintenance check.



When you touch the  switch on the “Maintenance” screen, the screen changes to the “Personal Event” screen. Touch the keys to input the desired name and then input conditions.

After you input the date and/or distance, touch the **“OK”** switch. The screen then returns to the “Maintenance” screen.

The following switches appear.

**“Delete All”:** To cancel all conditions which have been inputted.

**“Reset All”:** To reset the item which has satisfied a condition.

Touch the **“Off”** switch at the top of the “Maintenance” screen to turn off the information screen.

When your vehicle needs to be serviced, the icon color will change to orange.

### INFORMATION

- *For scheduled maintenance information, please refer to the “Owner’s Manual Supplement/Scheduled Maintenance”.*
- *Depending on driving or road conditions, the actual date and distance may differ from the stored date and distance in the system.*

### Information items



Oil change



Replace oil filter



Rotate tires



Replace tires



Replace battery



Replace brake linings



Replace wiper blades



Replace engine coolant



Replace brake fluid



Replace ATF



Scheduled maintenance



Replace air filter



Personal event

### (a) Register dealer

You can register the dealer name, staff, location and phone number.



1. Touch the “Set Dealer” switch on the “Maintenance” screen.



2. Enter the location of the dealer in the same way as for destination input. (See page 20.)



After you input the dealer, the screen changes and displays the map location of the dealer. If it is OK, touch the **“Enter”** switch.


The screen changes to “Edit Dealer” screen. (See “(b) Edit dealer”.)

## (b) Edit dealer



You can edit the dealer name, staff, location and phone number.

1. Touch the **“Set Dealer”** switch on the **“Maintenance”** screen. The **“Edit Dealer”** screen appears.

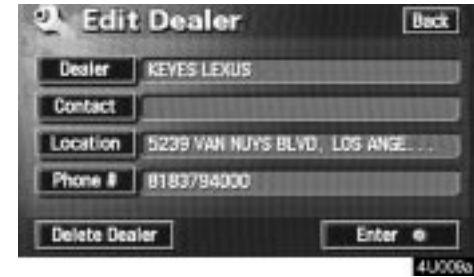

2. To edit, touch the corresponding switch.

- To edit “Dealer” or “Contact”




To input the name, touch the alphabet, numeral and/or umlaut keys. You can input up to 24 letters.

After inputting, touch the “OK” switch at the bottom right of the screen. The previous screen will be displayed.

- To edit “Location”




Set the cursor  to the desired point, and touch the “Enter” switch on the screen.

- To edit “Phone #” (telephone number)




Touch numeral keys.

After inputting, touch the “OK” switch. The previous screen will be displayed.

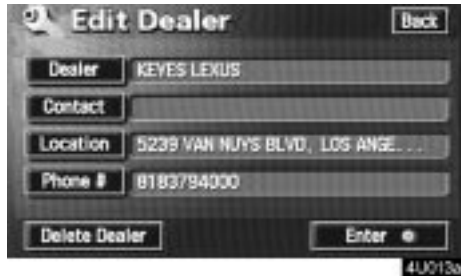**(c) Delete dealer**

1. Touch the “Delete Dealer” switch on the screen.
2. A message will appear on the screen. To delete, touch the “Yes” switch. To cancel the deletion, touch the “No” or “Back” switch.

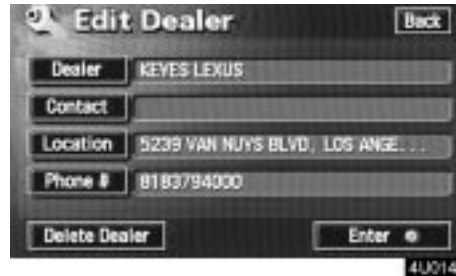**(d) Set as destination**

Touch the “Enter” button on the “Set Dealer” screen. The screen changes and displays the map location of the registered dealer and the “Route Preference”. (See “ — Entering Destination” on page 38.)

**Calendar with memo**

This system informs you of a memo entry. At the specified date, the memo information will be displayed when the navigation system is in operation. The memo information screen will appear every time the system is turned on. To disable this screen, touch the “Do not display this message again” switch.



1. Push the "OPTION" button to display the "Option" screen and touch the "Information" switch.



2. Touch the "Calendar" switch to display the "Calendar" screen.



The current date is circled in yellow. If the current date is not displayed on the screen, touch the "Today" switch to display the current month calendar.

(a) Inputting a memo



1. Touch the day you want to add a memo.



2. To display the "Memo" screen, touch the "Add Memo" switch.

- Memo



Touch the “Memo” switch to enter text.



Enter text using the keys. You can enter text up to 24 letters.

After entering the text, touch the “OK” switch at the bottom right of the screen.

- Location




Touch the “Location” switch to set location.

A screen similar to the destination input screen appears. Input the same way as inputting a destination. (See page 20.)

You can add the memos up to 100 until December 31, 2022.



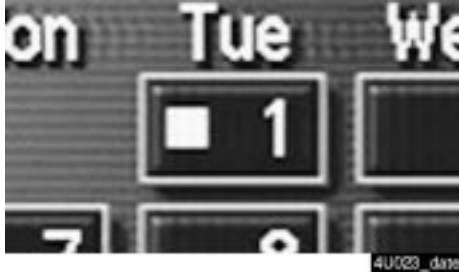

The date inputted is marked as shown above.

You can choose the desired mark and/or date color.

- Mark color



Touch the “Mark” switch.



Touch your desired color for the mark.

- Date color



Touch the “Date” switch.



Touch your desired color for the date.

You can set a color of the mark and/or date for the date you added the memo and/or location.

To default the date color, touch the “Delete” switch on the screen. After you choose the date and/or mark color, touch the “OK” switch to display the previous screen.

### (b) Adding a memo



To add a memo, touch the corresponding date.

The “Memo” screen appears on the display. Touch the “Add Memo” switch. (See page 102 for inputting a memo.)

You can add up to 100 memos.

### (c) Deleting a memo



Touch the corresponding date. Touch the corresponding memo switch, and then touch the “Delete” switch on the screen. A message appears on the display. To delete, touch the “Yes” switch. To cancel the deletion, touch the “No” switch.

(d) Editing a memo



To edit a memo, touch the corresponding date, and then touch the memo you wish to edit.



Touch the “Memo” or “Location” switch.

(e) Memo list



1. To list the memos you added, touch the “List” switch.



2. Touch the desired search condition to list the memos. The “Memo list” is displayed on the screen.



To display the memos listed in a desired period, touch the “Period” switch.

Touch the number keys.

After setting the period, touch the “OK” switch. The “Memo list” screen will be displayed.

You can set a period from January 1, 2003, through December 31, 2022, for searching.



To delete and/or edit the memo, touch the desired memo switch.

To delete all memos, touch the “Delete All” switch. A message appears on the display. To delete, touch the “Yes” switch. To cancel the deletion, touch the “No” switch.



**To edit:** Touch the corresponding “Memo” or “Location” switch. (See page 106 for details.)

**To delete:** Touch the “Delete” switch. (See page 105 for details.)

## LEXUS park assist system



### ► Sensors

**The Lexus park assist system will help you to park easily by detecting any obstacle around your vehicle with ultrasonic sensors and informing you of the approximate distance from the vehicle to the obstacle with the indicators on the display and with beeping sounds.\***

This system will operate at a vehicle speed of less than about 10 km/h (6 mph) with the selector lever in a position other than “P”.

*NOTE: \*The display of the Lexus park assist system screen can be activated or deactivated. The volume of the beeps can be changed. See page 111 for details.*



**You can use this system in either of the following ways.**

- Push the main switch of the Lexus park assist system with the ignition on. A beep sounds for one second. After the system self-check is performed, the Lexus park assist system screen appears for 2 seconds.
- Push the main switch of the Lexus park assist system and turn the ignition on. The Lexus park assist system screen appears for 2 seconds and a system self-check is performed. At this time, a beep does not sound.