

# FRONT SUSPENSION LOWER ARM ASSY LH


## REPLACEMENT

260H2-01

### HINT:


- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. **REMOVE FRONT WHEELS**
2. **REMOVE LOWER BALL JOINT ASSY FRONT LH (SEE PAGE 26-29)**

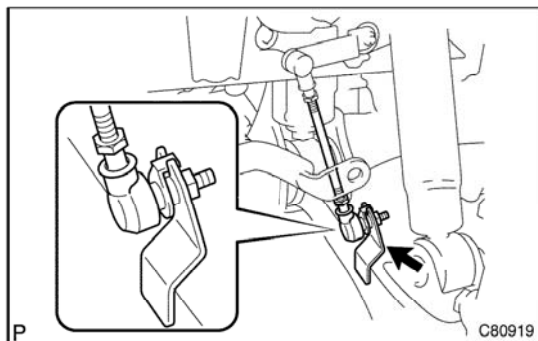

### 3. SEPARATE HEIGHT CONTROL SENSOR LINK SUB-ASSY FRONT

- (a) Remove the nut and separate the height control sensor link sub-assy front.

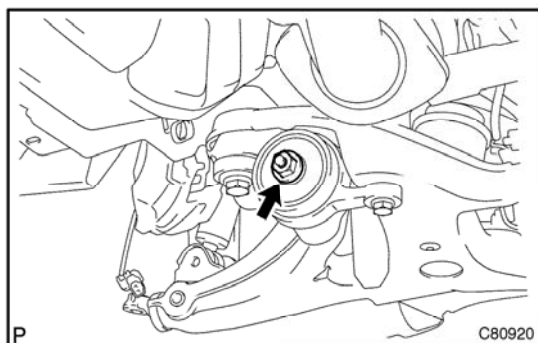


### 4. REMOVE FRONT SUSPENSION LOWER ARM ASSY LH


- (a) Loosen the nut.

#### NOTICE:


**Do not remove the nut.**

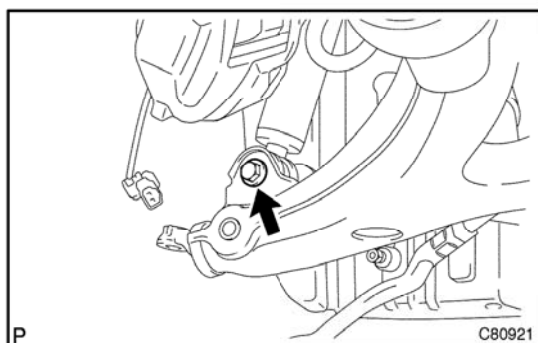


- (b) Remove the shock absorber assy lower side bolt and nut.

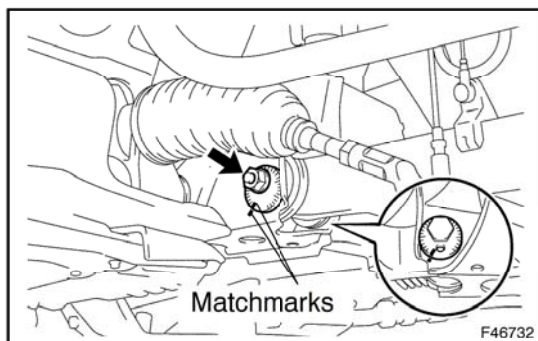

- (c) Place matchmarks on the camber adjust cam and suspension member.
- (d) Remove the nut, camber adjust cam and camber adjust cam bolt.

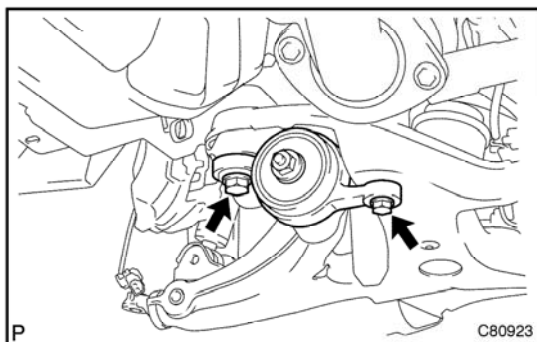


- (e) Remove the 2 bolts and front suspension lower arm assy LH.

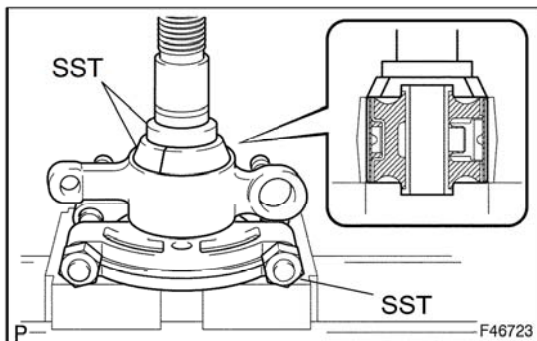

### 5. REMOVE FRONT LOWER ARM BRACKET

- (a) Remove the nut, washer, lower arm bracket and lower arm bushing stopper.  
 (b) Using SST and a press, remove the bushing from the lower arm bracket.


SST 09613-26010, 09950-00020,  
 09950-60010 (09951-00650)

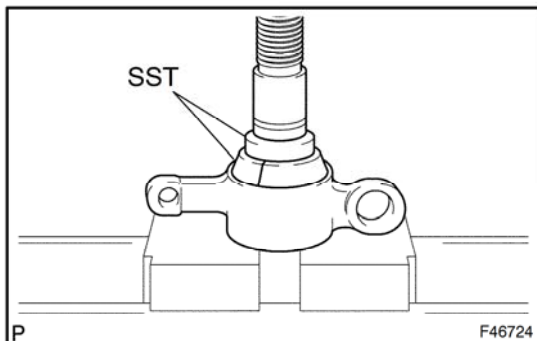


### 6. INSTALL FRONT LOWER ARM BRACKET

- (a) Using SST and a press, install the bushing to the lower arm bracket sub-assy.

SST 09613-26010, 09950-60010 (09951-00650)

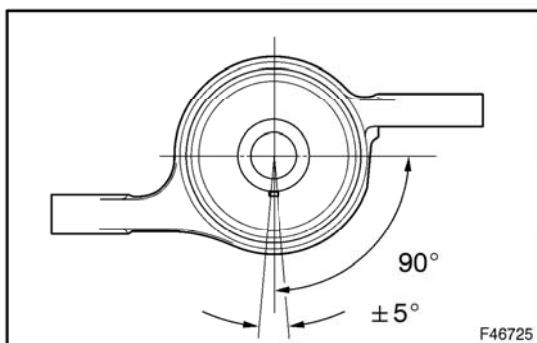


- (b) Temporarily install the front lower arm bushing stopper, lower arm bracket and washer to the lower arm bracket sub-assy with the nut.

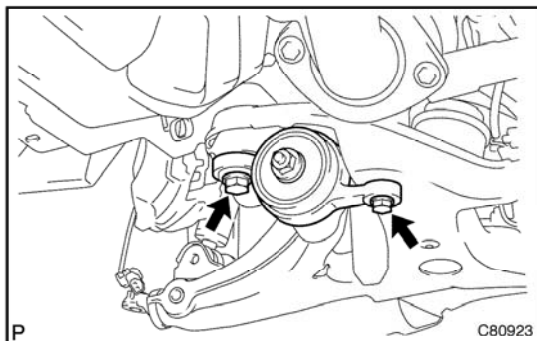


### 7. TEMPORARILY TIGHTEN FRONT SUSPENSION LOWER ARM ASSY LH


- (a) Install the front suspension lower arm assy LH.  
 (b) Temporarily install the 2 bolts.

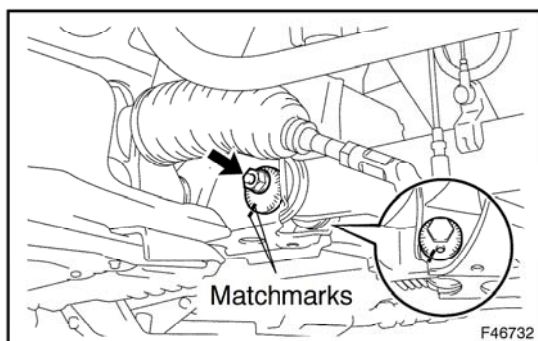


- (c) Align the matchmarks on the camber adjust cam and suspension member.
- (d) Temporarily install camber adjust cam bolt with the nut.

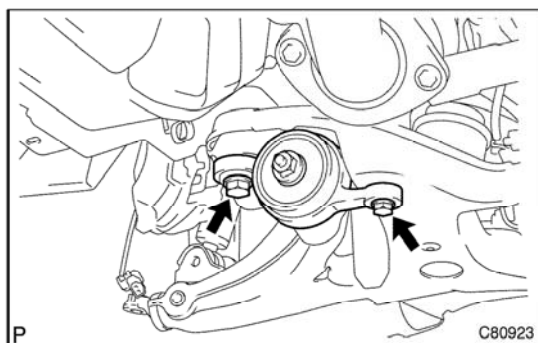

- (e) Fully tighten the 2 bolts.  
**Torque:**  
**Vehicle inside: 60 N·m (612 kgf·cm, 44 ft·lbf)**  
**Vehicle outside: 137 N·m (1,395 kgf·cm, 101 ft·lbf)**

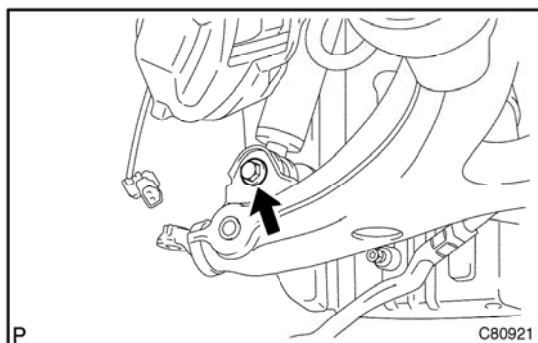


- (f) Install the shock absorber assy.
- (g) Temporarily install the bolt and nut.

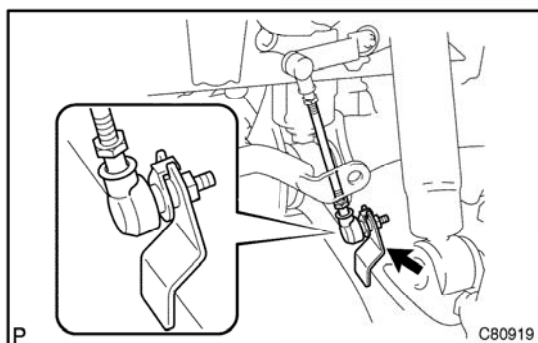

- 8. INSTALL HEIGHT CONTROL SENSOR LINK SUB-ASSY FRONT (AIR SUSPENSION)**
- (a) Install the height control sensor link sub-assy front with the nut.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)**


**9. INSTALL LOWER BALL JOINT ASSY FRONT LH (SEE PAGE 26-29)**

**10. STABILIZE SUSPENSION (SEE PAGE 26-12 OR 26-18)**

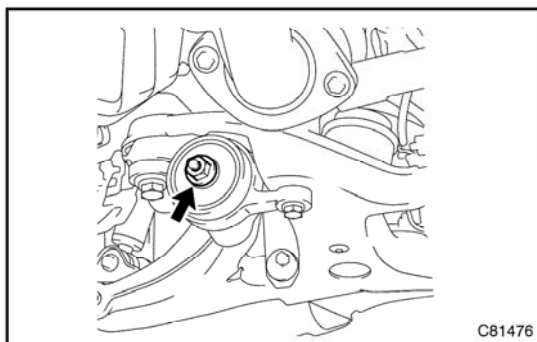


**11. FULLY TIGHTEN FRONT SUSPENSION LOWER ARM ASSY LH**

- (a) Fully tighten the nut.  
**Torque: 137 N·m (1,395 kgf·cm, 101 ft·lbf)**

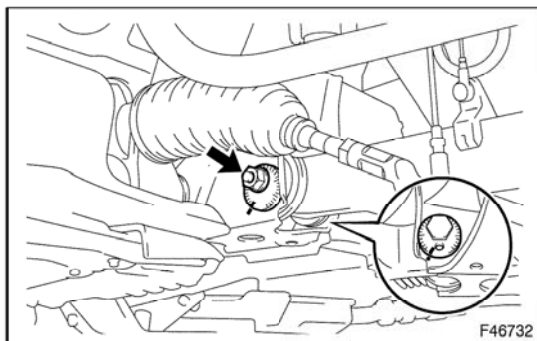

- (b) Fully tighten the nut.  
**Torque: 172 N·m (1,755 kgf·cm, 127 ft·lbf)**

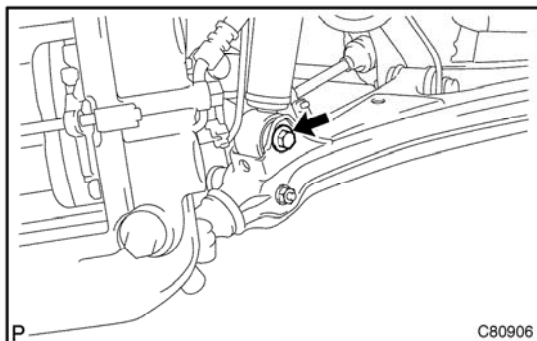

- (c) Fully tighten the bolt.  
**Torque: 157 N·m (1,600 kgf·cm, 116 ft·lbf)**

**12. INSTALL FRONT WHEELS**

**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)**

**13. ADJUST FRONT WHEEL ALIGNMENT (SEE PAGE 26-8)**

**14. ADJUST VEHICLE HEIGHT (AIR SUSPENSION) (SEE PAGE 25-4)**

**15. CHECK ABS SPEED SENSOR SIGNAL (SEE PAGE 05-477)**