


## Position of Parts in Body

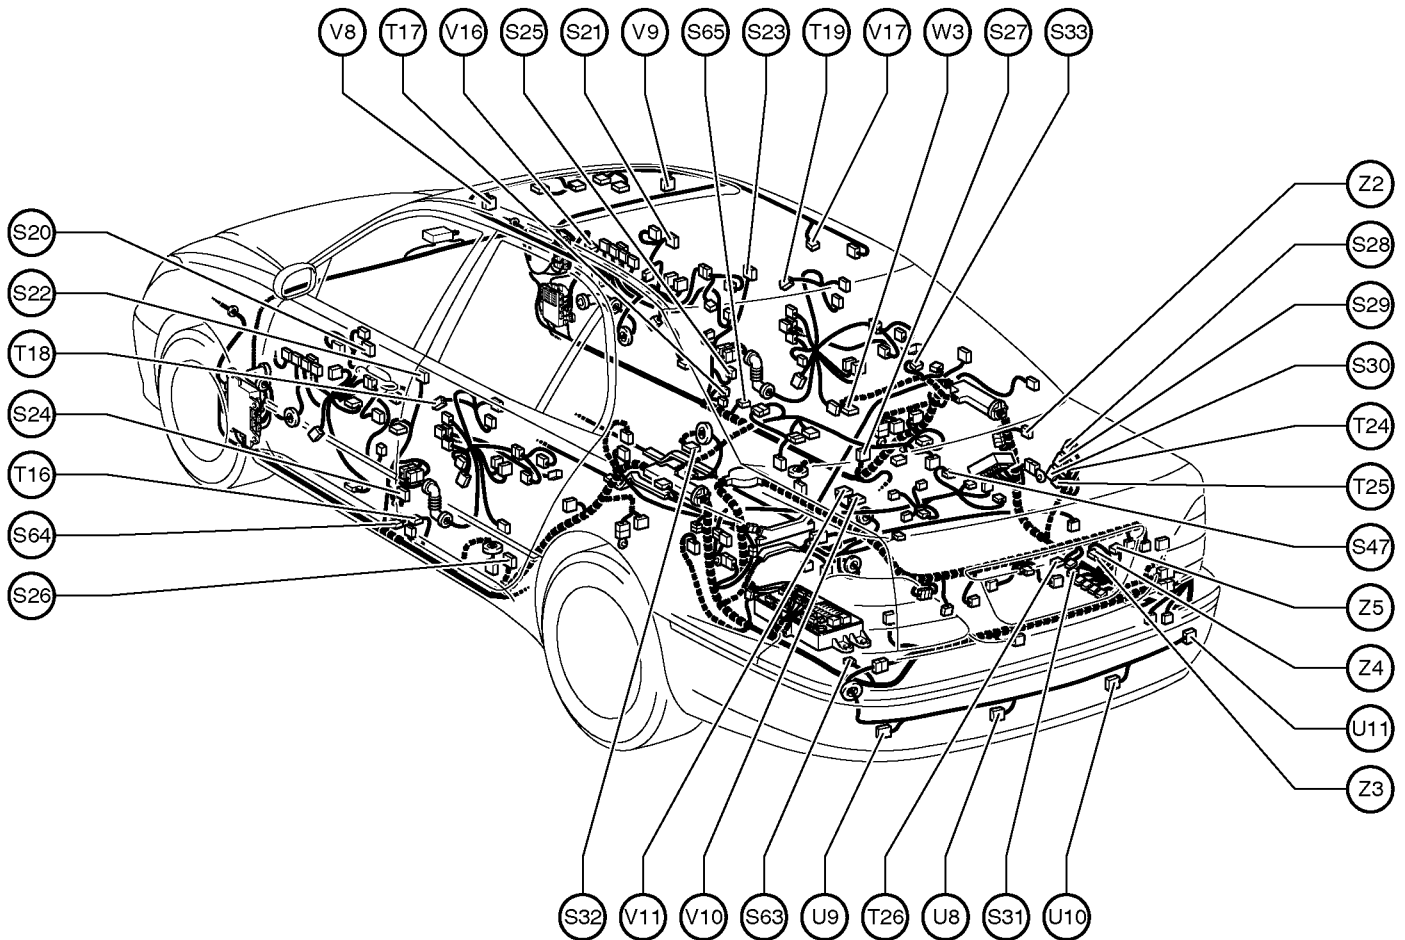

S20 Shoulder Belt Adjust SW Front LH  
 S21 Shoulder Belt Adjust SW Front RH  
 S22 Shoulder Belt Anchor Motor and Position Sensor LH  
 S23 Shoulder Belt Anchor Motor RH  
 S24 Side Airbag Sensor Front LH  
 S25 Side Airbag Sensor Front RH  
 S26 Side Airbag Sensor Rear LH  
 S27 Side Airbag Sensor Rear RH  
 S28 Stereo Component Amplifier  
 S29 Stereo Component Amplifier  
 S30 Stereo Component Amplifier  
 S31 Stereo Component Tuner  
 S32 Suspension Control Actuator Rear LH  
 S33 Suspension Control Actuator Rear RH  
 S47 Smoke Sensor  
 S63 Seat Belt Control ECU  
 S64 Seat Belt Motor LH  
 S65 Seat Belt Motor RH

T16 Tension Reducer Solenoid LH  
 T17 Tension Reducer Solenoid RH  
 T18 Tweeter Rear LH  
 T19 Tweeter Rear RH  
 T24 Television Camera ECU  
 T25 Television Camera ECU  
 T26 Television Camera

U 8 Ultrasonic Sensor (Rear Left Center)  
 U 9 Ultrasonic Sensor (Rear Left)  
 U10 Ultrasonic Sensor (Rear Right Center)  
 U11 Ultrasonic Sensor (Rear Right)

V 8 Vanity Light Front LH  
 V 9 Vanity Light Front RH  
 V10 Vapor Pressure Sensor  
 V11 VSV (Pressure Switching Valve)  
 V16 Vanity Light Rear LH  
 V17 Vanity Light Rear RH

W 3 Woofer

Z 2 Option Connector  
 (Telephone Transceiver and Speaker Relay)  
 Z 3 Option Connector  
 (Telephone Transceiver and Speaker Relay)  
 Z 4 Option Connector  
 (Telephone Transceiver and Speaker Relay)  
 Z 5 Option Connector  
 (Telephone Transceiver and Speaker Relay)