

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	B 6	Buckle SW Rear LH	90980-10795
A 2	A/C Magnetic Clutch and Lock Sensor	90980-11016	B 7	Buckle SW Rear RH	
A 3	A/C Pressure Sensor	90980-10845	C 1	Camshaft Position Sensor	90980-10947
A 4	A/C Solenoid	90980-10901	C 2	Camshaft Timing Oil Control Valve LH	90980-11162
A 5	ABS & TRAC & VSC Actuator	90980-11451	C 3	Camshaft Timing Oil Control Valve RH	
A 6	ABS & TRAC & VSC Actuator	90980-11893	C 4	Crankshaft Position Sensor	
A 7	ABS Speed Sensor and Pad Wear SW Indicator Front RH	90980-11291	C 5	Cellular Phone	90980-11912
A 8	ABS Speed Sensor Front LH	90980-11247	C 6	Center Cluster Integration Panel	90980-11923
A 9	Airbag Sensor Front LH	90980-11856	C 7	Cigarette Lighter (Front)	90980-11399
A10	Airbag Sensor Front RH		C 8	Cigarette Lighter (Rear)	90980-10858
A11	A/C Control Assembly	90980-11421	C 9	Clearance Sonar Buzzer (Front)	90980-10825
A12	A/C Control Assembly	90980-11476	C10	Clock	90980-12113
A13	A/C Control Assembly	90980-11586	C11	Coin Box Illumination	90980-11918
A14	A/C Room Temp. Sensor	90980-10825	C12	Combination Meter	90980-11915
A15	A/C Room Temp. SW (Driver's Side)	90980-11923	C13	Combination SW	90980-12183
A16	A/C Room Temp. SW (Front Passenger's Side)	90980-11909	C14	Combination SW	90980-11911
A17	A/T Shift Lever Illumination	90980-11918	C15	Console Box Illumination	90980-10886
A18	Absorber Control SW	90980-11950	C16	Clearance Sonar Buzzer (Rear)	90980-10825
A19	Accel Position Sensor	90980-11144	C17	Clearance Sonar ECU	90980-11877
A20	Air Suspension ECU	90980-11390	C18	Curtain Shield Airbag Squib LH	90980-11884
A21	Air Suspension ECU	90980-11391	C19	Curtain Shield Airbag Squib RH	
A22	Air Suspension ECU	90980-11392	C20	Climate Control Seat ECU (Driver's Seat)	82824-50190
A23	Airbag Sensor Assembly	82824-50160	C21	Climate Control Seat ECU (Front Passenger's Seat)	
A24	Airbag Sensor Assembly	90980-11872	C22	Cooling Fan ECU	90980-12058
A25	Airbag Sensor Assembly	82824-50150	D 1	Data Link Connector 3	90980-11665
A26	Airbag Squib (Front Passenger Airbag Assembly)	90980-12160	D 2	Distance Control ECU	90980-11391
A27	Airbag Squib (Steering Wheel Pad)		D 3	Driver Side J/B ECU	90980-11973
A28	Automatic Light Control Sensor and A/C Solar Sensor (Front)	90980-12056	D 4	Driver Side J/B ECU	90980-11923
A29	A/C Solar Sensor (Rear)	90980-10825	D 5	Driver Side J/B ECU	
A30	ABS Speed Sensor and Pad Wear Indicator SW Rear RH	90980-10794	D 6	Driver Side J/B ECU	90980-11915
A31	ABS Speed Sensor Rear LH	90980-10859	D 7	Duct Sensor (Driver's Side)	90980-10825
A32	Acceleration Sensor	90980-10845	D 8	Duct Sensor (Front Passenger's Side)	
A33	Ashtray Illumination Rear LH	90980-12111	D 9	Door Courtesy Light Front LH	90980-11148
A34	Ashtray Illumination Rear RH		D10	Door Courtesy Light Front RH	
A35	Audio and Rear A/C Control SW (w/ Rear Power Seat)	90980-11922	D11	Door Courtesy Light Rear LH	
	Audio and Rear A/C Control SW (w/o Rear Power Seat)	90980-12025	D12	Door Courtesy Light Rear RH	90980-10871
			D13	Door Courtesy SW Front LH	
			D14	Door Courtesy SW Front RH	
			D15	Door Courtesy SW Rear LH	
B 1	Brake Fluid Level Warning SW	90980-11207	D16	Door Courtesy SW Rear RH	
B 2	Blower Motor	90980-11667	D18	Door Lock Control SW Front RH	90980-11950
B 3	Brake Pedal Load Sensing SW	90980-10860	D19	Door Lock SW (Luggage)	90980-11141
B 4	Buckle SW Front LH	90980-11194	D24	Driver Door ECU	90980-12151
B 5	Buckle SW Front RH		D25	Driver Door ECU	90980-12150
			D26	Driving Position Memory SW	90980-11989

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
D27	Driver Seat ECU	90980-10807	H 7	Headlight LH (High)	90980-11095
D28	Driver Seat ECU	90980-12094	H 8	Headlight RH (High)	
E 1	Electronically Controlled Transmission Solenoid	90980-11151	H 9	Heated Oxygen Sensor (Bank 1 Sensor 1)	90980-10869
E 2	Engine Control Module	90980-12146	H10	Heated Oxygen Sensor (Bank 2 Sensor 1)	
E 3	Engine Control Module	90980-12142	H11	Height Control Compressor	90980-10990
E 4	Engine Control Module	90980-12143	H12	Height Control Exhaust Valve	90980-11156
E 5	Engine Control Module	90980-12144	H13	Height Control Sensor Front LH	90980-11929
E 6	Engine Control Module	90980-12145	H14	Height Control Sensor Front RH	
E 7	Engine Coolant Temp. Sensor	90980-10736	H15	Horn (High)	90980-10619
E 8	Engine Hood Courtesy SW	90980-11189	H16	Horn (Low)	
E 9	Engine Oil Level Sensor	90980-11235	H17	Hazard SW (w/ LEXUS Navigation System)	90980-10801
E10	Exhaust Gas Sensor	90980-11034		Hazard SW (w/o LEXUS Navigation System)	90980-11950
E11	Electronically Controlled Transmission Pattern Select SW	90980-11986	H18	Headlight Beam Level Control ECU	90980-11406
F 1	Front Fog Light LH	90980-11096	H19	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-10858
F 2	Front Fog Light RH		H20	Heated Oxygen Sensor (Bank 2 Sensor 2)	90980-11399
F 3	Front Height Control Valve	90980-11143	H21	Height Control SW	90980-11909
F 4	Front Parking Light LH	90980-11156	H22	Height Control Sensor Rear (w/o Electronically Modulated Air Suspension)	90980-11298
F 5	Front Parking Light RH			Height Control Sensor Rear (w/ Electronically Modulated Air Suspension)	90980-11922
F 6	Front Side Marker Light LH	90980-11009	H23	High Mounted Stop Light	90980-10825
F 7	Front Side Marker Light RH		H24	Head Rest Limit SW Rear LH	
F 8	Front Turn Signal Light LH	90980-11019	H25	Head Rest Limit SW Rear RH	
F 9	Front Turn Signal Light RH		I 1	Ignition Coil and Igniter No.1	90980-11885
F10	Front Wiper Motor	90980-11290	I 2	Ignition Coil and Igniter No.2	
F11	Fuel Pump Resistor	90980-11003	I 3	Ignition Coil and Igniter No.3	
F12	Fuel Lid Opener SW	90980-10825	I 4	Ignition Coil and Igniter No.4	
F13	Fuel Lid Opener SW Illumination	90980-11013	I 5	Ignition Coil and Igniter No.5	
F14	Front Door Speaker LH	90980-10935	I 6	Ignition Coil and Igniter No.6	
F15	Front Door Speaker RH		I 7	Ignition Coil and Igniter No.7	
F16	Front Passenger Door ECU	90980-12151	I 8	Ignition Coil and Igniter No.8	
F17	Front Passenger Door ECU	90980-12150	I 9	Injector No.1	90980-11153
F18	Fuel Lid Opener Motor	90980-11019	I10	Injector No.2	
F19	Fuel Pump and Fuel Sender (Main)	90980-11077	I11	Injector No.3	
F20	Fuel Sender (Sub)	90980-12168	I12	Injector No.4	
G 1	Generator	90980-09363	I13	Injector No.5	
G 2	Generator	90980-11349	I14	Injector No.6	
G 3	Gateway ECU	90980-11915	I15	Injector No.7	
G 4	Glove Box Light No.1	90980-11918	I16	Injector No.8	
G 5	Glove Box Light No.2		I17	Ignition SW	90980-11778
H 1	Headlight Beam Level Control Actuator LH	90980-11144	I18	Instrument Panel Register	90980-12135
H 2	Headlight Beam Level Control Actuator RH		I19	Inner Mirror	90980-11989
H 3	Headlight Cleaner Control Relay	90980-10939	I20	Inside Handle Illumination Front LH	90980-12063
H 4	Headlight Cleaner Motor	90980-11410	I21	Inside Handle Illumination Front RH	
H 5	Headlight Control ECU LH	90980-11003			
H 6	Headlight Control ECU RH				

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
I22	Inside Handle Illumination Rear LH	90980-12063	L 7	Luggage Compartment Door Key Unlock SW	90980-10825
I23	Inside Handle Illumination Rear RH		L 8	Luggage Compartment Light No.1	90980-11148
I24	Interior Light Rear LH	90980-11909	L 9	Luggage Compartment Light No.2	
I25	Interior Light Rear RH		L12	Luggage Room J/B ECU	90980-11911
J 1	Junction Connector	90980-11661	L13	Luggage Room J/B ECU	90980-11923
J 2	Junction Connector		L14	Luggage Room J/B ECU	90980-11915
J 3	Junction Connector		M 1	Mass Air Flow Meter	90980-11317
J 4	Junction Connector		M 2	Magnetic Field Sensor	90980-11909
J 5	Junction Connector		M 3	Multi-Display	90980-10799
J 6	Junction Connector		M 4	Multi-Display	90980-11911
J 7	Junction Connector	90980-11542	M 5	Multi-Display	90980-11923
J 8	Junction Connector	90980-11398	M 6	Moon Roof Control ECU	90980-10997
J 9	Junction Connector		N 1	Noise Filter (Ignition Left Bank)	90980-10843
J10	Junction Connector	90980-11915	N 2	Noise Filter (Ignition Right Bank)	
J11	Junction Connector		N 3	Noise Filter (Rear Window Defogger)	90980-11184
J12	Junction Connector		N 4	Navigation ECU	90980-11973
J13	Junction Connector		N 5	Navigation ECU	90980-11923
J14	Junction Connector		N 6	Navigation ECU	90980-12221
J15	Junction Connector		J16	Junction Connector	90980-11156
J16	Junction Connector	90980-11398	O 2	Oil Pressure SW	90980-11363
J17	Junction Connector		O 3	Outer Mirror SW	90980-11657
J18	Junction Connector		O 4	Outer Mirror SW	90980-11989
J19	Junction Connector		O 5	Outer Mirror SW	90980-11950
J20	Junction Connector		O 6	Overhead J/B	90980-12153
J21	Junction Connector		90980-10976	P 1	Park/Neutral Position SW
J22	Junction Connector	90980-11915	P 2	PPS Solenoid	90980-11162
J23	Junction Connector	90980-11686	P 3	Parking Brake SW	90980-10871
J24	Junction Connector	90980-11915	P 4	Passenger Side J/B ECU	90980-11973
J25	Junction Connector		P 5	Passenger Side J/B ECU	90980-11915
J26	Junction Connector		P 6	Passenger Side J/B ECU	90980-11923
J27	Junction Connector	90980-10976	P 7	Power Outlet	90980-11155
J28	Junction Connector	90980-11661	P 8	Power Tilt and Power Telescopic ECU	90980-10799
J29	Junction Connector		P 9	Power Tilt and Power Telescopic ECU	90980-10848
J30	Junction Connector	90980-11686	P10	Power Window Control SW Front RH	90980-12113
J31	Junction Connector	90980-11915	P11	Power Window Control SW Rear LH	
J32	Junction Connector	90980-11398	P12	Power Window Control SW Rear RH	
K 1	Keyless Buzzer	90980-11156	P13	Power Window Master SW	90980-12166
K 2	Knock Sensor LH	90980-11166	P14	Power Window Motor Front LH	90980-10797
K 3	Knock Sensor RH		P15	Power Window Motor Front RH	
K 4	Keyless Buzzer On/Off SW	90980-10860	P16	Power Window Motor Rear LH	90980-11011
L 1	Laser Radar Sensor	90980-11904	P17	Power Window Motor Rear RH	
L 2	Luggage Compartment Door Opener SW	90980-10860	P18	Pretensioner Front LH	90980-12138
L 3	License Plate Light LH	90980-11148	P19	Pretensioner Front RH	
L 4	License Plate Light RH		L 5	Luggage Compartment Door Closer Motor	90980-11011

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number	
P20	Pretensioner Rear LH	90980-11862	P48	Power Seat Motor and Position Sensor (Rear Passenger's LH Seat Head Rest Top and Bottom Control)	90980-10789	
P21	Pretensioner Rear RH		P49	Power Seat Motor and Position Sensor (Rear Passenger's RH Seat Head Rest Top and Bottom Control)		
P22	Power Seat Control SW (Driver's Seat Cushion)	90980-10601	P50	Power Seat Position Sensor (Rear Passenger's LH Seat Slide Control)	90980-10908	
P23	Power Seat Control SW (Driver's Seat Lumbar Support)	90980-10964	P51	Power Seat Position Sensor (Rear Passenger's RH Seat Slide Control)		
P24	Power Seat Control SW (Front Passenger's Seat Lumbar Support)	90980-10601	R 2	Radio and Player	90980-12038	
P25	Power Seat Control SW (Front Passenger's Seat)	90980-10807	R 3	Radio and Player	90980-12012	
P26	Power Seat Control SW Sub (Front Passenger's Seat)	90980-10801	R 4	Rheostat	90980-11989	
P27	Power Seat Motor (Driver's Seat Cushion Control)	90980-10825	R 6	Rain Sensor	90980-11987	
P28	Power Seat Motor (Driver's Seat Front Vertical Control)		R 7	Rear A/C Unit	90980-10830	
P29	Power Seat Motor (Driver's Seat Lifter Control)		R 8	Rear Combination Light LH	90980-11587	
P30	Power Seat Motor (Driver's Seat Lumbar Support Lower Side Control)		R 9	Rear Combination Light LH		
P31	Power Seat Motor (Driver's Seat Lumbar Support Upper Side Control)		R10	Rear Combination Light RH		
P32	Power Seat Motor (Driver's Seat Reclining Control)		R11	Rear Combination Light RH	90980-12151	
P33	Power Seat Motor (Driver's Seat Slide Control)		R12	Rear Door LH ECU		
P34	Power Seat Motor (Front Passenger's Seat Front Vertical Control)		R13	Rear Door LH ECU	90980-12150	
P35	Power Seat Motor (Front Passenger's Seat Head Rest Control)		90980-11085	R14	Rear Door RH ECU	90980-12151
P36	Power Seat Motor (Front Passenger's Seat Lifter Control)		90980-10825	R15	Rear Door RH ECU	90980-10935
P37	Power Seat Motor (Front Passenger's Seat Lumbar Support Control)			R16	Rear Door Speaker LH	90980-11860
P38	Power Seat Motor (Front Passenger's Seat Reclining Control)			R17	Rear Door Speaker RH	
P39	Power Seat Motor (Front Passenger's Seat Slide Control)			R18	Rear Height Control Valve	90980-11989
P40	Power Seat Motor and Position Sensor (Driver's Seat Head Rest Control)			90980-11085	R19	Rear Seat Memory SW LH
P41	Power Seat Position Sensor (Driver's Seat Cushion Control)	90980-10908	R20	Rear Seat Memory SW RH	90980-11259	
P42	Power Seat Position Sensor (Driver's Seat Front Vertical Control)		R21	Rear Sunshade Control Relay	90980-10914	
P43	Power Seat Position Sensor (Driver's Seat Lifter Control)		R22	Rear Window Defogger	90980-11877	
P44	Power Seat Position Sensor (Driver's Seat Reclining Control)		R23	Rear Window Defogger		
P45	Power Seat Position Sensor (Driver's Seat Slide Control)		R25	Rear LH Seat ECU	90980-12025	
P46	Power Seat Motor (Rear Passenger's LH Seat Slide Control)		R26	Rear RH Seat ECU		
P47	Power Seat Motor (Rear Passenger's RH Seat Slide Control)	90980-10825	R27	Rear Seat Control SW	90980-11922	
			S 1	Short Connector	90980-11923	
			S 2	Short Connector	90980-09585	
			S 3	Starter	90980-11400	
			S 4	Starter	90980-10789	
			S 5	Suspension Control Actuator Front LH		
			S 6	Suspension Control Actuator Front RH	90980-11923	
			S 7	Shift Lock Control ECU	90980-12002	
			S 8	Short Connector (Height Control)	90980-12003	
			S 9	Short Connector (Height Control)	90980-11421	
			S10	Skid Control ECU	90980-11476	
			S11	Skid Control ECU	90980-11637	
			S12	Skid Control ECU	90980-11638	
			S13	Skid Control ECU		

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
S16	Steering Sensor	90980-12162	T18	Tweeter Rear LH	90980-10795
S17	Step Light LH	90980-12063	T19	Tweeter Rear RH	
S18	Step Light RH		S19	Stop Light SW	90980-10795
S20	Shoulder Belt Adjust SW Front LH	90980-11987	U 1	Ultrasonic Sensor (Front Left Center)	
S21	Shoulder Belt Adjust SW Front RH		U 2	Ultrasonic Sensor (Front Left)	
S22	Shoulder Belt Anchor Motor and Position Sensor LH	90980-12056	U 3	Ultrasonic Sensor (Front Left Side)	90980-11246
S23	Shoulder Belt Anchor Motor RH	82824-50130	U 4	Ultrasonic Sensor (Front Right Center)	
S24	Side Airbag Sensor Front LH	90980-12225	U 5	Ultrasonic Sensor (Front Right)	
S25	Side Airbag Sensor Front RH		U 6	Ultrasonic Sensor (Front Right Side)	
S26	Side Airbag Sensor Rear LH	90980-12241	U 7	Unlock Warning SW	90980-10795
S27	Side Airbag Sensor Rear RH		U 8	Ultrasonic Sensor (Rear Left Center)	90980-11246
S28	Stereo Component Amplifier	90980-10803	U 9	Ultrasonic Sensor (Rear Left)	
S29	Stereo Component Amplifier	90980-11877	U10	Ultrasonic Sensor (Rear Right Center)	
S30	Stereo Component Amplifier	90980-10848	U11	Ultrasonic Sensor (Rear Right)	90980-11156
S31	Stereo Component Tuner	90980-11877	V 1	Vehicle Speed Sensor	
S32	Suspension Control Actuator Rear LH	90980-10789	V 2	VSV (ACIS)	90980-11162
S33	Suspension Control Actuator Rear RH		V 3	VSV (Canister Closed Valve)	90980-11156
S34	Seat Climate Controller LH (Seat Back)	90980-11920	V 4	VSV (EVAP)	90980-11156
S35	Seat Climate Controller RH (Seat Back)		V 5	VVT Sensor LH	90980-10947
S36	Seat Heater Front LH	90980-10907	V 6	VVT Sensor RH	90980-10906
S37	Seat Heater Front RH		V 7	VSC Warning Buzzer	90980-11369
S38	Side Airbag Squib LH	90980-11864	V 8	Vanity Light LH	90980-11860
S39	Side Airbag Squib RH		V 9	Vanity Light RH	
S40	Seat Heater Rear LH	90980-10795	V10	Vapor Pressure Sensor	90980-11859
S41	Seat Heater Rear RH		V11	VSV (Pressure Switching Valve)	90980-10803
T 1	Theft Deterrent Horn	90980-10619	V12	Vibration Seat ECU LH	90980-10908
T 2	Throttle Control Motor	90980-11156	V13	Vibration Seat ECU RH	
T 3	Throttle Position Sensor	90980-10711	V14	Vibrator LH	90980-10908
T 4	Telescopic Motor and Position Sensor	90980-10799	V15	Vibrator RH	
T 5	Theft Deterrent ECU	90980-12169	W 1	Washer Level Sensor	90980-11068
T 6	Tilt Motor and Position Sensor	90980-10799	W 2	Washer Motor	90980-10981
T 7	Traction Control SW, Seat Heater SW LH, Seat Heater SW RH, Climate Control Seat SW LH, Climate Control Seat SW RH, Headlight Cleaner SW, Rear Sunshade SW, Rear Seat Reset SW	90980-11915	W 3	Woofer	90980-10795
T 8	Transponder Key Amplifier	90980-12092	Y 1	Yaw Rate Sensor	90980-12080
T 9	Transponder Key Computer	90980-11911			
T10	Trip SW	90980-11490			
T11	Tweeter Front LH	90980-10860			
T12	Tweeter Front RH				
T13	Telephone Transceiver and Speaker Relay	90980-11912			
T14	Telephone Transceiver and Speaker Relay	90980-12025			
T15	Telephone Transceiver and Speaker Relay	90980-11971			
T16	Tension Reducer Solenoid LH	90980-12063			
T17	Tension Reducer Solenoid RH				