


G ELECTRICAL WIRING ROUTING

Position of Parts in Body

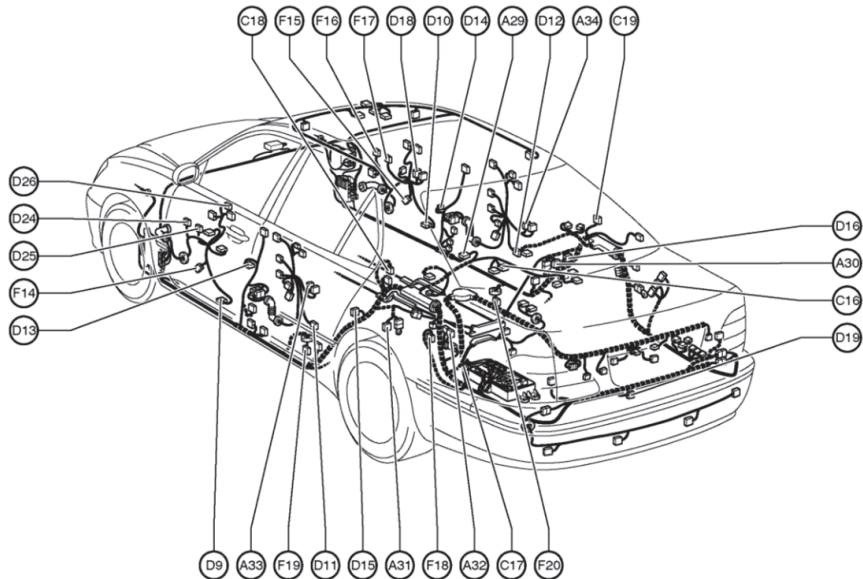

A29 A/C Solar Sensor (Rear)

A30 ABS Speed Sensor and Pad Wear Indicator SW Rear RH

A31 ABS Speed Sensor Rear LH

A32 Acceleration Sensor

A33 Ashtray Illumination Rear LH

A34 Ashtray Illumination Rear RH

C16 Clearance Sonar Buzzer (Rear)

C17 Clearance Sonar ECU

C18 Curtain Shield Airbag Squib LH

C19 Curtain Shield Airbag Squib RH

D 9 Door Courtesy Light Front LH

D10 Door Courtesy Light Front RH

D11 Door Courtesy Light Rear LH

D12 Door Courtesy Light Rear RH

D13 Door Courtesy SW Front LH

D14 Door Courtesy SW Front RH

D15 Door Courtesy SW Rear LH

D16 Door Courtesy SW Rear RH

D18 Door Lock Control SW Front RH

D19 Door Lock SW (Luggage)

D24 Driver Door ECU

D25 Driver Door ECU

D26 Driving Position Memory SW

F14 Front Door Speaker LH

F15 Front Door Speaker RH

F16 Front Passenger Door ECU

F17 Front Passenger Door ECU


F18 Fuel Lid Opener Motor

F19 Fuel Pump and Fuel Sender (Main)

F20 Fuel Sender (Sub)

G

Position of Parts in Body

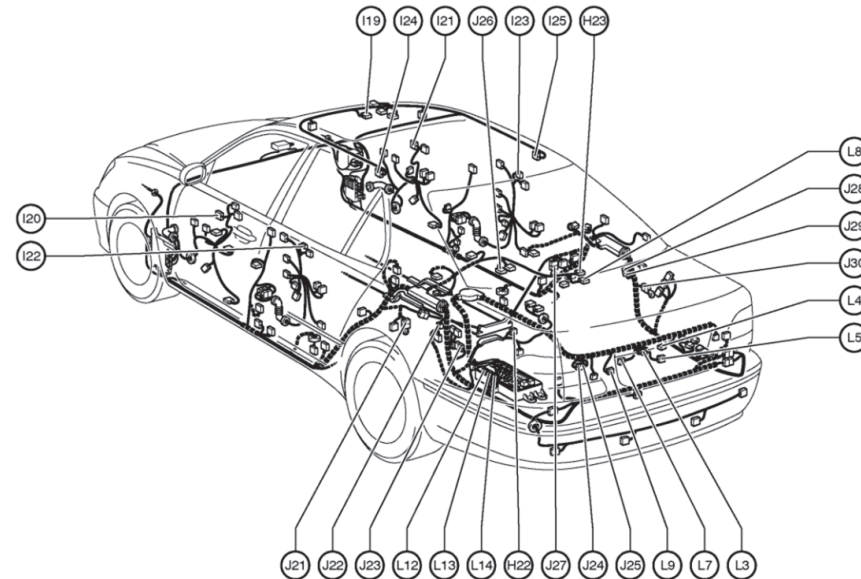

H22 Height Control Sensor Rear

H23 High Mounted Stop Light

I 19 Inner Mirror

I 20 Inside Handle Illumination Front LH

I 21 Inside Handle Illumination Front RH

I 22 Inside Handle Illumination Rear LH

I 23 Inside Handle Illumination Rear RH

I 24 Interior Light Rear LH

I 25 Interior Light Rear RH

J 21 Junction Connector

J 22 Junction Connector

J 23 Junction Connector

J 24 Junction Connector

J 25 Junction Connector

J 26 Junction Connector

J 27 Junction Connector

J 28 Junction Connector

J 29 Junction Connector

J 30 Junction Connector

L 3 License Plate Light LH

L 4 License Plate Light RH

L 5 Luggage Compartment Door Closer Motor

L 7 Luggage Compartment Door Key Unlock SW

L 8 Luggage Compartment Light No.1

L 9 Luggage Compartment Light No.2


L 12 Luggage Room J/B ECU

L 13 Luggage Room J/B ECU

L 14 Luggage Room J/B ECU

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

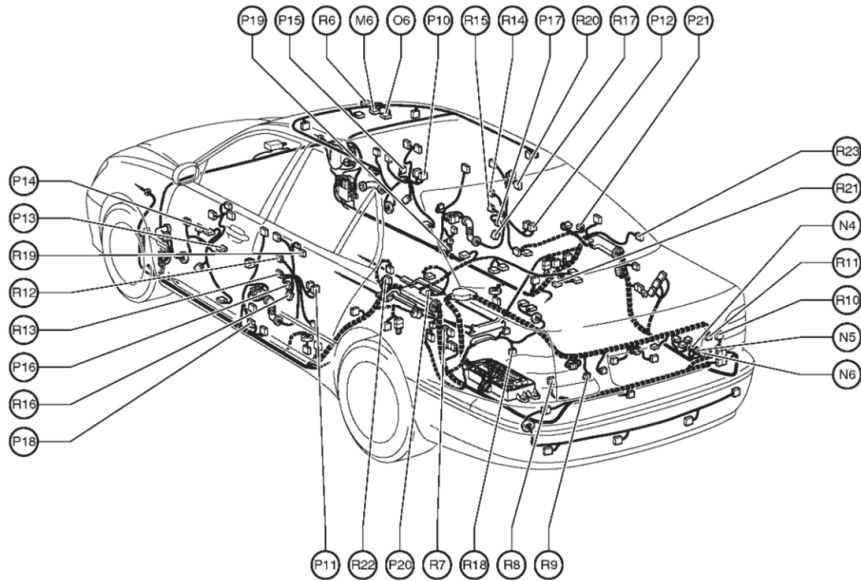

M 6 Moon Roof Control ECU

N 4 Navigation ECU
N 5 Navigation ECU
N 6 Navigation ECU


O 6 Overhead J/B

P 10 Power Window Control SW Front RH
P 11 Power Window Control SW Rear LH
P 12 Power Window Control SW Rear RH
P 13 Power Window Master SW
P 14 Power Window Motor Front LH
P 15 Power Window Motor Front RH
P 16 Power Window Motor Rear LH
P 17 Power Window Motor Rear RH
P 18 Pretensioner Front LH
P 19 Pretensioner Front RH
P 20 Pretensioner Rear LH
P 21 Pretensioner Rear RH

R 6 Rain Sensor
R 7 Rear A/C Unit
R 8 Rear Combination Light LH
R 9 Rear Combination Light RH
R 10 Rear Combination Light LH
R 11 Rear Combination Light RH
R 12 Rear Door LH ECU
R 13 Rear Door LH ECU
R 14 Rear Door RH ECU
R 15 Rear Door RH ECU
R 16 Rear Door Speaker LH
R 17 Rear Door Speaker RH
R 18 Rear Height Control Valve
R 19 Rear Seat Memory SW LH
R 20 Rear Seat Memory SW RH
R 21 Rear Sunshade Control Relay
R 22 Rear Window Defogger
R 23 Rear Window Defogger

G

Position of Parts in Body

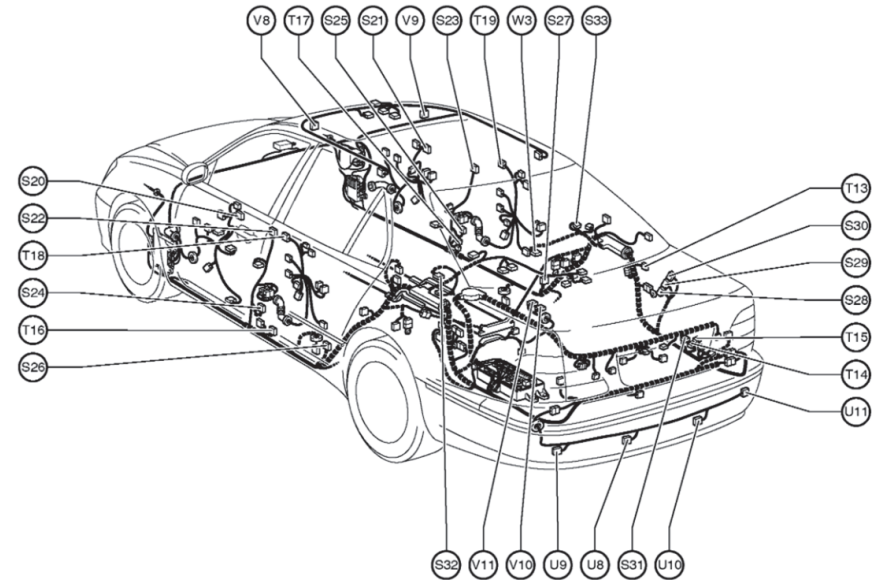

S 20 Shoulder Belt Adjust SW Front LH
S 21 Shoulder Belt Adjust SW Front RH
S 22 Shoulder Belt Anchor Motor and Position Sensor LH
S 23 Shoulder Belt Anchor Motor RH
S 24 Side Airbag Sensor Front LH
S 25 Side Airbag Sensor Front RH
S 26 Side Airbag Sensor Rear LH
S 27 Side Airbag Sensor Rear RH
S 28 Stereo Component Amplifier
S 29 Stereo Component Amplifier
S 30 Stereo Component Amplifier
S 31 Stereo Component Tuner
S 32 Suspension Control Actuator Rear LH
S 33 Suspension Control Actuator Rear RH

T 13 Telephone Transceiver and Speaker Relay
T 14 Telephone Transceiver and Speaker Relay
T 15 Telephone Transceiver and Speaker Relay
T 16 Tension Reducer Solenoid LH
T 17 Tension Reducer Solenoid RH
T 18 Tweeter Rear LH
T 19 Tweeter Rear RH

U 8 Ultrasonic Sensor (Rear Left Center)
U 9 Ultrasonic Sensor (Rear Left)
U 10 Ultrasonic Sensor (Rear Right Center)
U 11 Ultrasonic Sensor (Rear Right)

V 8 Vanity Light LH
V 9 Vanity Light RH
V 10 Vapor Pressure Sensor
V 11 VSV (Pressure Switching Valve)

W 3 Woofer