

REMOVAL

HINT:

- Use the same procedures for the LH side and RH side.
- The procedures listed below are for the LH side.

1. REMOVE COWL TOP VENTILATOR LOUVER RH_ INFO

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

NOTICE:

After the engine switch is turned off, the HDD navigation system requires approximately 6 minutes to record various types of memory and settings. As a result, after turning the engine switch off, wait 6 minutes or more before disconnecting the cable from the negative (-) battery terminal.

3. REMOVE NO. 1 SPEAKER HOLE COVER

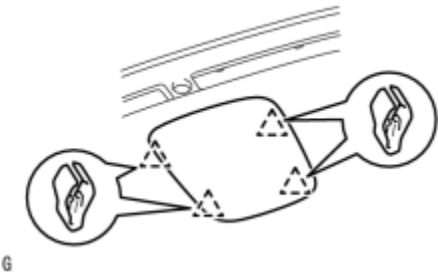

(a) Using a screwdriver, detach the 4 clips and remove the hole cover.

HINT:

Tape the screwdriver tip before use.

4. REMOVE FRONT NO. 3 SPEAKER ASSEMBLY

(a) Remove the 2 bolts.

(b) Remove the speaker and disconnect the speaker connector.

NOTICE:

Do not touch the cone part of the speaker.

for Standard Models:



for 19 Speakers Models:



G

5. REMOVE FRONT PILLAR GARNISH LH_ INFO



G

6. REMOVE NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

(a) Using a screwdriver, detach the 2 clips and 7 claws.

HINT:

Tape the screwdriver tip before use.

(b) Remove the speaker panel.

7. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY


(a) Remove the 2 bolts.

(b) Remove the speaker and disconnect the speaker connector.

NOTICE:

Do not touch the cone part of the speaker.

for Standard Models:

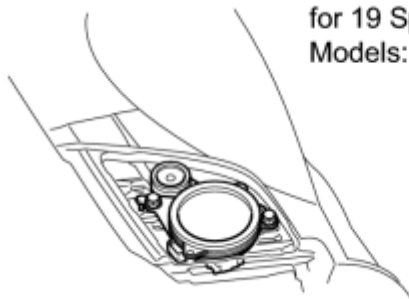

G

for 19 Speakers Models:

