

Last Modified: 7-25-2017	6.8:8.0.51	Doc ID: RM000002U67001X
Model Year Start: 2007	Model: LS460	Prod Date Range: [09/2006 -]
Title: AIR CONDITIONING: AIR CONDITIONING AMPLIFIER: REMOVAL; 2007 MY LS460 [09/2006 -]		

REMOVAL

1. REMOVE COWL TOP VENTILATOR LOUVER RH [INFO](#)

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

NOTICE:

After the engine switch is turned off, the HDD navigation system requires approximately 6 minutes to record various types of memory and settings. As a result, after turning the engine switch off, wait 6 minutes or more before disconnecting the cable from the negative (-) battery terminal.

3. REMOVE INSTRUMENT PANEL FINISH PANEL END RH [INFO](#)

4. REMOVE INSTRUMENT SIDE PANEL RH [INFO](#)

5. REMOVE NO. 2 INSTRUMENT CLUSTER MOULDING [INFO](#)

6. REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY [INFO](#)

7. REMOVE INSTRUMENT PANEL LOWER [INFO](#)

8. REMOVE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY [INFO](#)

9. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY [INFO](#)

10. REMOVE AIR CONDITIONING AMPLIFIER ASSEMBLY

- (a) Disconnect the 3 connectors.
- (b) Remove the screw and amplifier.

