

<b>Last Modified:</b> 7-25-2017	6.8:8.0.51	<b>Doc ID:</b> RM000002LSG000X
<b>Model Year Start:</b> 2007	<b>Model:</b> LS460	<b>Prod Date Range:</b> [09/2006 - ]
<b>Title:</b> POWER STEERING: DC / DC CONVERTER: REMOVAL; 2007 MY LS460 [09/2006 - ]		

## **REMOVAL**

### **1. REMOVE COWL TOP VENTILATOR LOUVER RH**

### **2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

- (a) Disconnect the negative (-) battery cable from the battery terminal.

#### **CAUTION:**

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

#### **NOTICE:**

After the engine switch is turned off, the HDD navigation system requires approximately 6 minutes to record various types of memory and settings. As a result, after turning the engine switch off, wait 6 minutes or more before disconnecting the cable from the negative (-) battery terminal.

### **3. REMOVE BATTERY**

- (a) Disconnect the positive (+) battery cable from the battery terminal.
- (b) Remove the 2 nuts and battery clamp.
- (c) Remove the battery insulator.
- (d) Remove the battery.

### **4. REMOVE BATTERY TRAY**

- (a) Remove the 3 bolts and battery tray.

### **5. REMOVE DC-DC CONVERTER**

- (a) Release the locks of the 2 converter assembly connectors A and B, and disconnect the connectors.

(b) Remove the 3 bolts and converter.

