

2011 Lexus LS460 & LS460L Factory Service Manual

Volume	Pub No	Chapter	Section	
Vol. 1	RM16M0U1	Introduction	IN	IN-1
Vol. 1	RM16M0U1	Preparation	PP	
Vol. 1	RM16M0U1	Service Specifications	SS	
Vol. 1	RM16M0U1	Maintenance	MA	
Vol. 1	RM16M0U1	1UR-FSE Engine Control System	ES	
Vol. 1	RM16M0U1	1UR-FSE Engine Mechanical	EM	
Vol. 1	RM16M0U1	1UR-FSE Fuel	FU	
Vol. 2	RM16M0U2	1UR-FSE Emission Control	EC	
Vol. 2	RM16M0U2	1UR-FSE Intake	IT	
Vol. 2	RM16M0U2	1UR-FSE Exhaust	EX	
Vol. 2	RM16M0U2	1UR-FSE Cooling	CO	
Vol. 2	RM16M0U2	1UR-FSE Lubrication	LU	
Vol. 2	RM16M0U2	1UR-FSE Ignition	IG	
Vol. 2	RM16M0U2	1UR-FSE Starting	ST	
Vol. 2	RM16M0U2	1UR-FSE Charging	CH	
Vol. 2	RM16M0U2	AA80E Automatic Transmission	AT	
Vol. 2	RM16M0U2	AA80F Automatic Transmission	AT	
Vol. 2	RM16M0U2	LF1A Transfer	TF	
Vol. 2	RM16M0U2	Propeller Shaft	PR	
Vol. 2	RM16M0U2	Drive Shaft	DS	
Vol. 2	RM16M0U2	Differential	DF	
Vol. 2	RM16M0U2	Axle	AH	
Vol. 2	RM16M0U2	Suspension Control	SC	
Vol. 3	RM16M0U3	Suspension	SP	
Vol. 3	RM16M0U3	Tire and Wheel	TW	
Vol. 3	RM16M0U3	Brake Control	BC	
Vol. 3	RM16M0U3	Brake	BR	
Vol. 3	RM16M0U3	Parking Brake	PB	
Vol. 3	RM16M0U3	Steering Column	SR	
Vol. 3	RM16M0U3	Power Steering	PS	
Vol. 3	RM16M0U3	Air Conditioning	AC	
Vol. 4	RM16M0U4	Pre-Collision	PC	
Vol. 4	RM16M0U4	Supplemental Restraint System	RS	
Vol. 4	RM16M0U4	Seat Belt	SB	
Vol. 4	RM16M0U4	Theft Deterrent	TD	
Vol. 4	RM16M0U4	Engine Immobiliser	EI	
Vol. 4	RM16M0U4	Cruise Control	CC	
Vol. 4	RM16M0U4	Lighting	LI	
Vol. 4	RM16M0U4	Wiper and Washer	WW	
Vol. 5	RM16M0U5	Door Lock	DL	
Vol. 5	RM16M0U5	Meter	ME	
Vol. 5	RM16M0U5	Audio / Visual	AV	
Vol. 5	RM16M0U5	Navigation	NS	
Vol. 6	RM16M0U6	Park Assist / Monitoring	PM	

Vol. 6	RM16M0U6	Power Source / Wiring	PW
Vol. 6	RM16M0U6	Horn	HO
Vol. 6	RM16M0U6	Garage Door Opener	GD
Vol. 6	RM16M0U6	Cellular Communication	CM
Vol. 6	RM16M0U6	Other System	OT
Vol. 6	RM16M0U6	Windshield / Windowglass	WS
Vol. 6	RM16M0U6	Mirror	MI
Vol. 6	RM16M0U6	Instrument Panel	IP
Vol. 6	RM16M0U6	Seat Belt	SE
Vol. 7	RM16M0U6	Engine Hood / Door	ED
Vol. 7	RM16M0U6	Exterior	ET
Vol. 7	RM16M0U6	Interior	IR
Vol. 7	RM16M0U6	Sliding Roof	RF
Vol. 7	RM16M0U6	Multiplex Communication	MP
Vol. 7	RM16M0U6	Can Communication	CA