

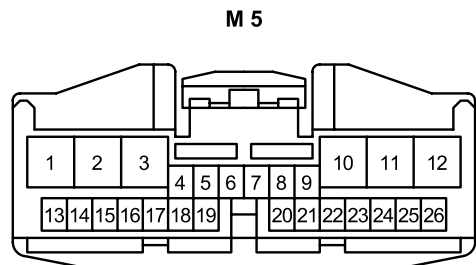
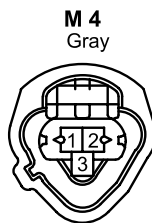
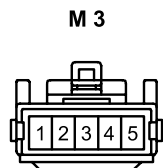
 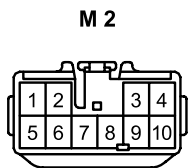
 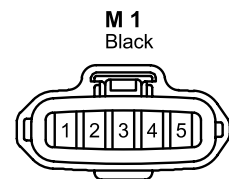
 
 


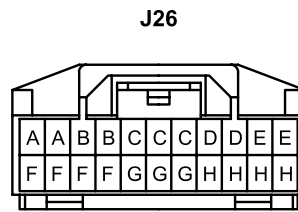
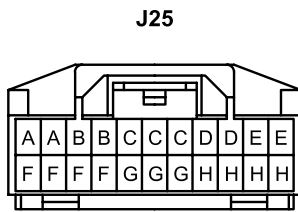
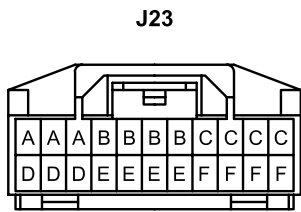
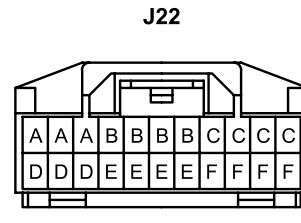
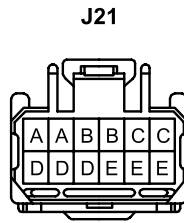
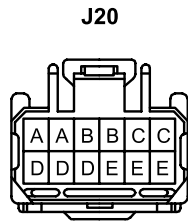
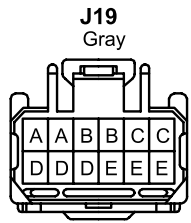
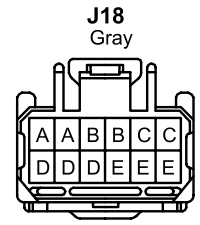
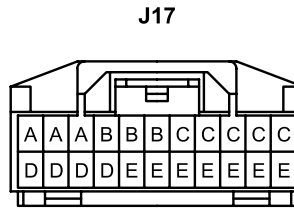
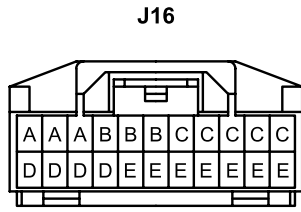
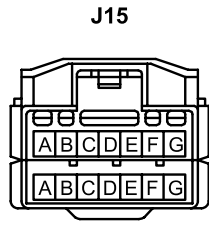
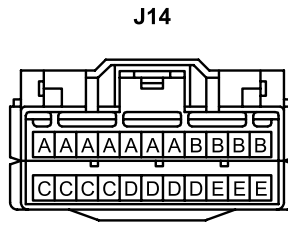
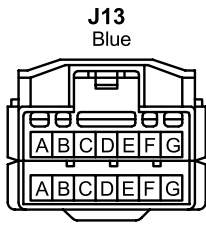



K CONNECTOR LIST

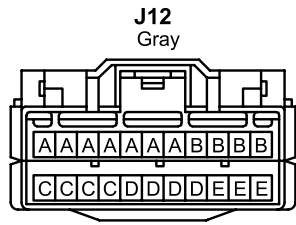


M 6

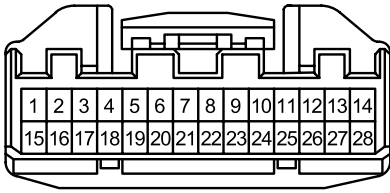

 M 7




M 9

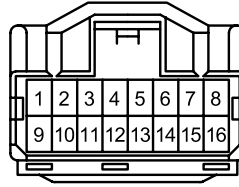


N 1
Gray




N 2

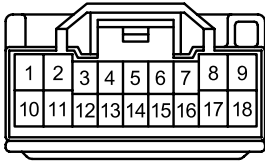

N 3

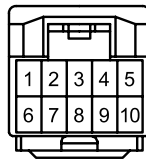


N 4
Black

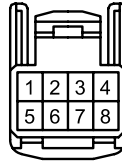


O 2
Black




O 5

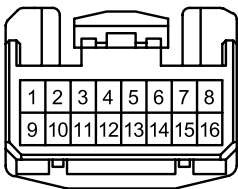


P 1
Gray

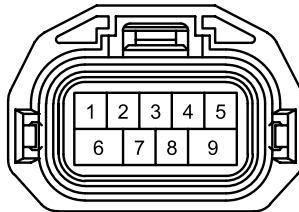

P 2
Gray

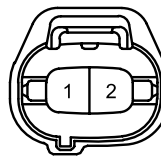

P 3
Gray

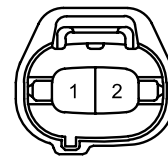

P 4



 
P 5



P 6
Black




P 7
Black



P 8



 P 9




P 10



P 11



P 12

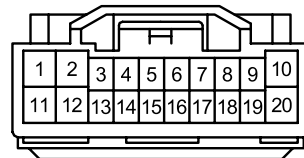

P 14



P 15




P 16




P 17




P 18

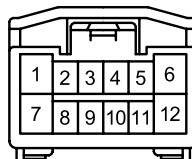


P 19

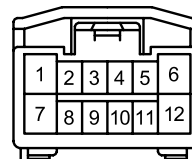

P 20

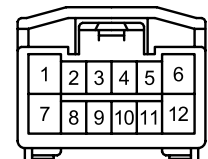

Position of Parts in Instrument Panel

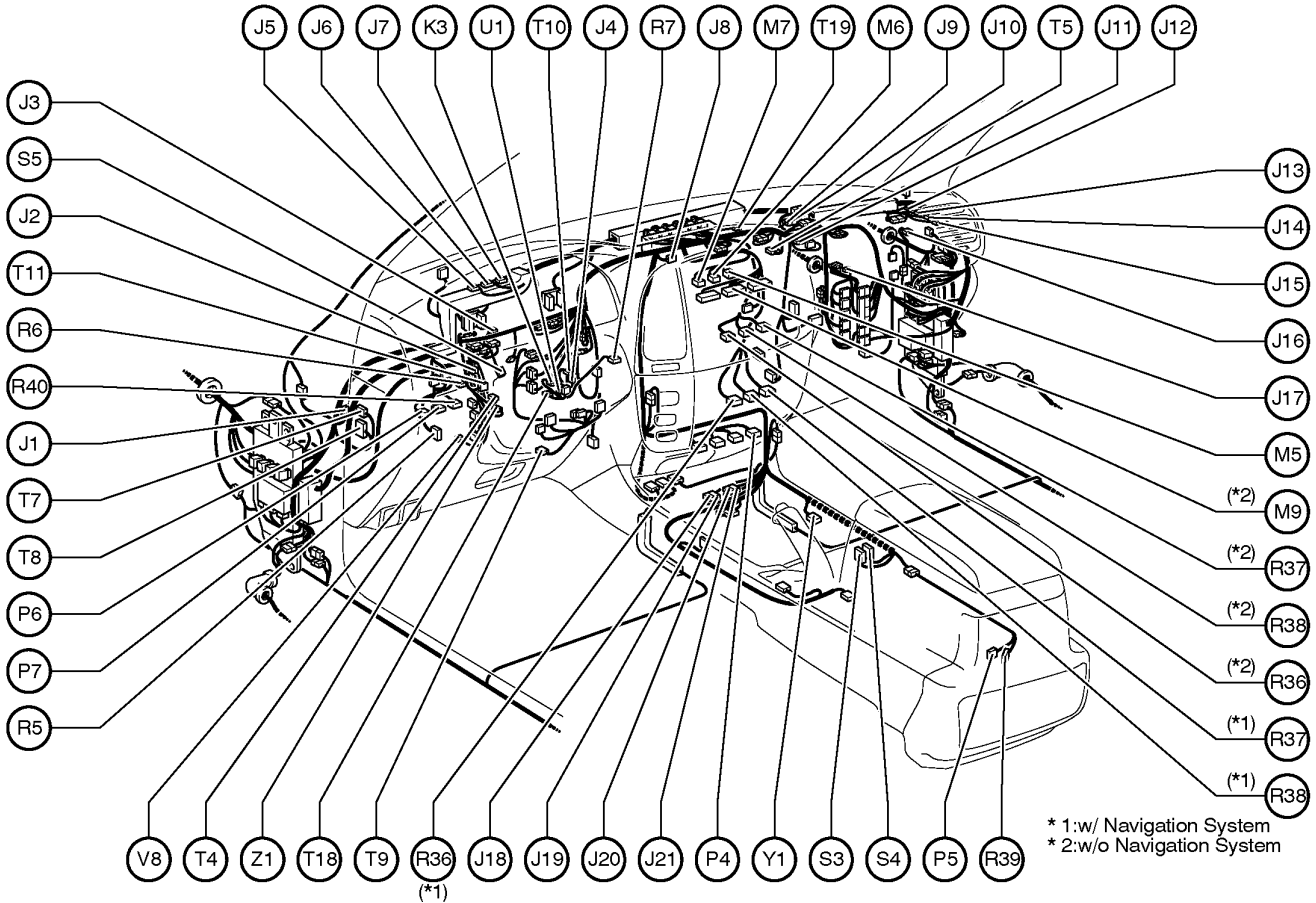

* 1:w/ Navigation System
 * 2:w/o Navigation System

- J 1 Junction Connector
- J 2 Junction Connector
- J 3 Junction Connector
- J 4 Junction Connector
- J 5 Junction Connector
- J 6 Junction Connector
- J 7 Junction Connector
- J 8 Junction Connector
- J 9 Junction Connector
- J 10 Junction Connector
- J 11 Junction Connector
- J 12 Junction Connector
- J 13 Junction Connector
- J 14 Junction Connector
- J 15 Junction Connector
- J 16 Junction Connector
- J 17 Junction Connector
- J 18 Junction Connector
- J 19 Junction Connector
- J 20 Junction Connector
- J 21 Junction Connector

- K 3 Key Interlock Solenoid

- M 5 Multi-Display
- M 6 Multi-Display
- M 7 Multi-Display
- M 9 Multi-Display

- P 4 Power Outlet (Front)
- P 5 Power Outlet (Rear Console Box)
- P 6 Power Quarter Window SW LH
- P 7 Power Quarter Window SW RH

- R 5 Remote Control Mirror SW
- R 6 Rheostat
- R 7 Room Temp. Sensor (Front)
- R 36 Radio and Player
- R 37 Radio and Player
- R 38 Radio and Player
- R 39 Rear Seat Audio Controller
- R 40 Roll Sensing of Curtain Shield Airbags Cutoff SW

- S 3 Seat Heater SW (Driver's Seat)
- S 4 Seat Heater SW (Front Passenger's Seat)
- S 5 Stop Light SW

- T 4 Telescopic Motor
- T 5 Theft Deterrent ECU
- T 7 Tilt and Telescopic ECU
- T 8 Tilt and Telescopic ECU
- T 9 Tilt Motor
- T 10 Ignition Key Cylinder Light
Transponder Key Amplifier
- T 11 Turn Signal Flasher
- T 18 Towing Brake Controller
- T 19 Transponder Key Computer


- U 1 Unlock Warning SW

- V 8 VSC Warning Buzzer


- Y 1 Yaw Rate Sensor

- Z 1 Option Connector (Glass Breakage Sensor)


Navigation System, TOYOTA Parking Assist (Rear View Monitor)

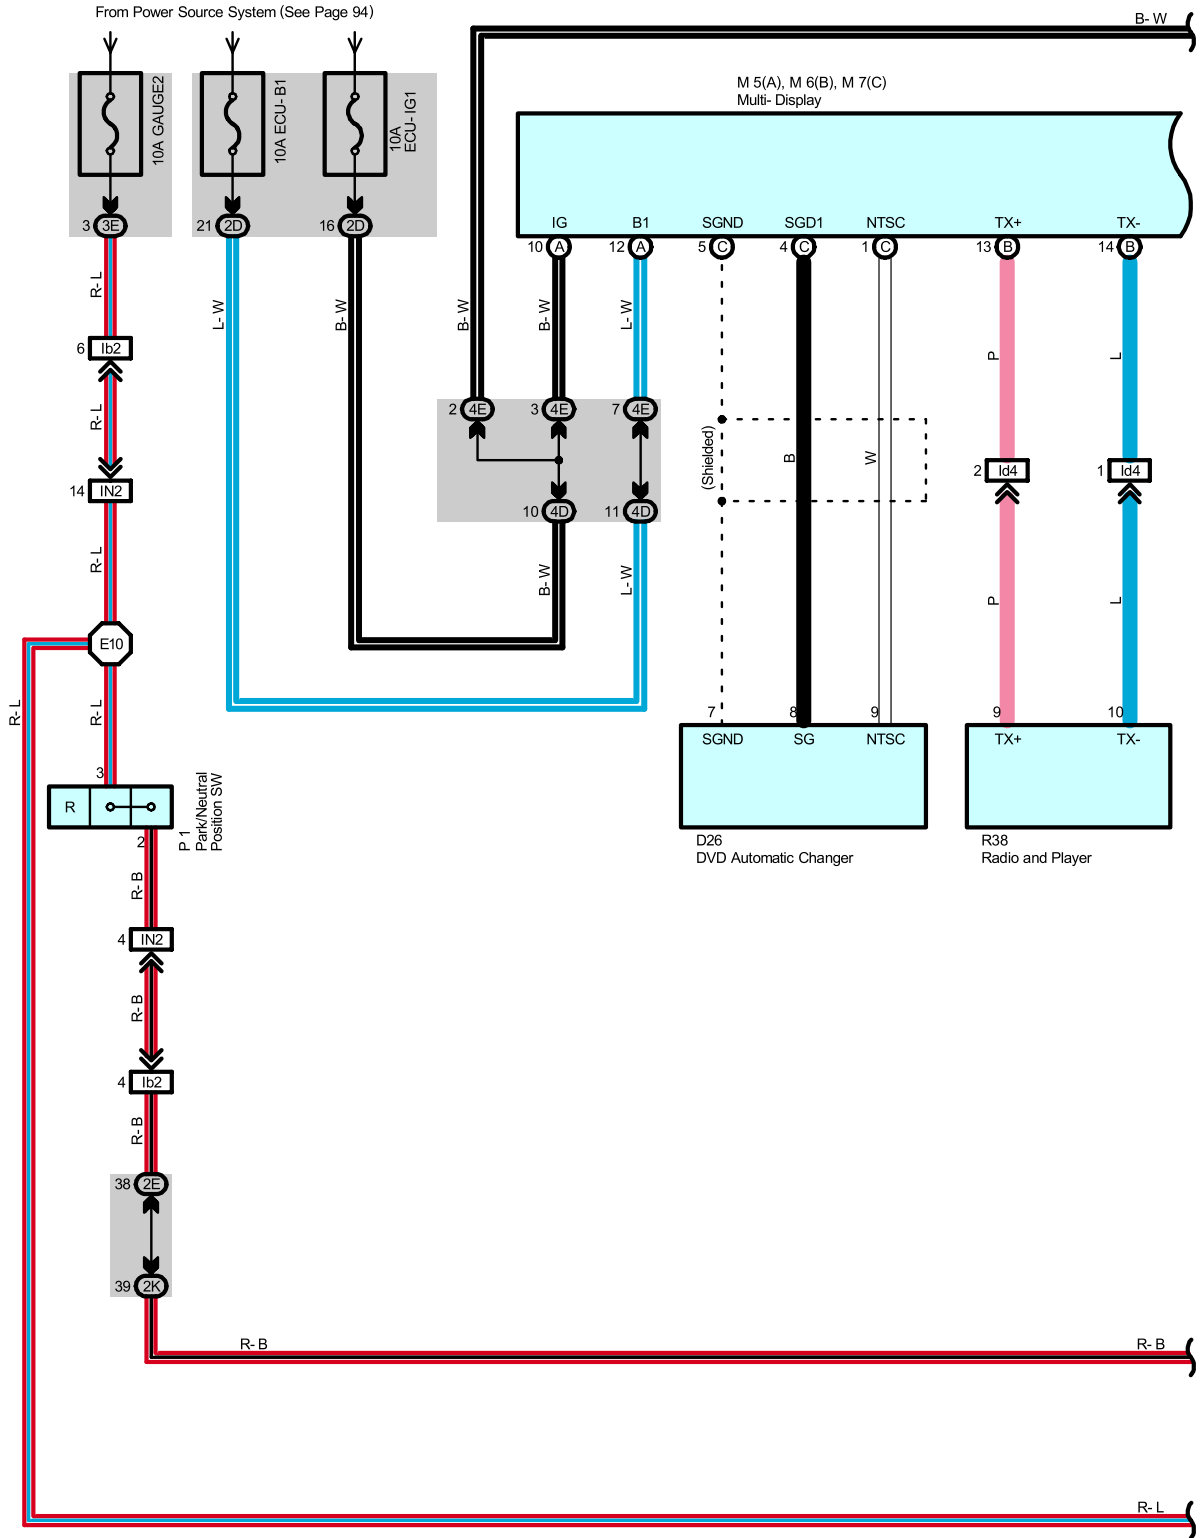


M 5(A), M 6(B), M 7(C)
Multi-Display

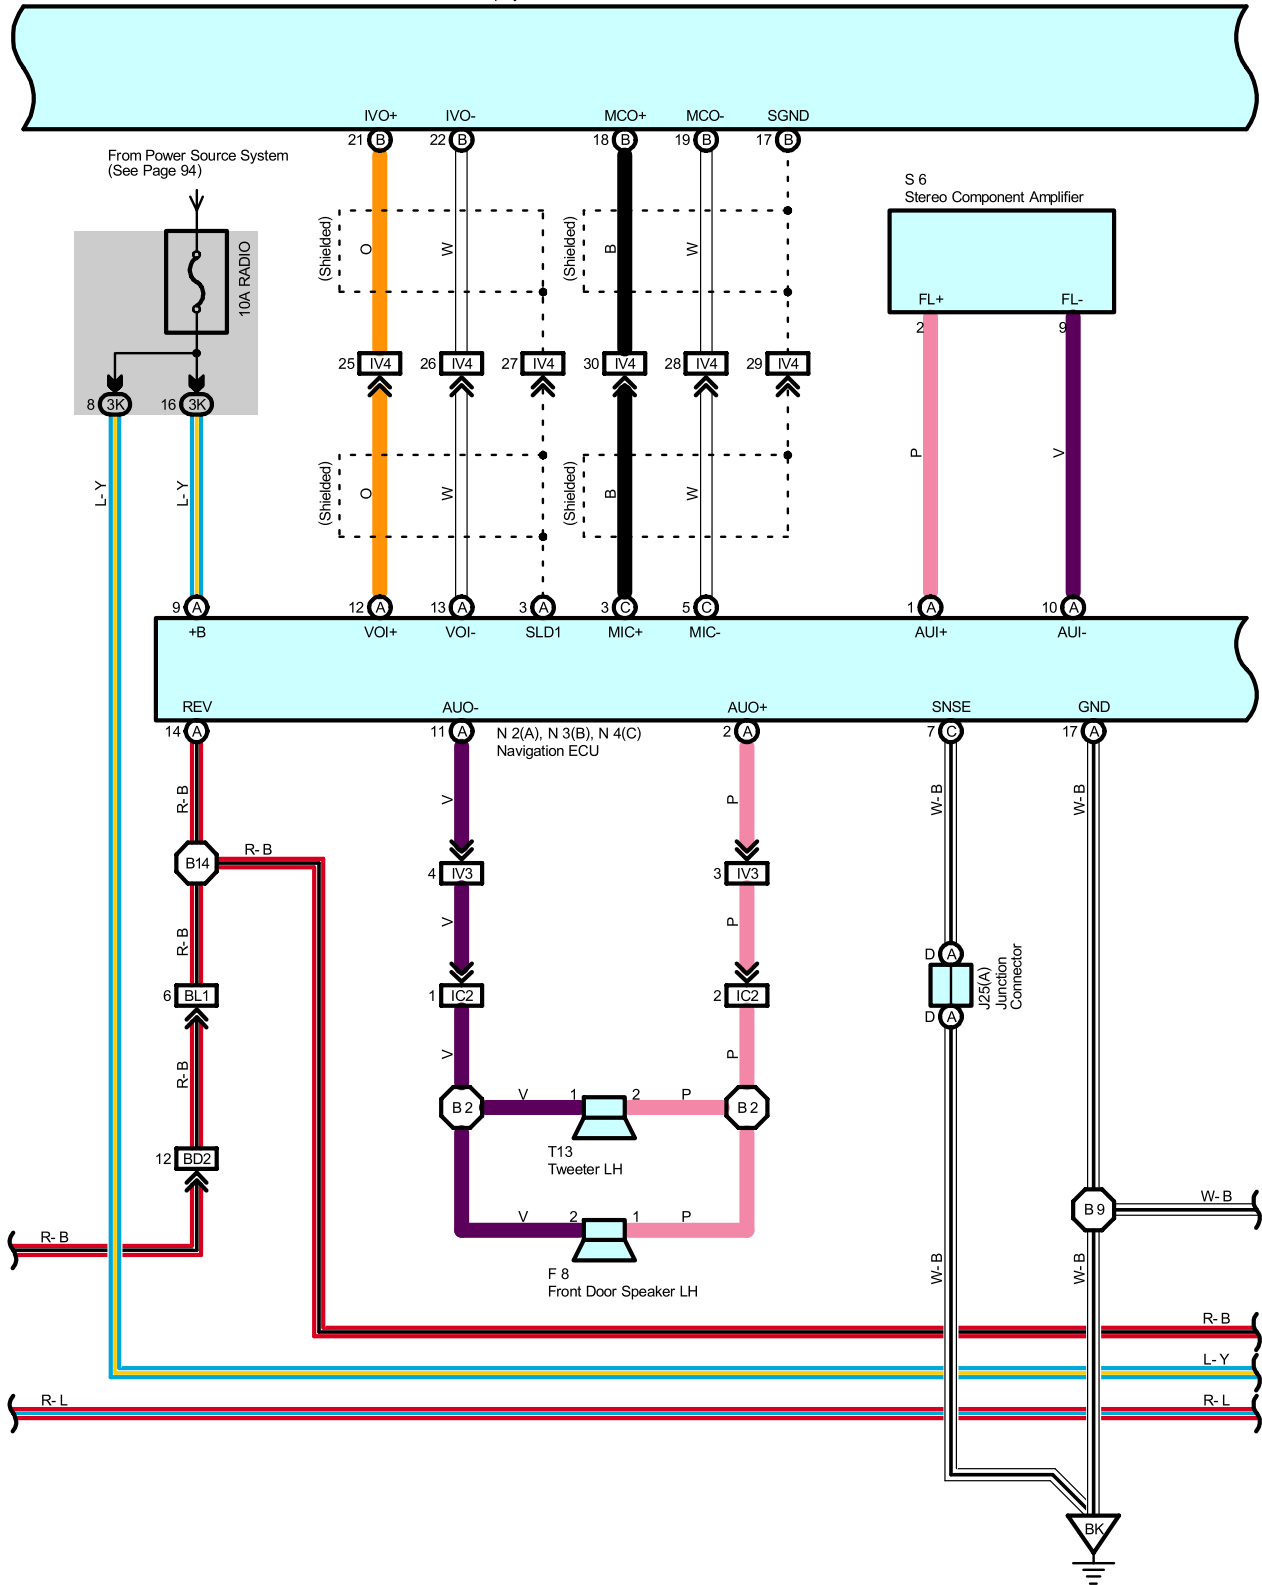



Navigation System, TOYOTA Parking Assist (Rear View Monitor)

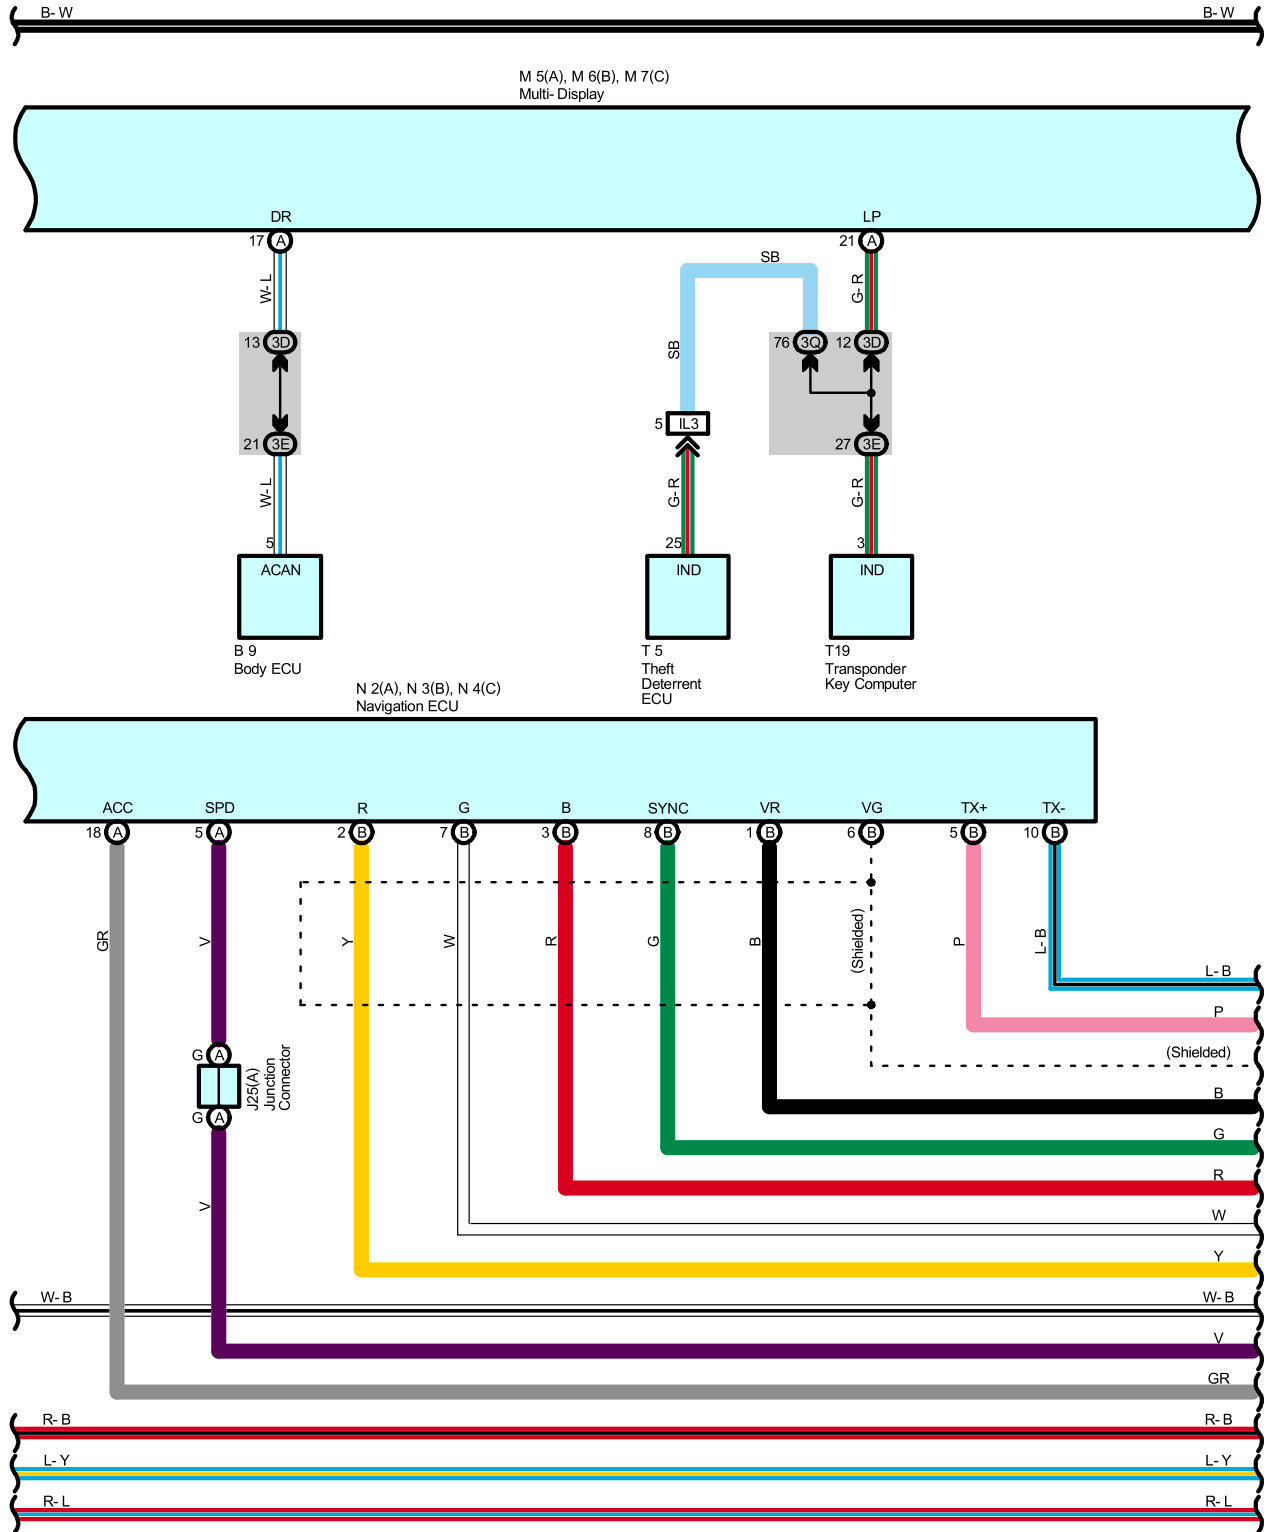

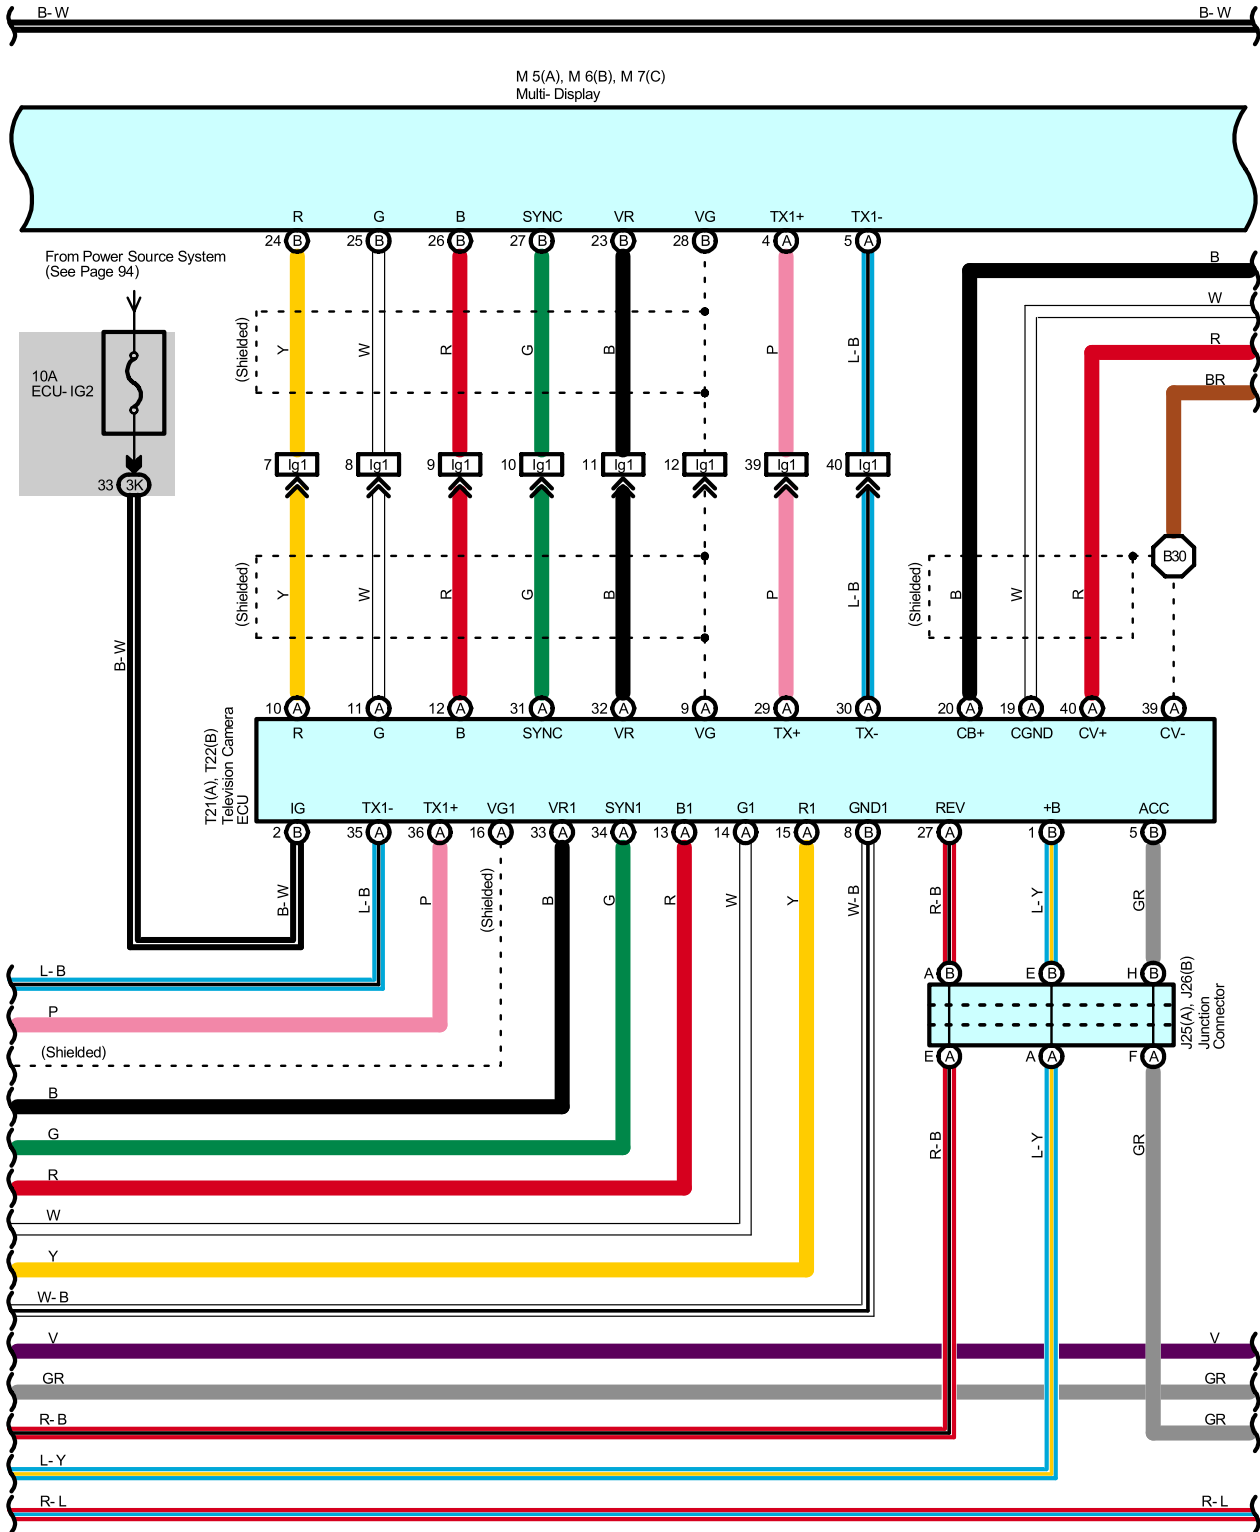

Navigation System, TOYOTA Parking Assist (Rear View Monitor)

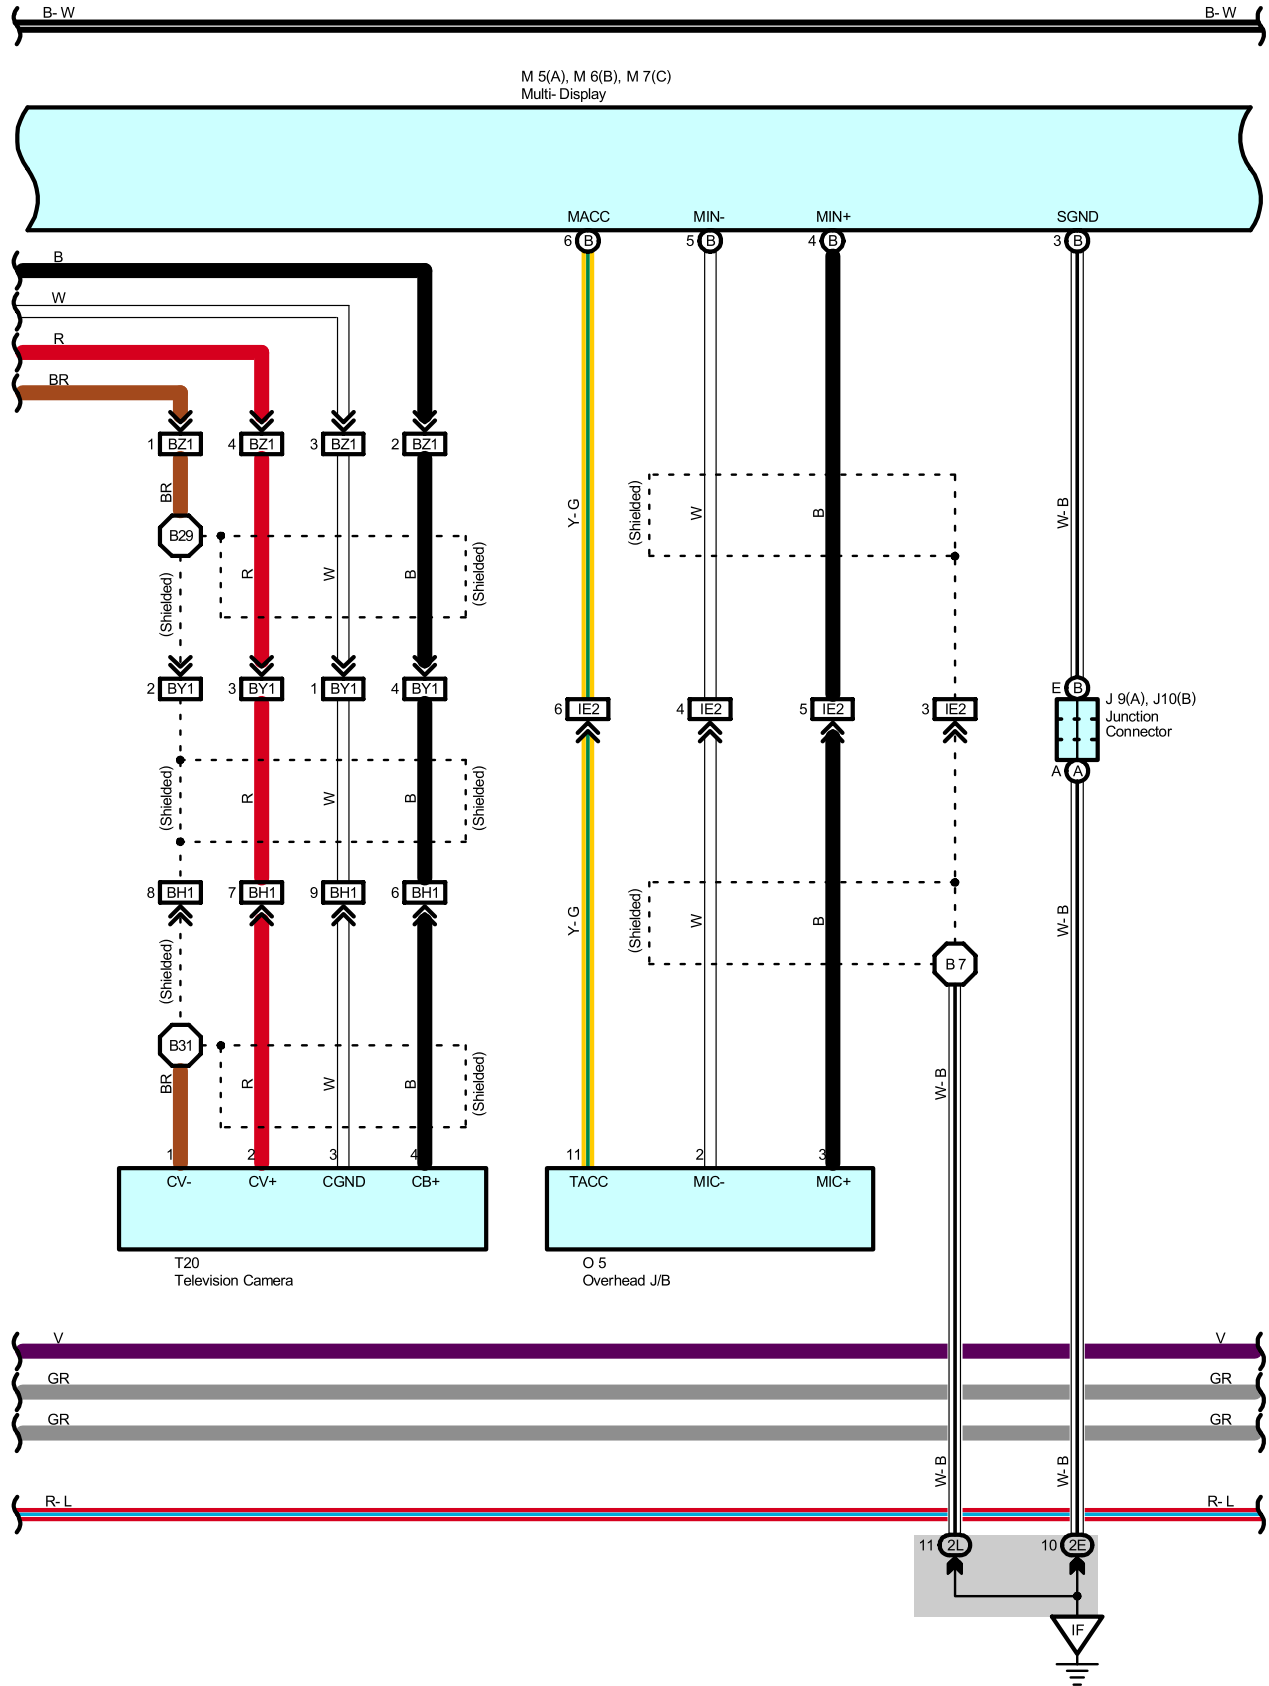

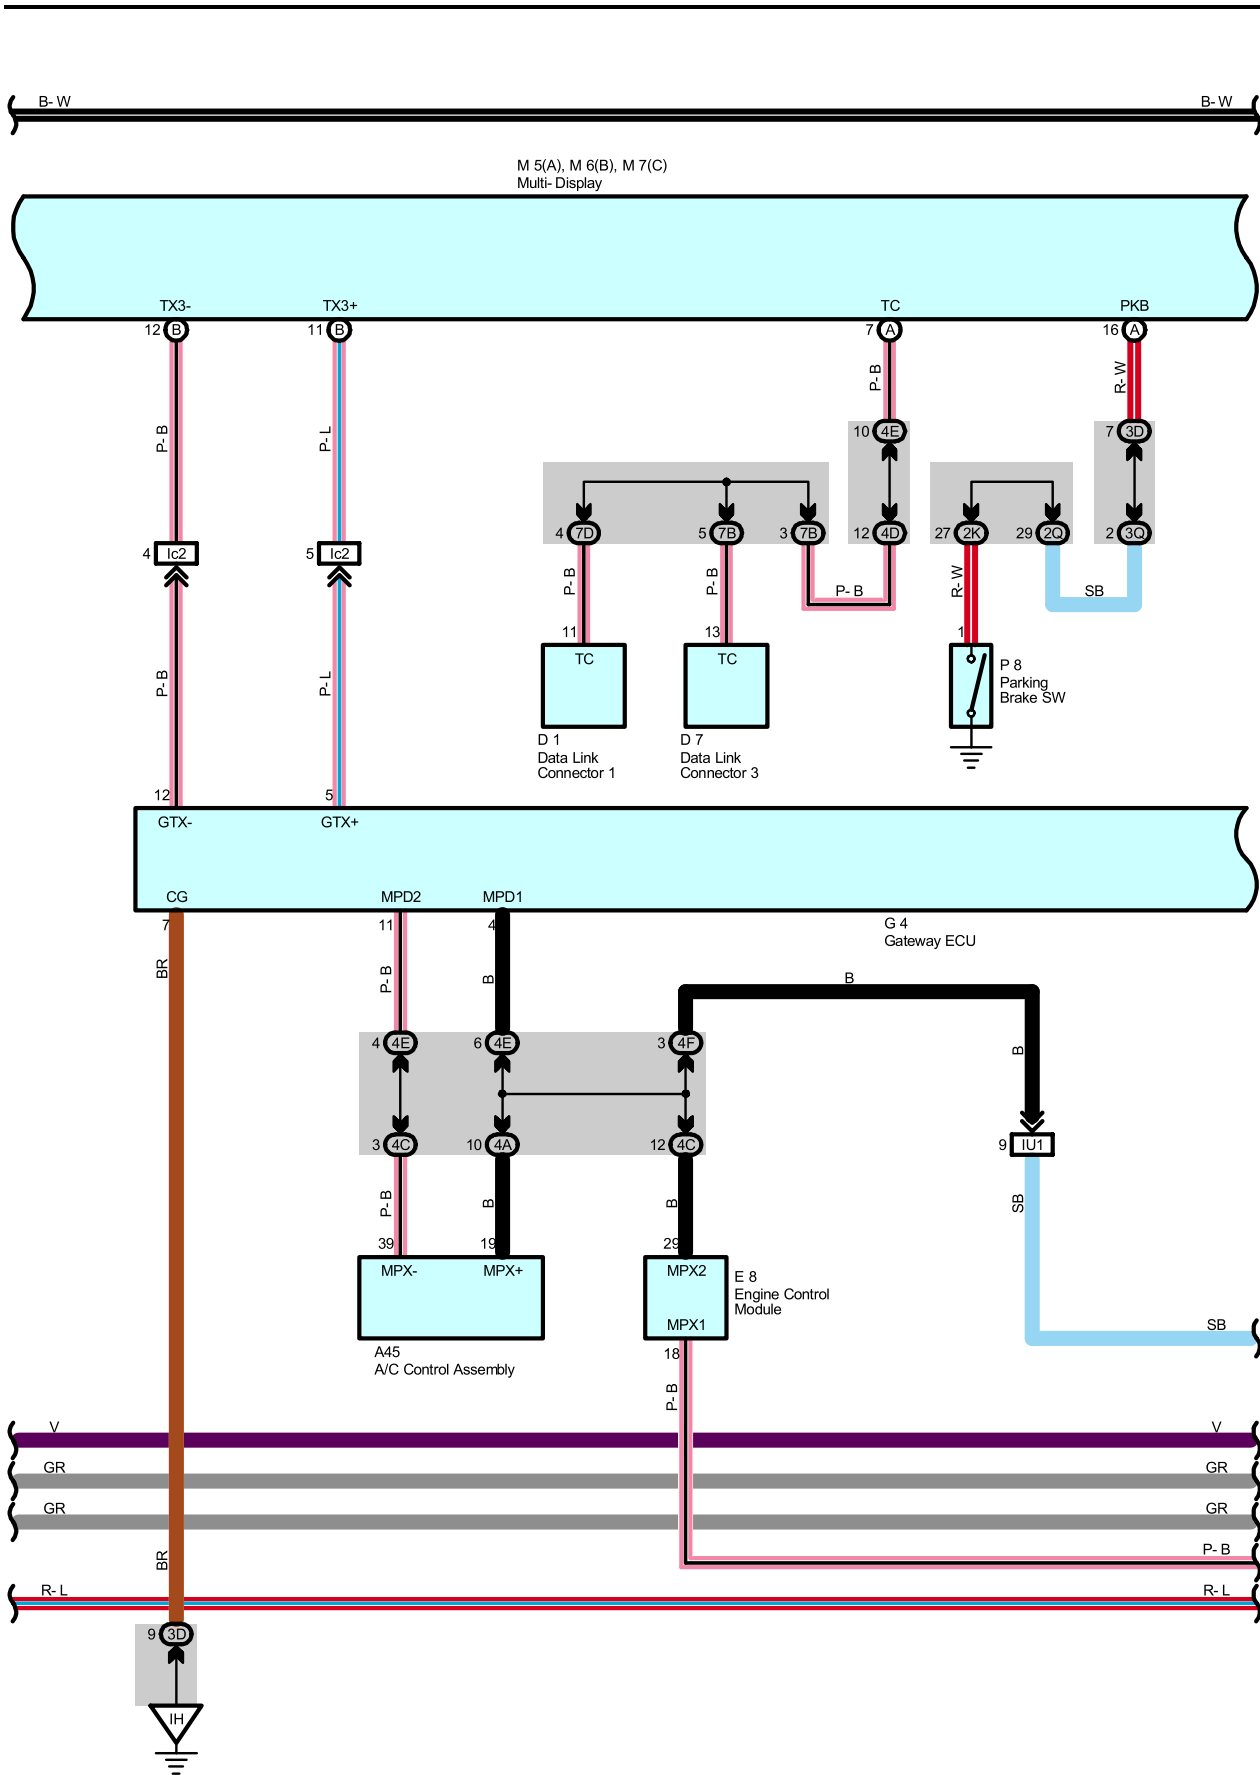

Navigation System, TOYOTA Parking Assist (Rear View Monitor)

