



AIR-FUEL RATIO (A/F) SENSOR INSPECTION

SF08M-03

INSPECT HEATER RESISTANCE OF A/F SENSORS

- Disconnect the A/F sensor connector.
- Using an ohmmeter measure the resistance between terminals +B and HT.

Resistance: 0.8 - 1.4 Ω at 20°C (68°F)

If the resistance is not as specified, replace the sensor.

Torque: 44 N·m (440 kgf·cm, 31 ft·lbf)

- Reconnect the A/F sensor connector.