WIPER RUBBER LH

REPLACEMENT

1. REMOVE FR WIPER BLADE LH


(a) Remove the front wiper blade LH from the front wiper arm LH.

NOTICE:

Do not fold down the front wiper arm with the front wiper blade being removed from it.

2. REMOVE WIPER RUBBER LH

- (a) Remove the front wiper rubber LH from the front wiper blade.
- (b) Remove the 2 wiper rubber backing plates from the wiper rubber LH.

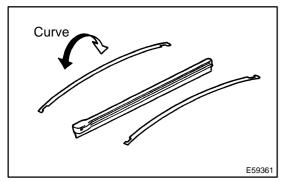


3. INSTALL WIPER RUBBER LH

(a) Install the 2 wiper rubber backing plates to the wiper rubber LH.

NOTICE:

Install the backing plates in the correct direction.

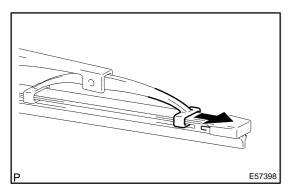

(b) Install the wiper rubber LH so that the head part (larger side) of the wiper rubber faces the arm axle side.NOTICE:

Push the front wiper blade into the grooves of the wiper rubber to engage them completely.

660CX-02