

Programming replacement keys, 1998 and up Lexus models

1. Enter the car with a working pre-programmed key and close all doors. Simultaneously depress and release both the brake and the accelerator pedals.
2. Within 5 seconds, insert the working pre-programmed key into the ignition. **Do not turn the key.**
3. Within 15 seconds of inserting the ignition key, depress and release the accelerator pedal 5 times.
4. Within 20 seconds, depress and release the brake pedal 6 times.
5. Within 10 seconds, remove the working pre-programmed key from the ignition.
6. Within 10 seconds, insert the newly cut transponder key into the ignition.
7. Depress and release the accelerator pedal one time. The security light should now begin flashing to indicate that the computer is reading the new key and programming the system.
8. Leave the new key in the ignition for at least 60 seconds. When the security light stops flashing, the programming process should be complete.
9. Start the vehicle using the new key to verify that programming was successful.