


## REPLACEMENT

1. PRECAUTION(See page 60-1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL(See page 60-1)
3. REMOVE FRONT LH SEAT ASSY(See page 72-13)
4. REMOVE FRONT RH SEAT ASSY(See page 72-13)
5. REMOVE CONSOLE PANEL UPPER FRONT(See page 71-10)
6. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER(See page 71-10)
7. REMOVE FRONT DOOR SCUFF PLATE LH(See page 76-32)
8. REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSY LOWER(See page 71-10)
9. REMOVE FRONT DOOR SCUFF PLATE RH(See page 76-32)
10. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH(See page 76-32)
11. REMOVE COWL SIDE TRIM SUB-ASSY RH(See page 71-10)
12. REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.2(See page 71-10)
13. REMOVE GLOVE COMPARTMENT DOOR ASSY(See page 71-10)
14. REMOVE FLOOR CARPET COVER CENTER LH(See page 71-10)
15. REMOVE FLOOR CARPET COVER CENTER RH(See page 71-10)
16. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER(See page 71-10)

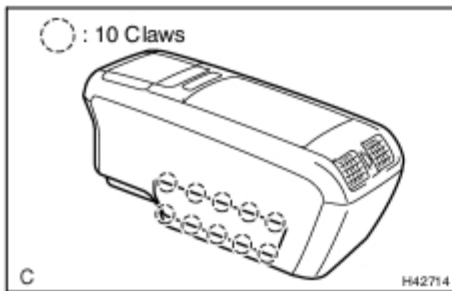

### 17. REMOVE CONSOLE BOX HOLE COVER NO.2

- (a) Using a screwdriver, remove the console box hole cover No.2.

#### HINT:


Tape up the screwdriver tip before use.

### 18. REMOVE CONSOLE BOX HOLE COVER

- (a) Using a screwdriver, remove the console box hole cover.

#### HINT:

Tape up the screwdriver tip before use.

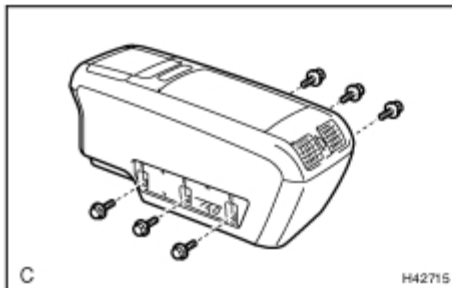

### 19. REMOVE CONSOLE BOX ASSY

- (a) Remove the 6 bolts.
- (b) Disconnect the console box slide cable.
- (c) Remove the clamp and disconnect the connector, and then remove the console box assy.



### 20. REMOVE CONSOLE COVER LOWER

- (a) Remove the 2 screws.
- (b) Disconnect the connector and remove the console cover lower.