


21. REMOVE CONSOLE BOX DUCT NO.1
22. REMOVE AIR DUCT REAR NO.2(See page 55-17)
23. REMOVE AIR DUCT REAR NO.1(See page 55-17)

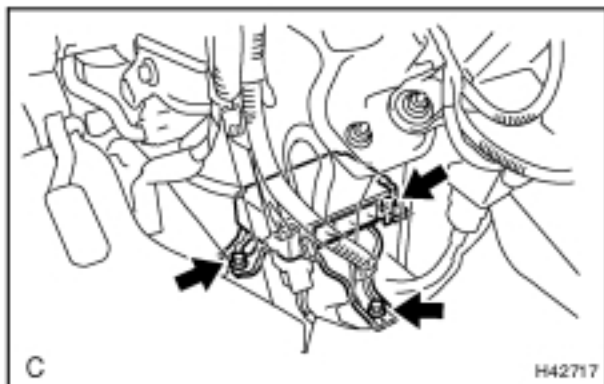

24. REMOVE AIR BAG SENSOR ASSY CENTER
 - (a) Disconnect the 3 connectors from the airbag sensor assy center.
 - (b) Remove the 3 bolts and the airbag sensor assy center.

25. INSTALL AIR BAG SENSOR ASSY CENTER

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

NOTICE:

Do not start the operation for 90 seconds after removing the terminal.

- (c) Temporarily install the airbag sensor assy center with the 3 bolts.

NOTICE:

- If the airbag sensor assy center has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace the airbag sensor assy center with a new one.
- When installing the airbag sensor assy center, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.

- (d) Tighten the 3 bolts to the specified torque.

Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

- (e) Connect the connectors of the airbag sensor assy center.
- (f) Check that no play is identified.
- (g) Check that the water-proof sheet is properly set.

26. INSTALL FRONT LH SEAT ASSY(See page 72-13)
27. INSTALL FRONT RH SEAT ASSY(See page 72-13)
28. OCCUPANT CLASSIFICATION ECU INITIALIZATION (See page 05-876)
29. INSPECT SRS WARNING LIGHT(See page 05-876)