



F RELAY LOCATIONS


[Engine Compartment]

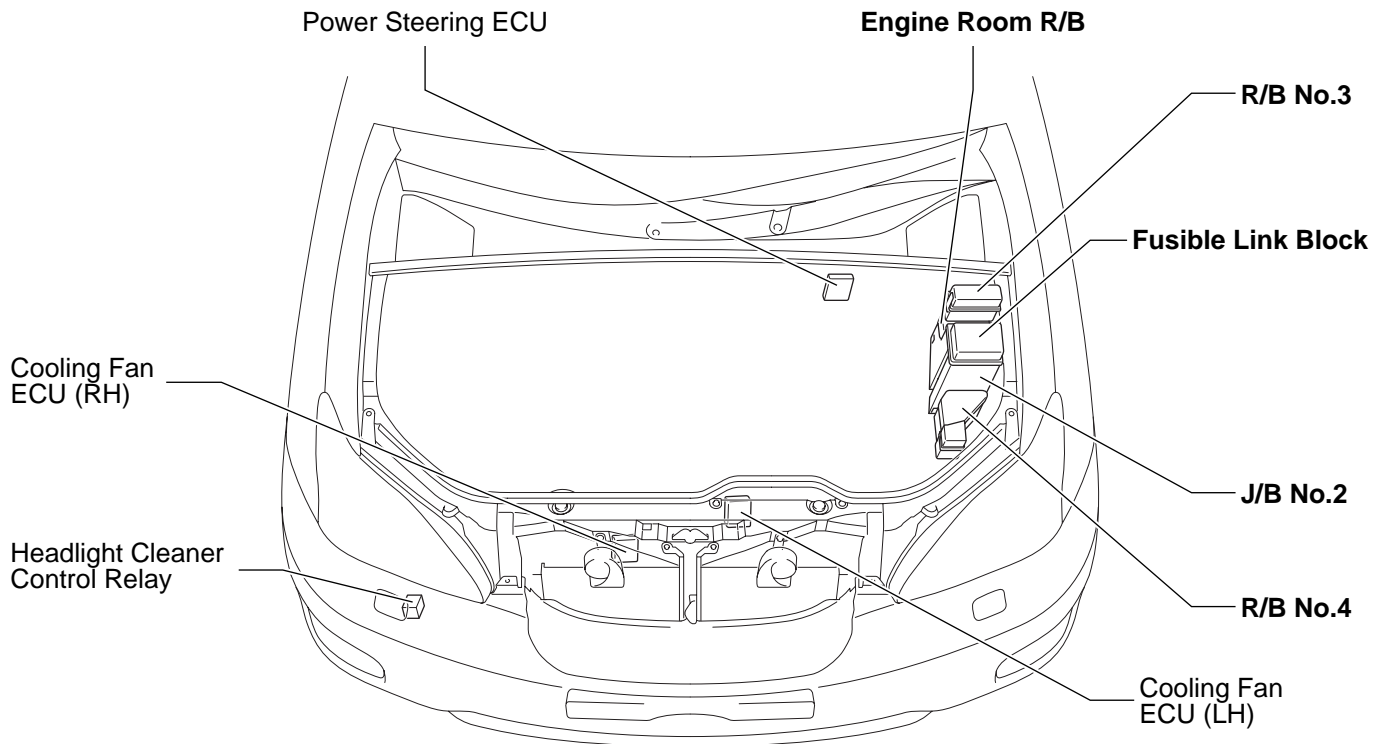

[Instrument Panel]

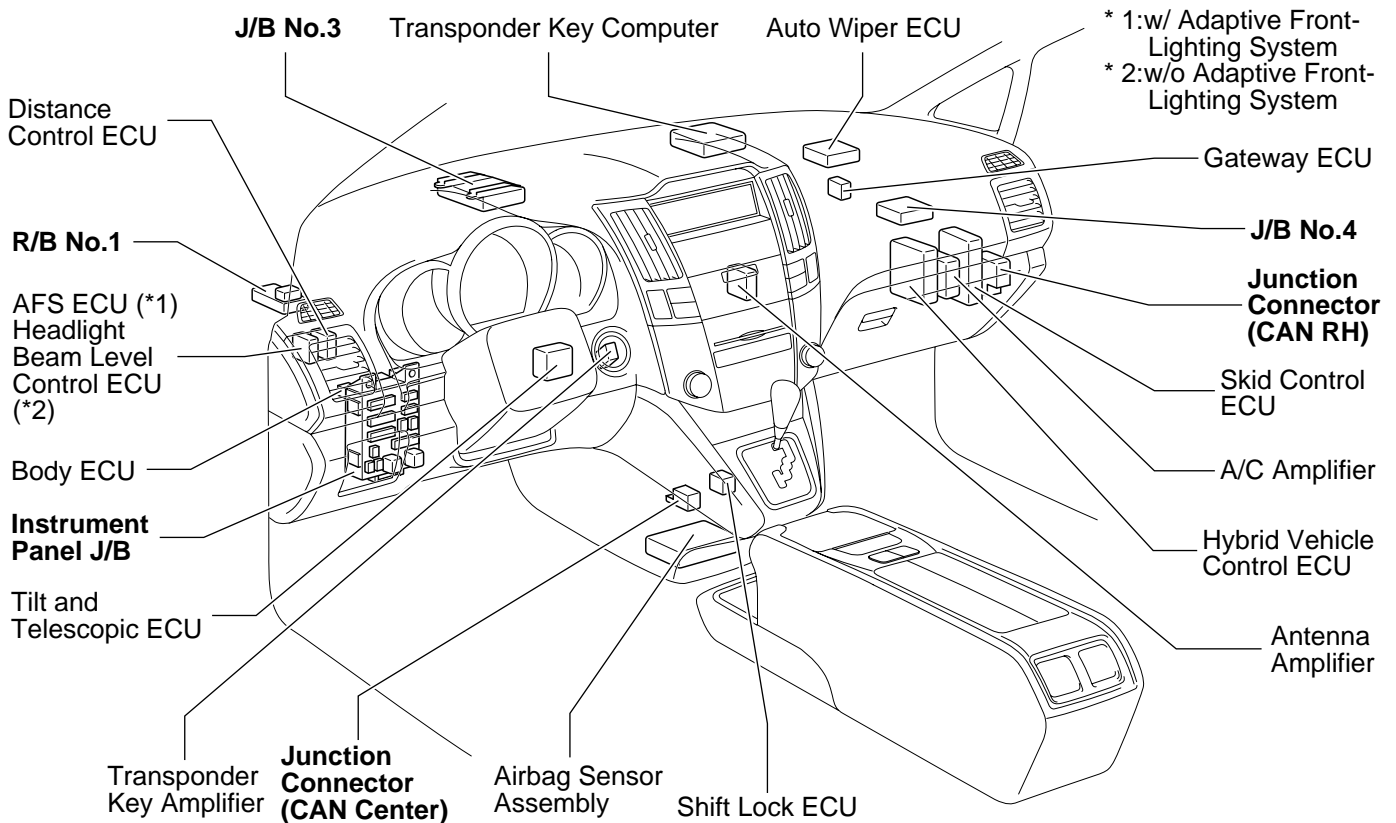


[Body]

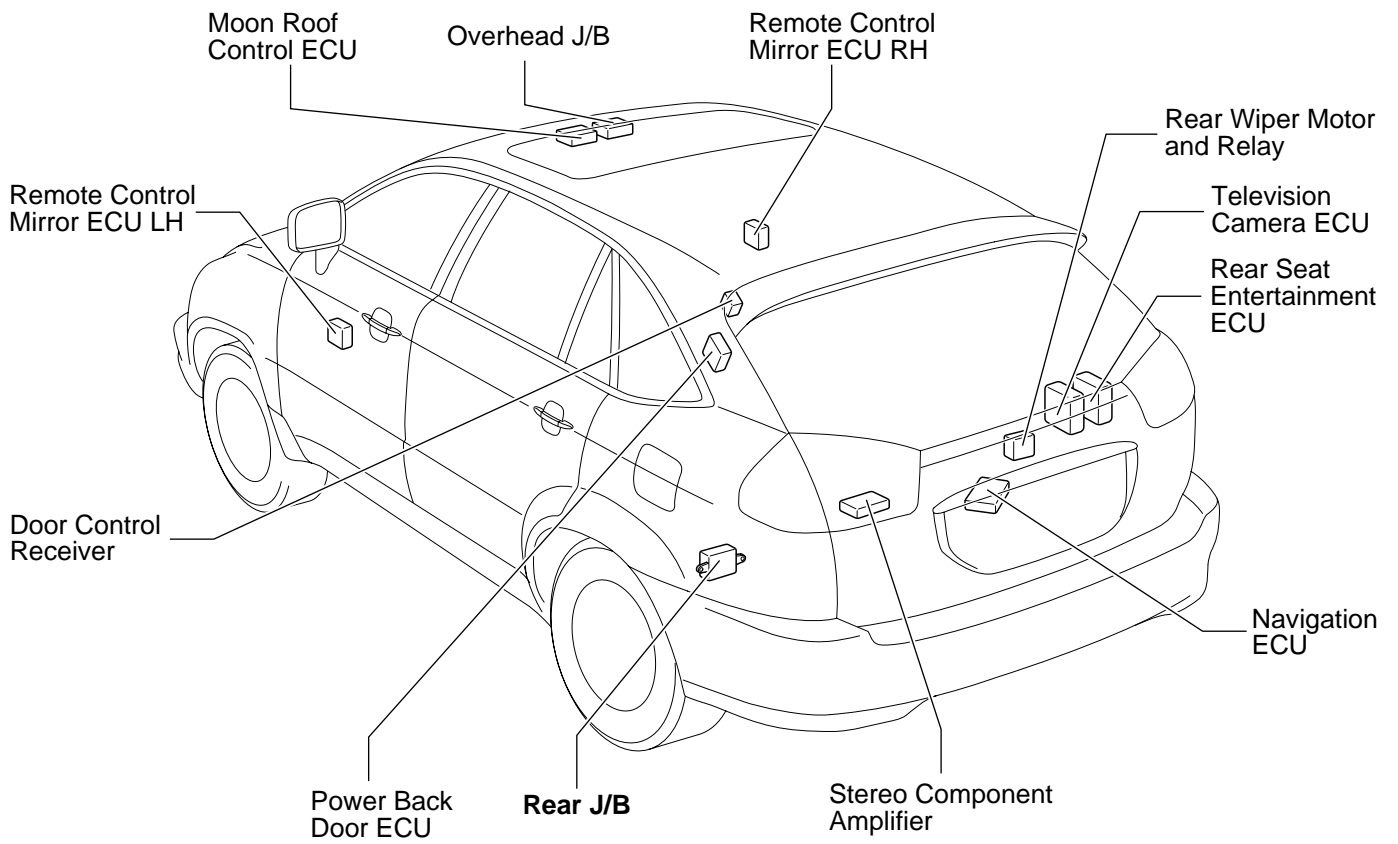


F RELAY LOCATIONS


[Front Seat]

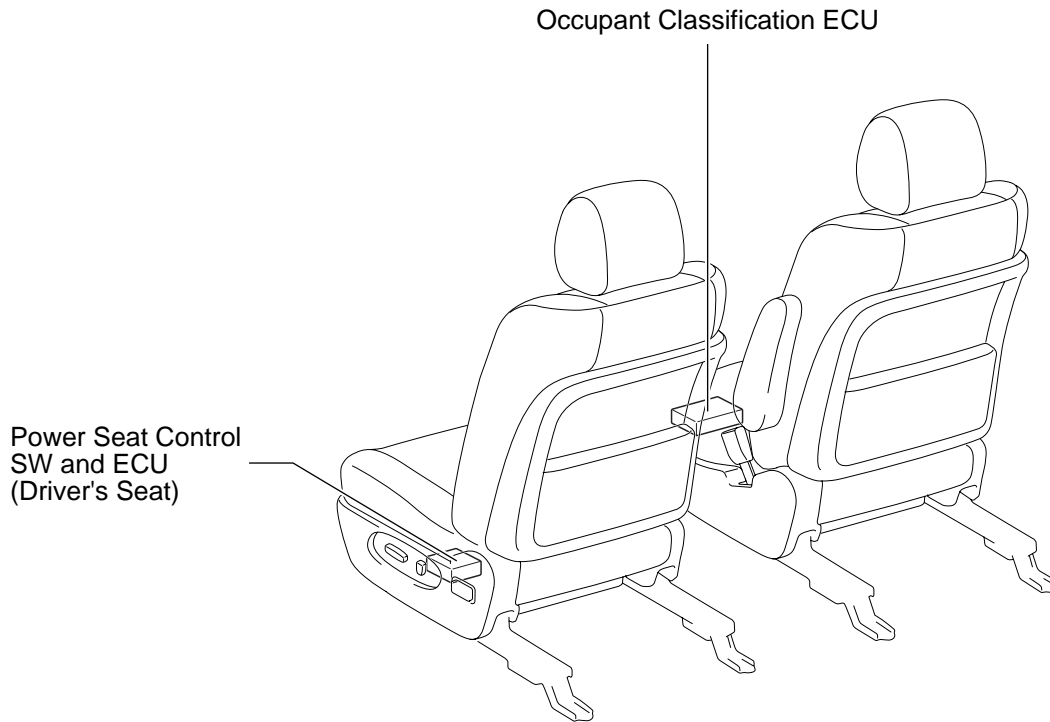

[Rear Seat]

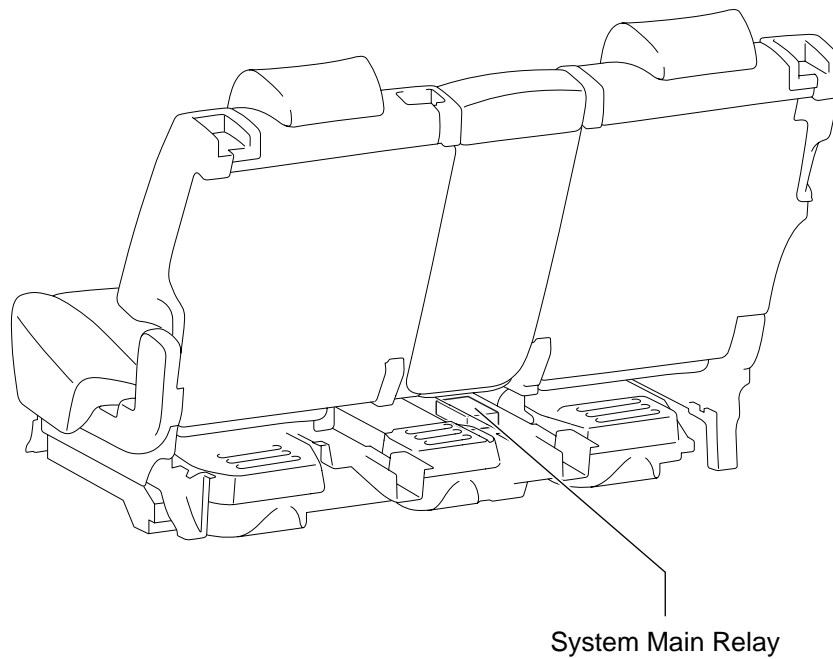


② : Engine Room R/B Engine Compartment Left (See Page 20)

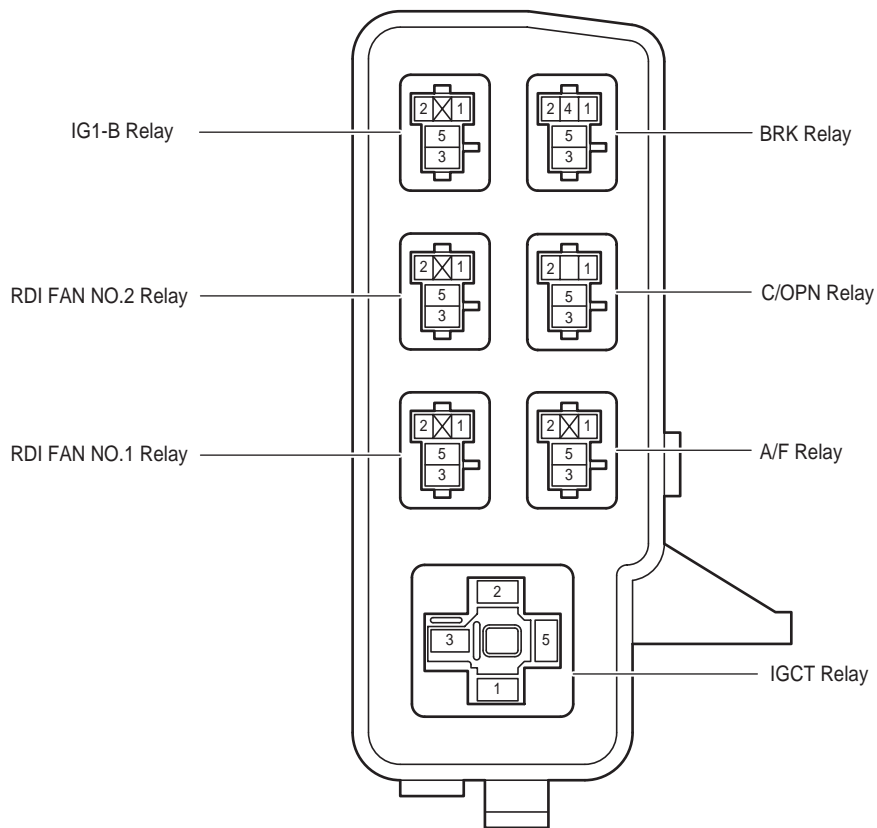


F RELAY LOCATIONS


① : R/B No.1 Cowl Side Panel LH (See Page 20)

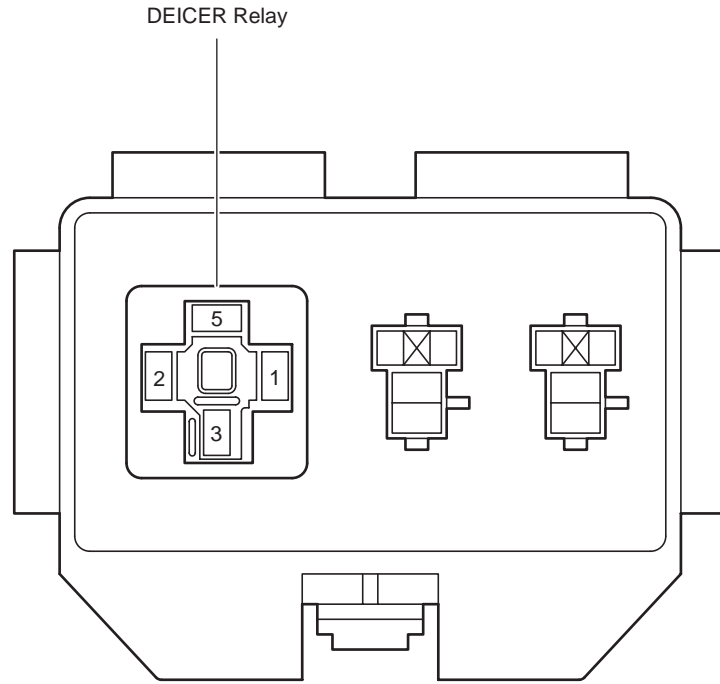

③ : R/B No.3 Engine Compartment Left (See Page 20)

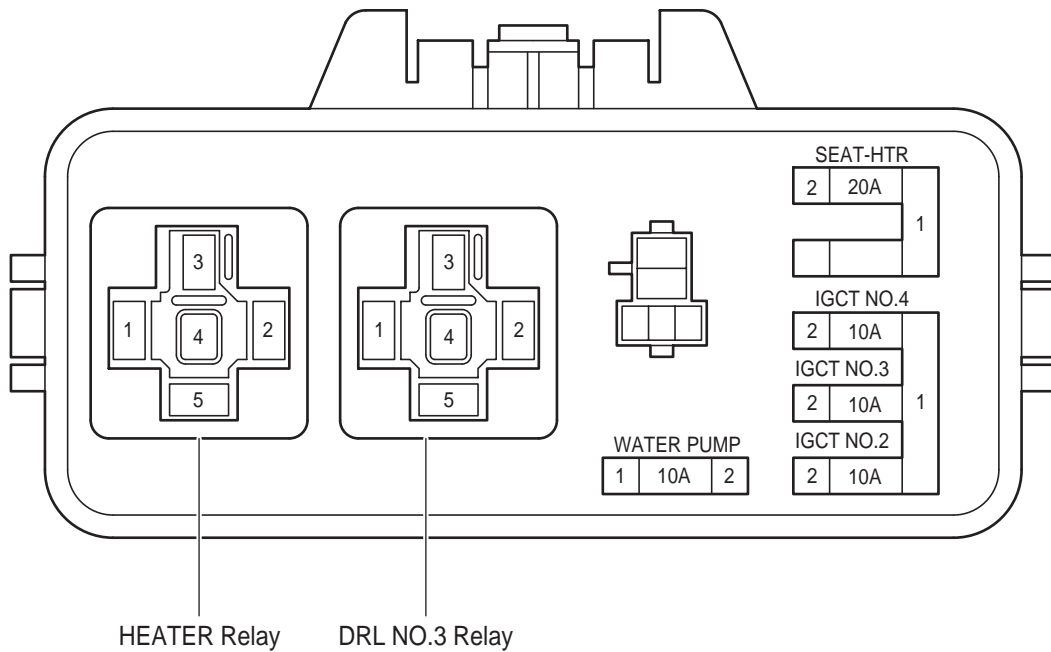



④ : R/B No.4 Engine Compartment Left (See Page 20)

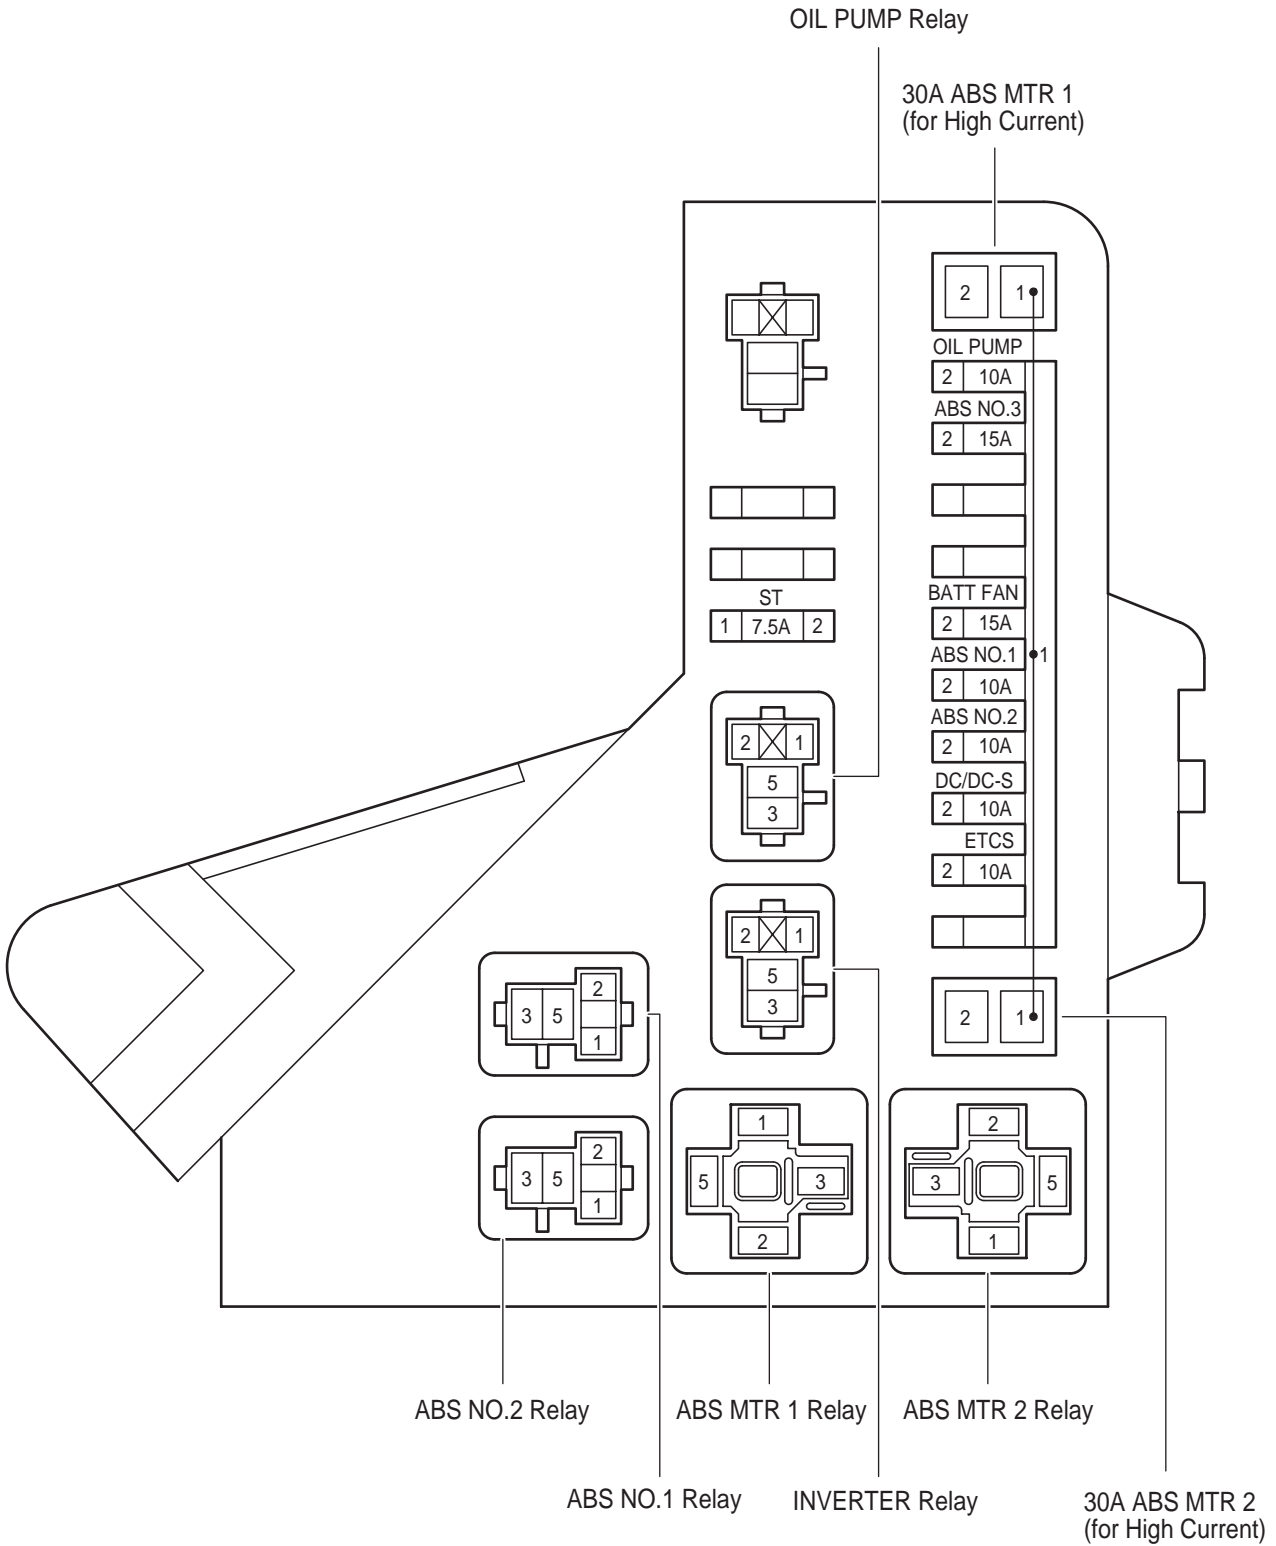

F RELAY LOCATIONS


○ : Instrument Panel J/B Lower Finish Panel (See Page 20)

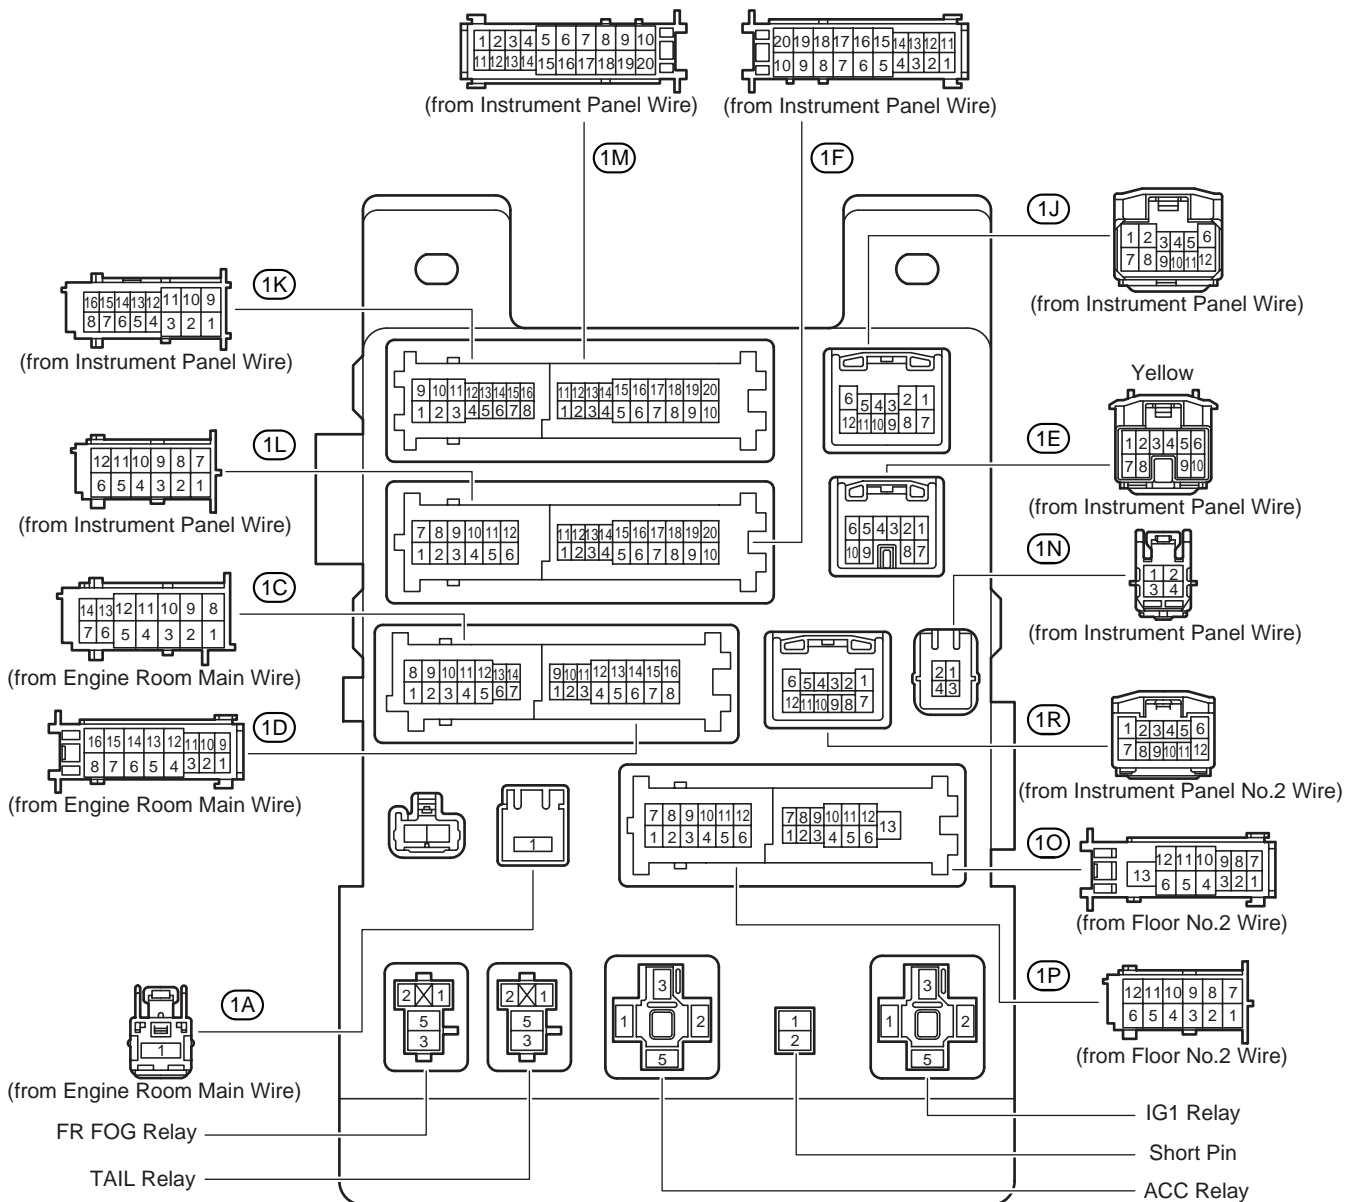

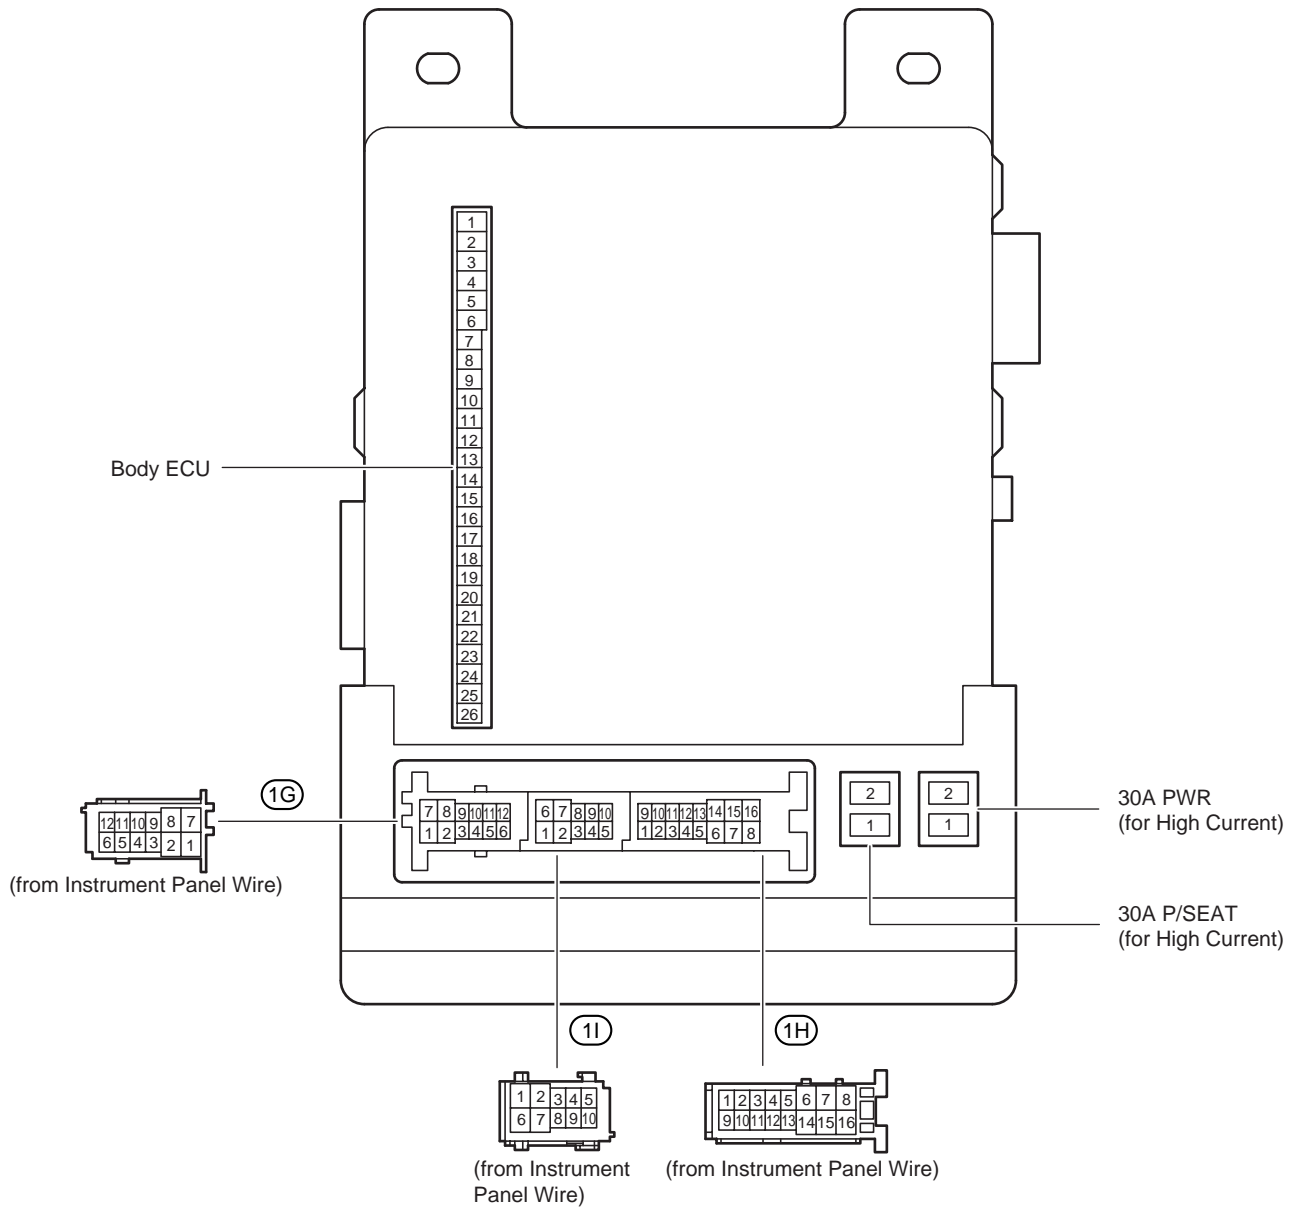


F RELAY LOCATIONS

○ : Instrument Panel J/B Lower Finish Panel (See Page 20)

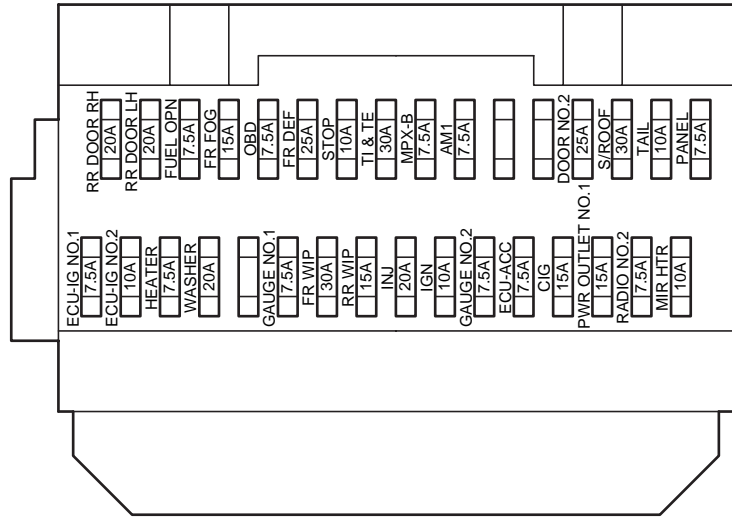

[Instrument Panel J/B Inner Circuit]

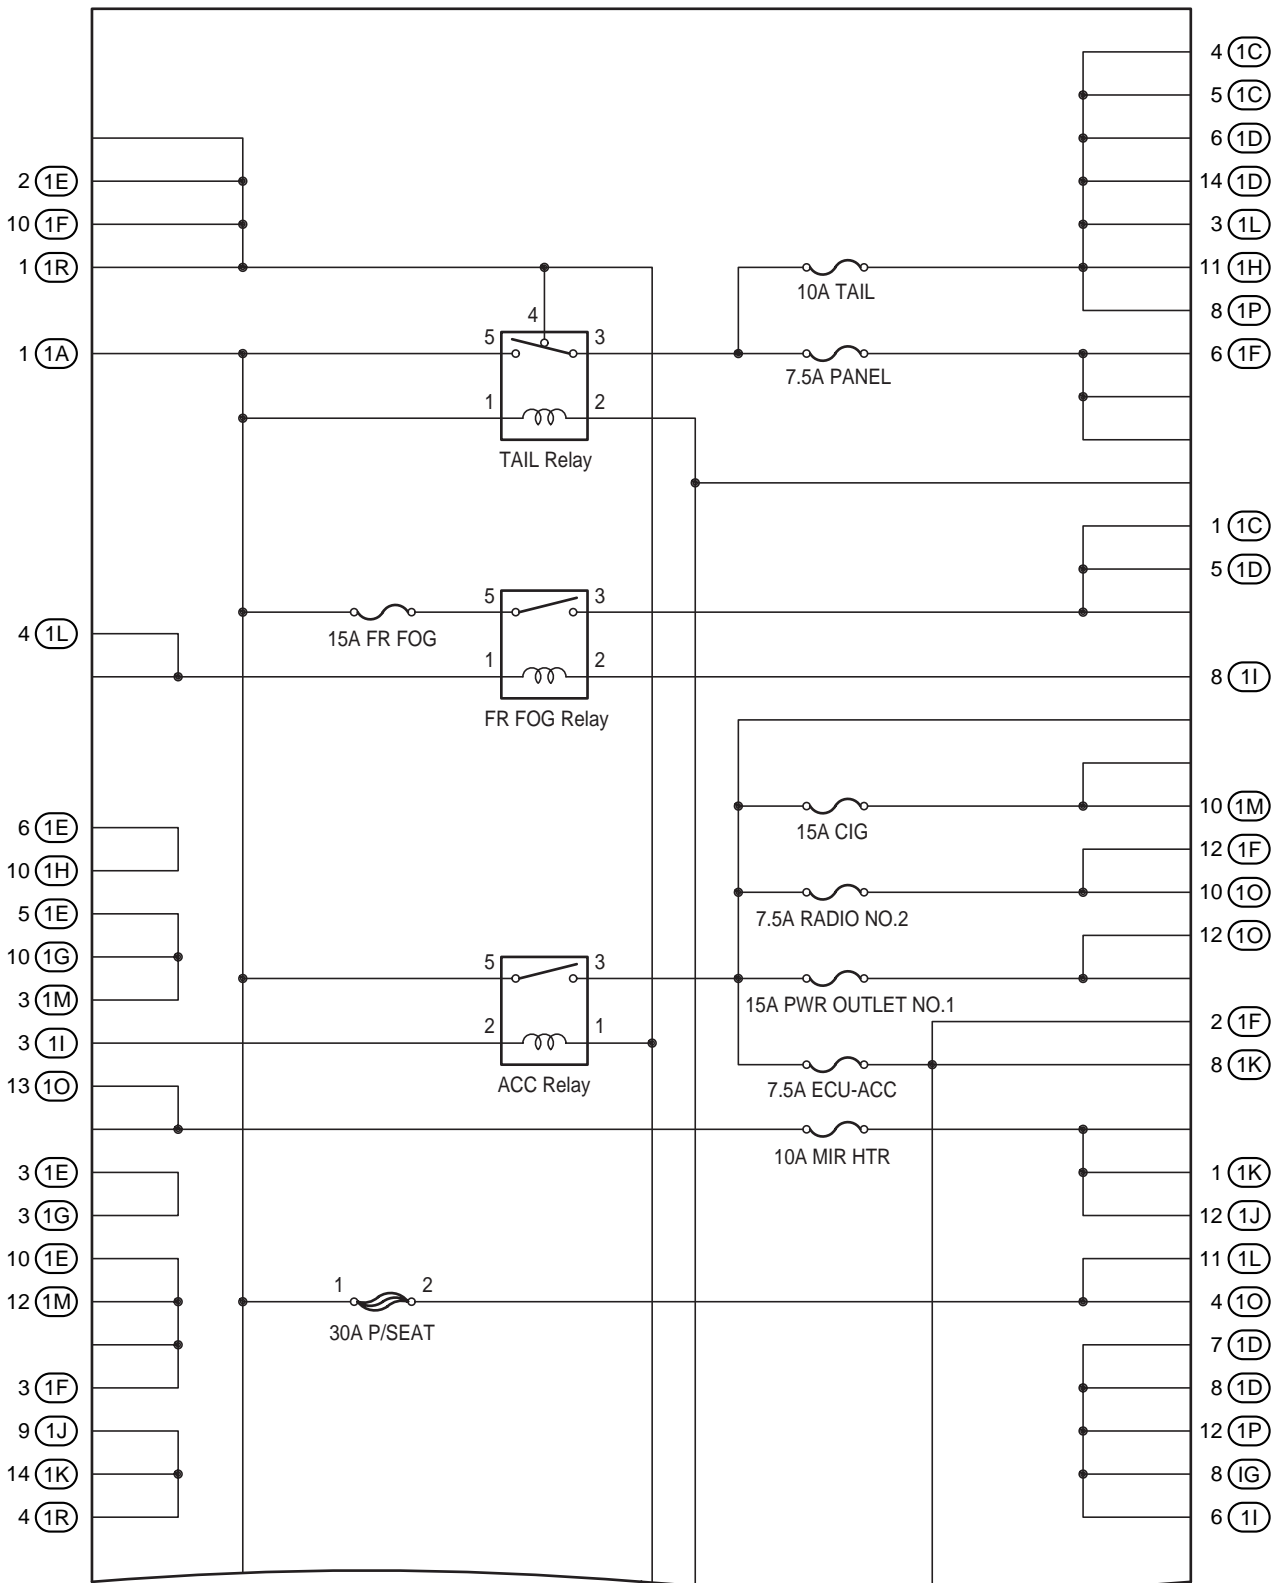


(Cont. Next Page)

F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]


(Cont'd)

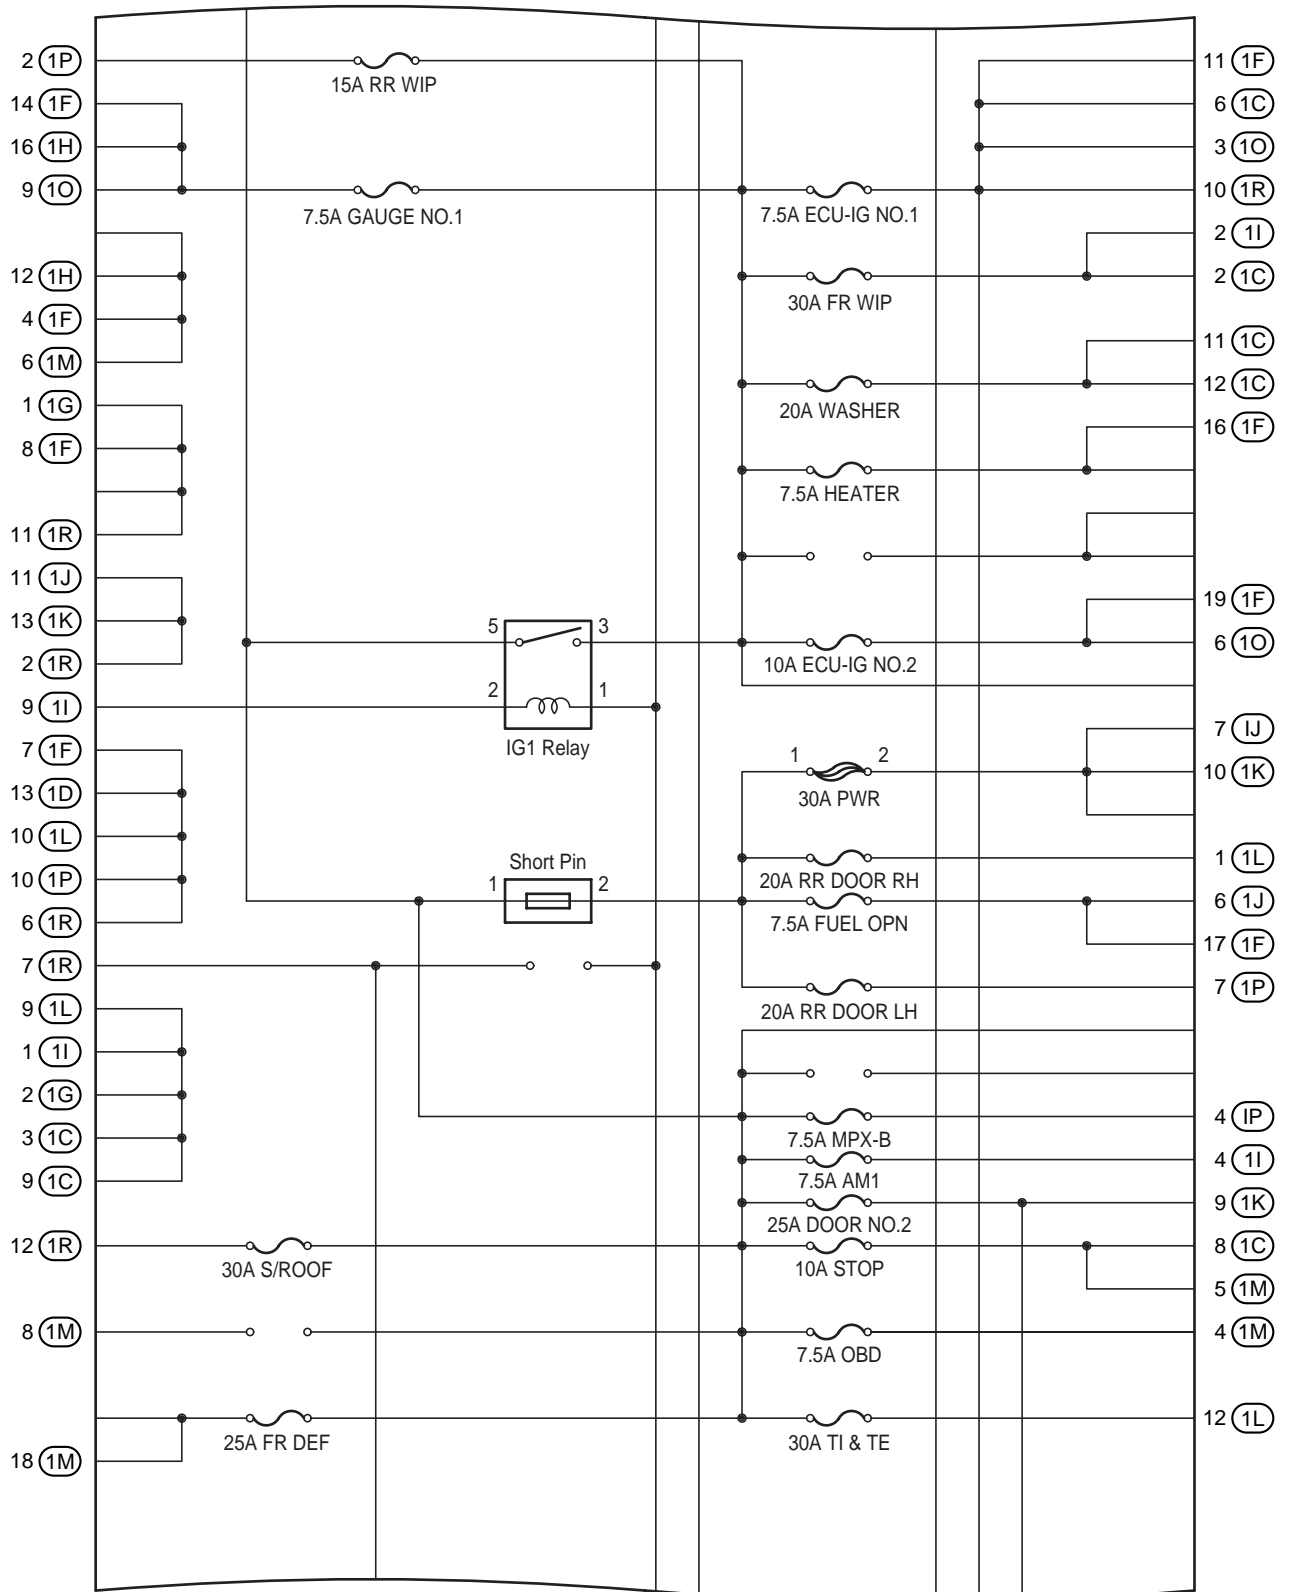


(Cont. Next Page)

F RELAY LOCATIONS

○ : J/B No.2 Engine Compartment Left (See Page 20)

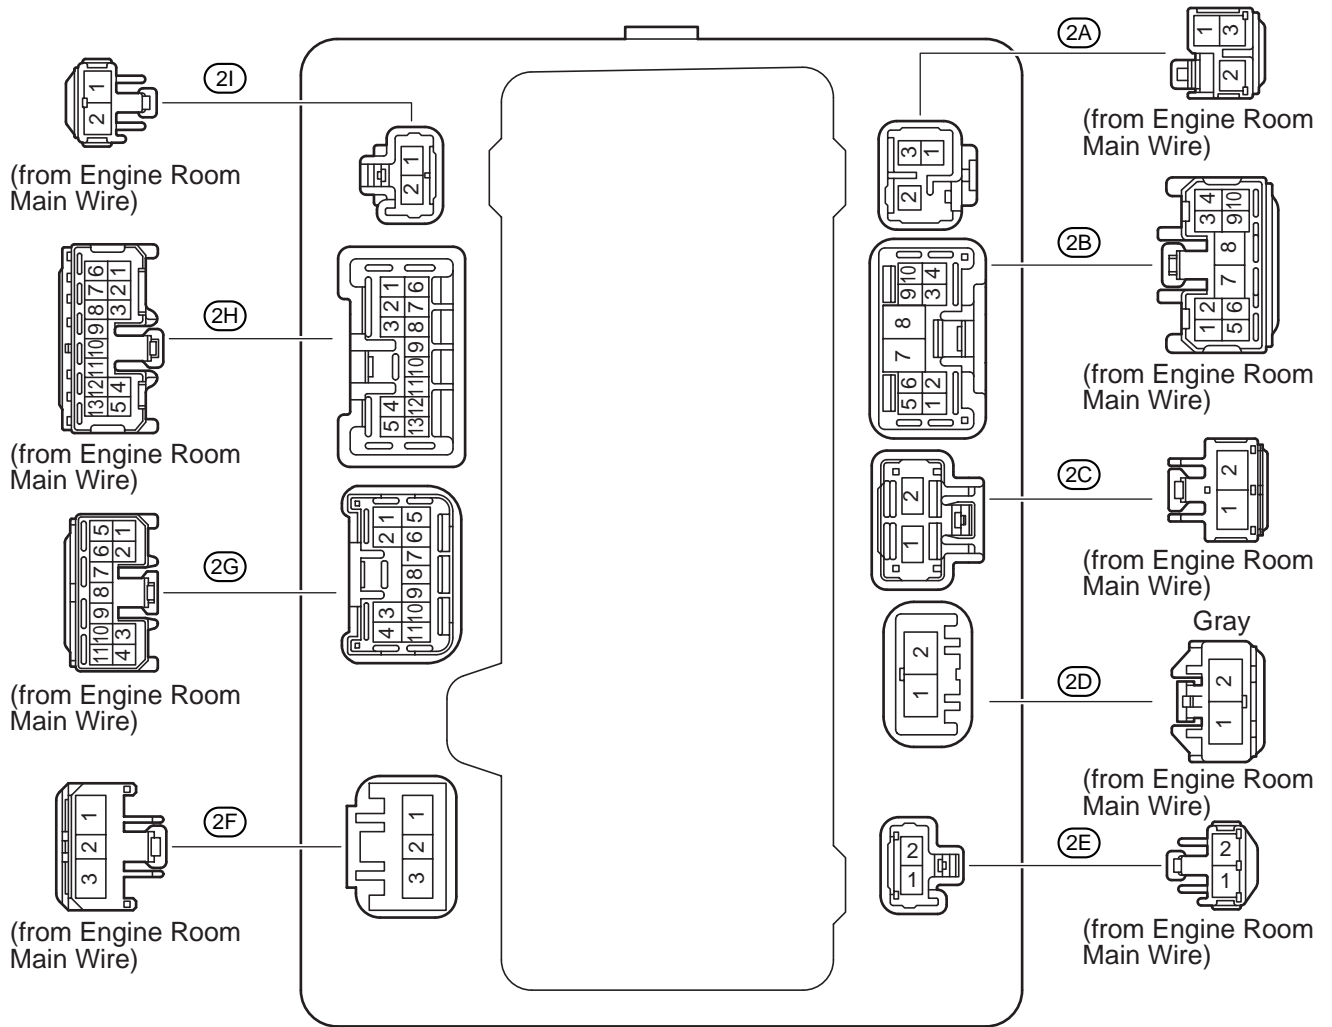


[J/B No.2 Inner Circuit]

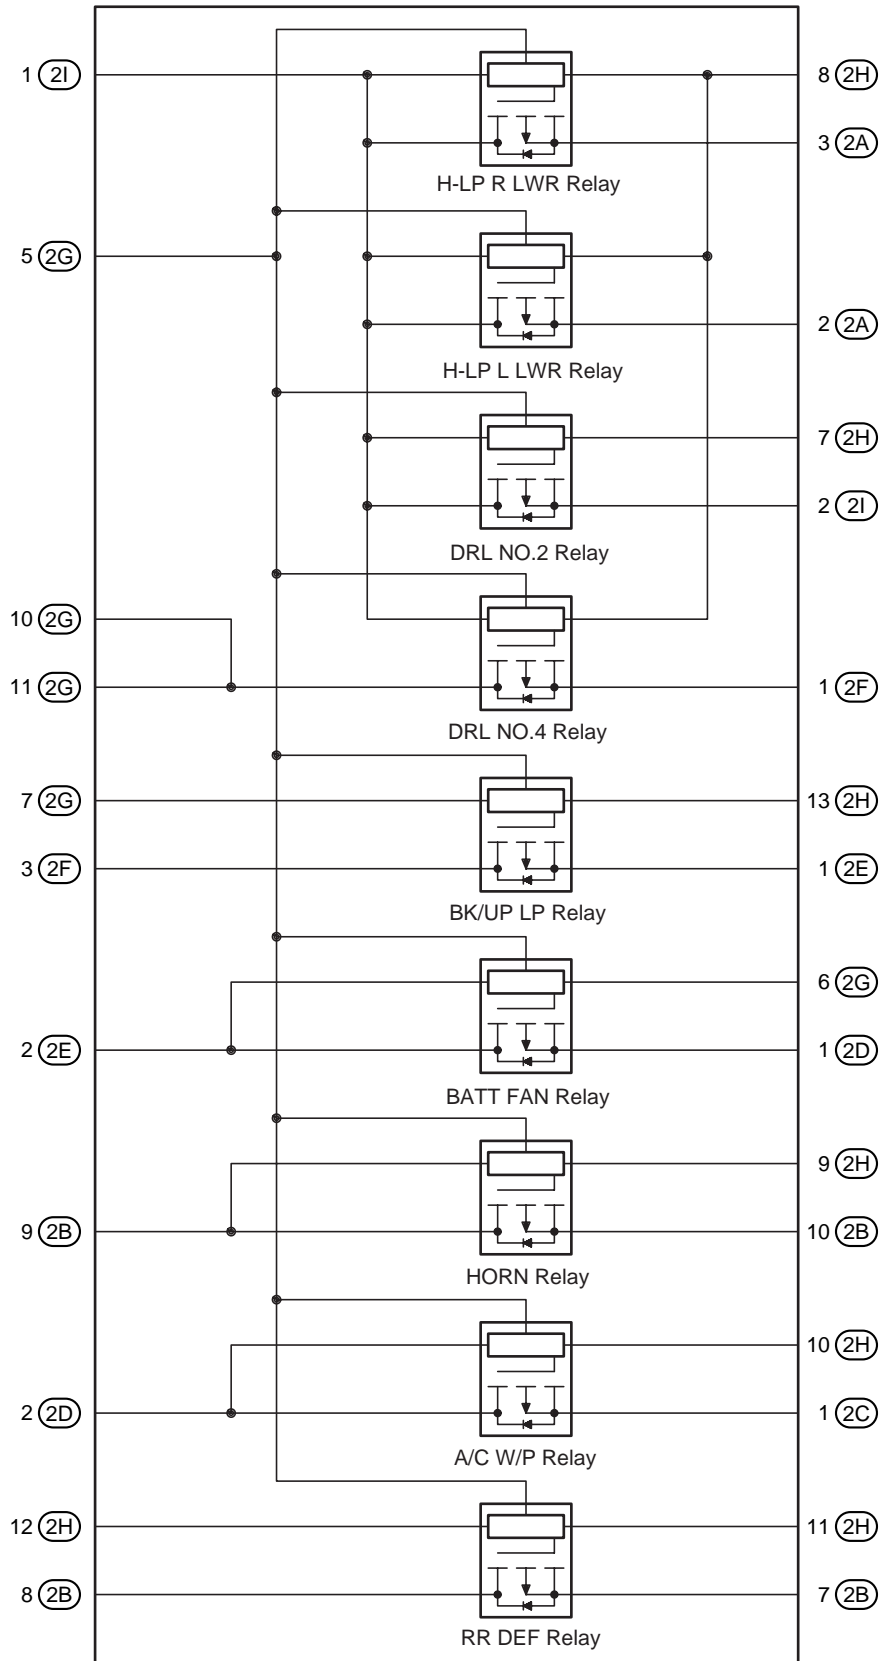


F RELAY LOCATIONS

○ : J/B No.3 Behind the Combination Meter (See Page 20)

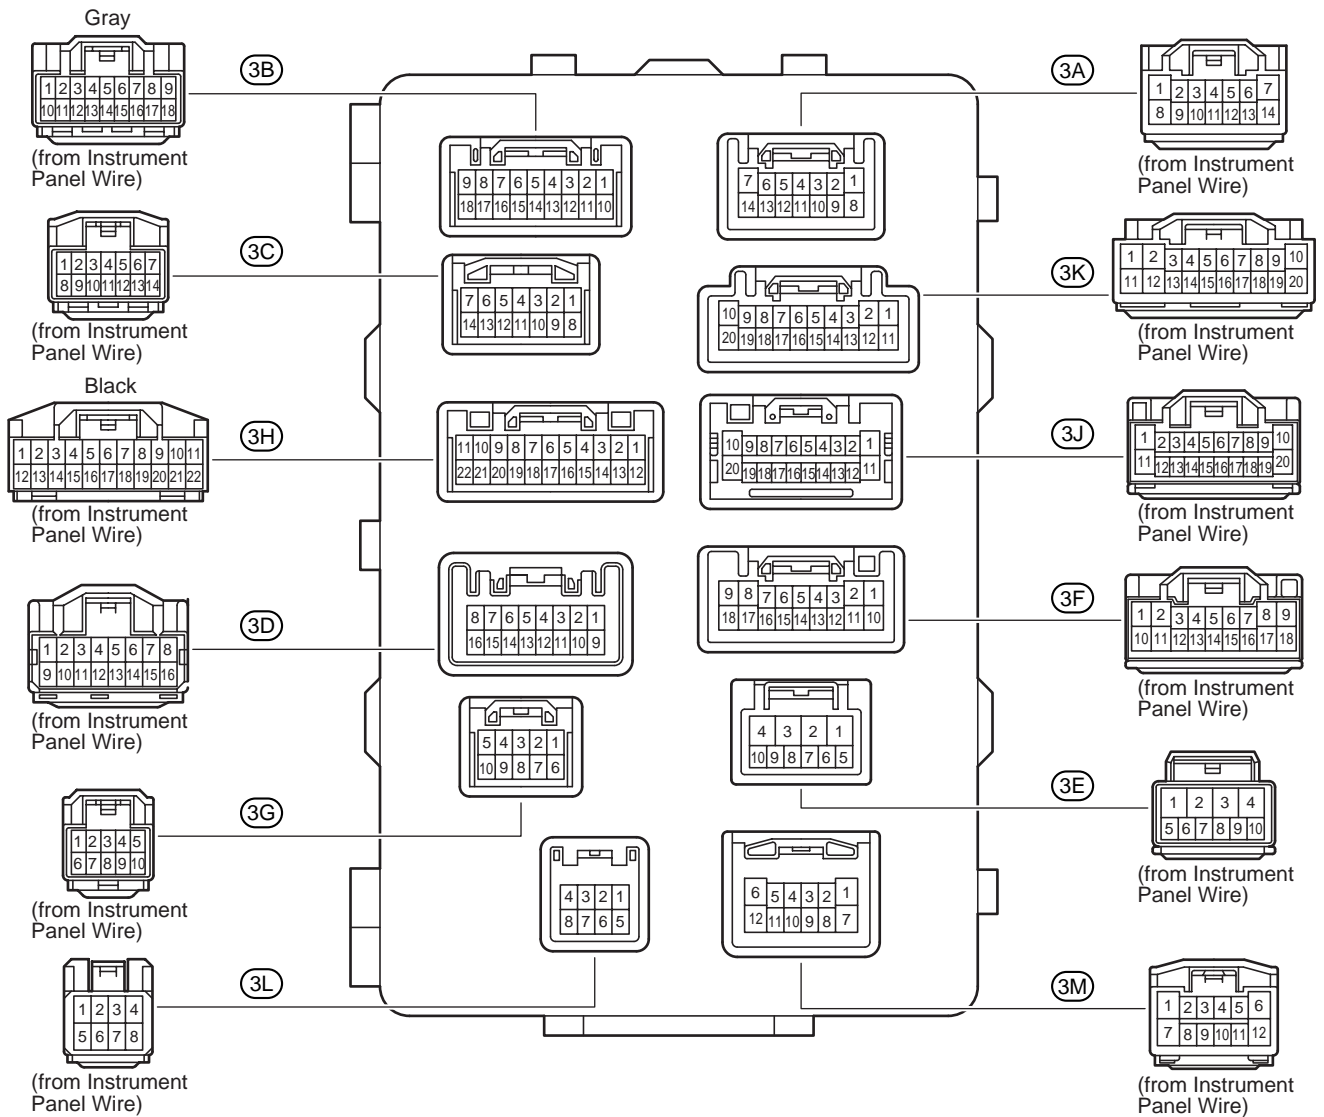

[J/B No.3 Inner Circuit]

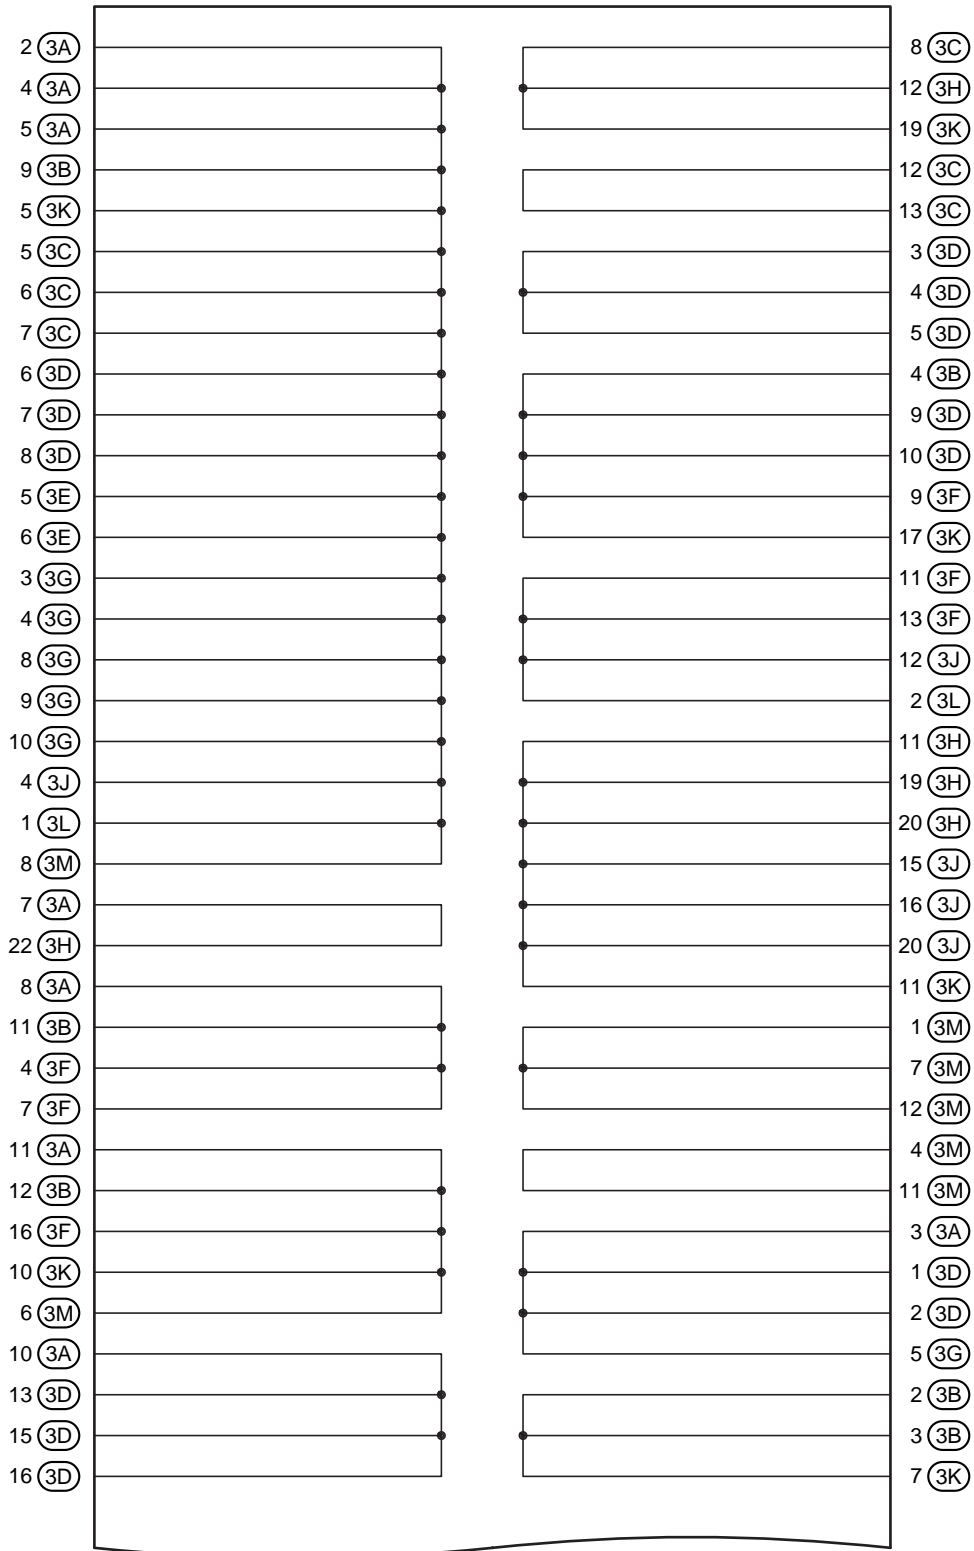


(Cont. next page)

F RELAY LOCATIONS


[J/B No.3 Inner Circuit]

(Cont' d)

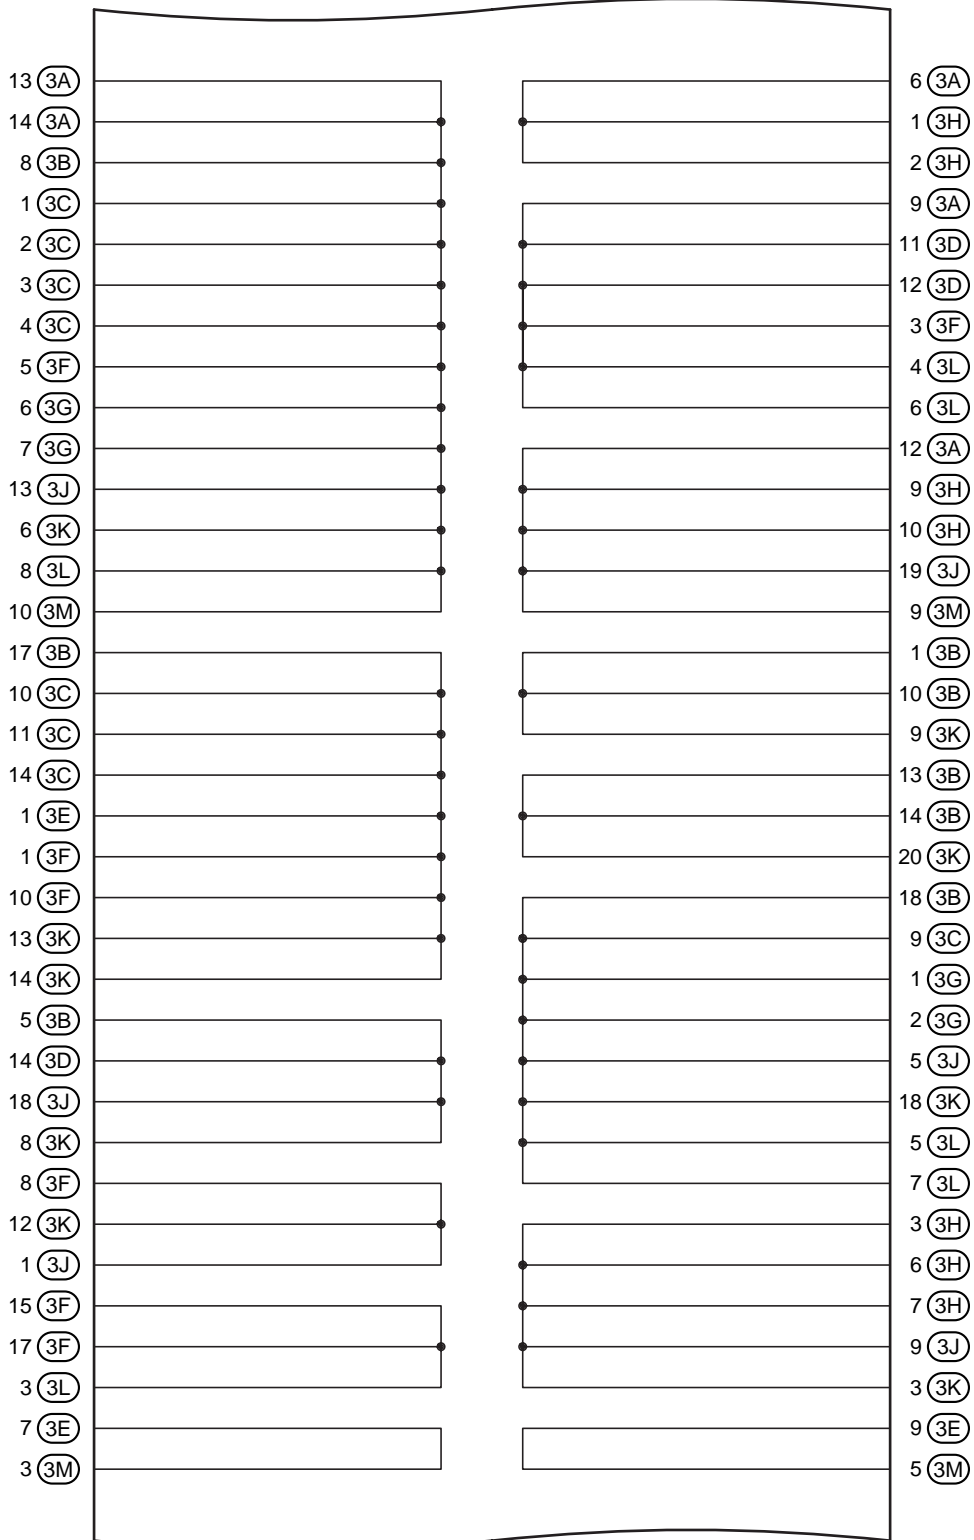


(Cont. next page)


(Cont' d)

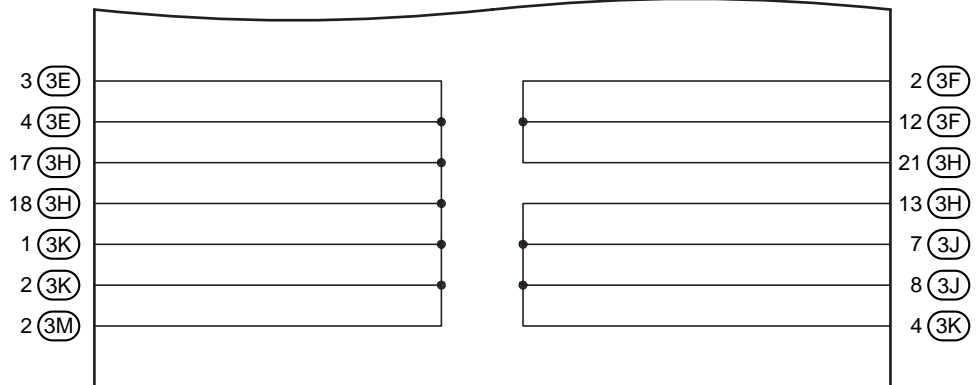

F RELAY LOCATIONS


○ : J/B No.4 Behind the Glove Box (See Page 20)

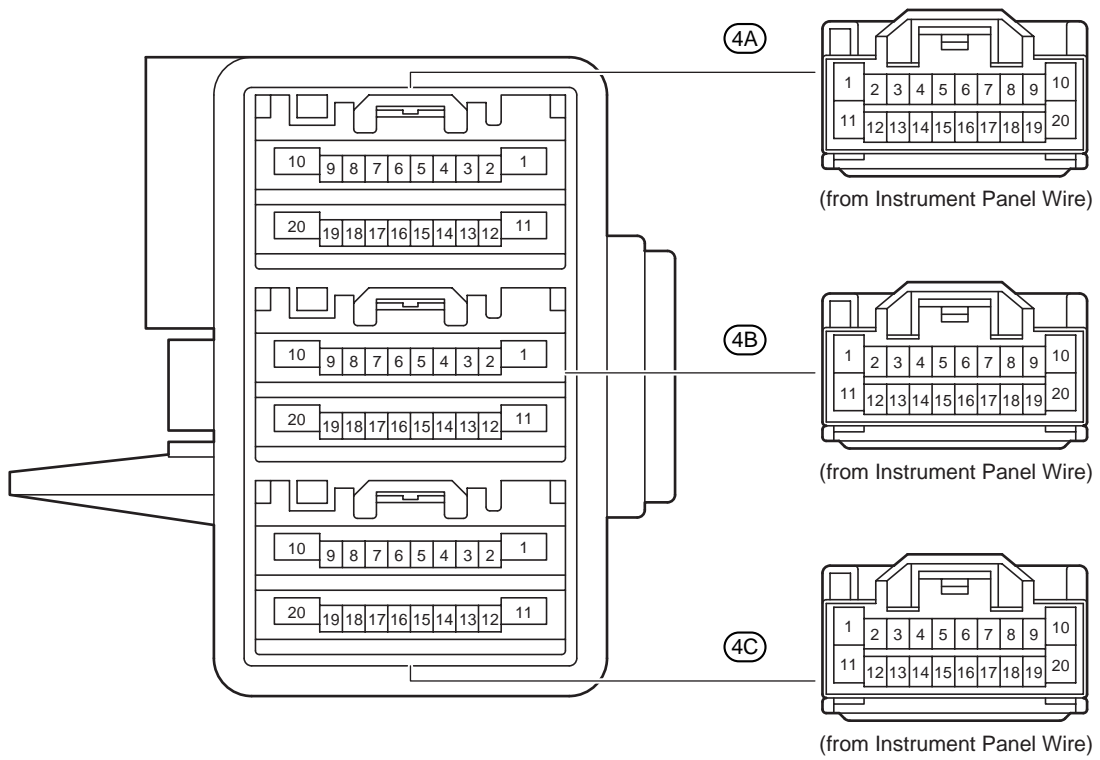

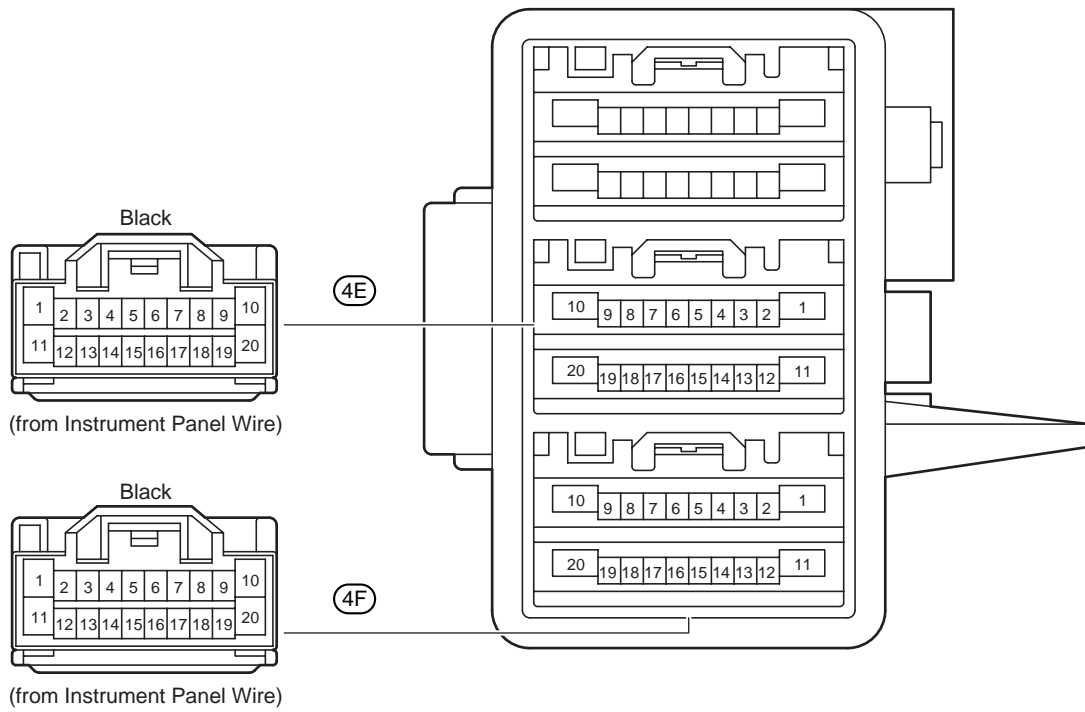


F RELAY LOCATIONS

[J/B No.4 Inner Circuit]

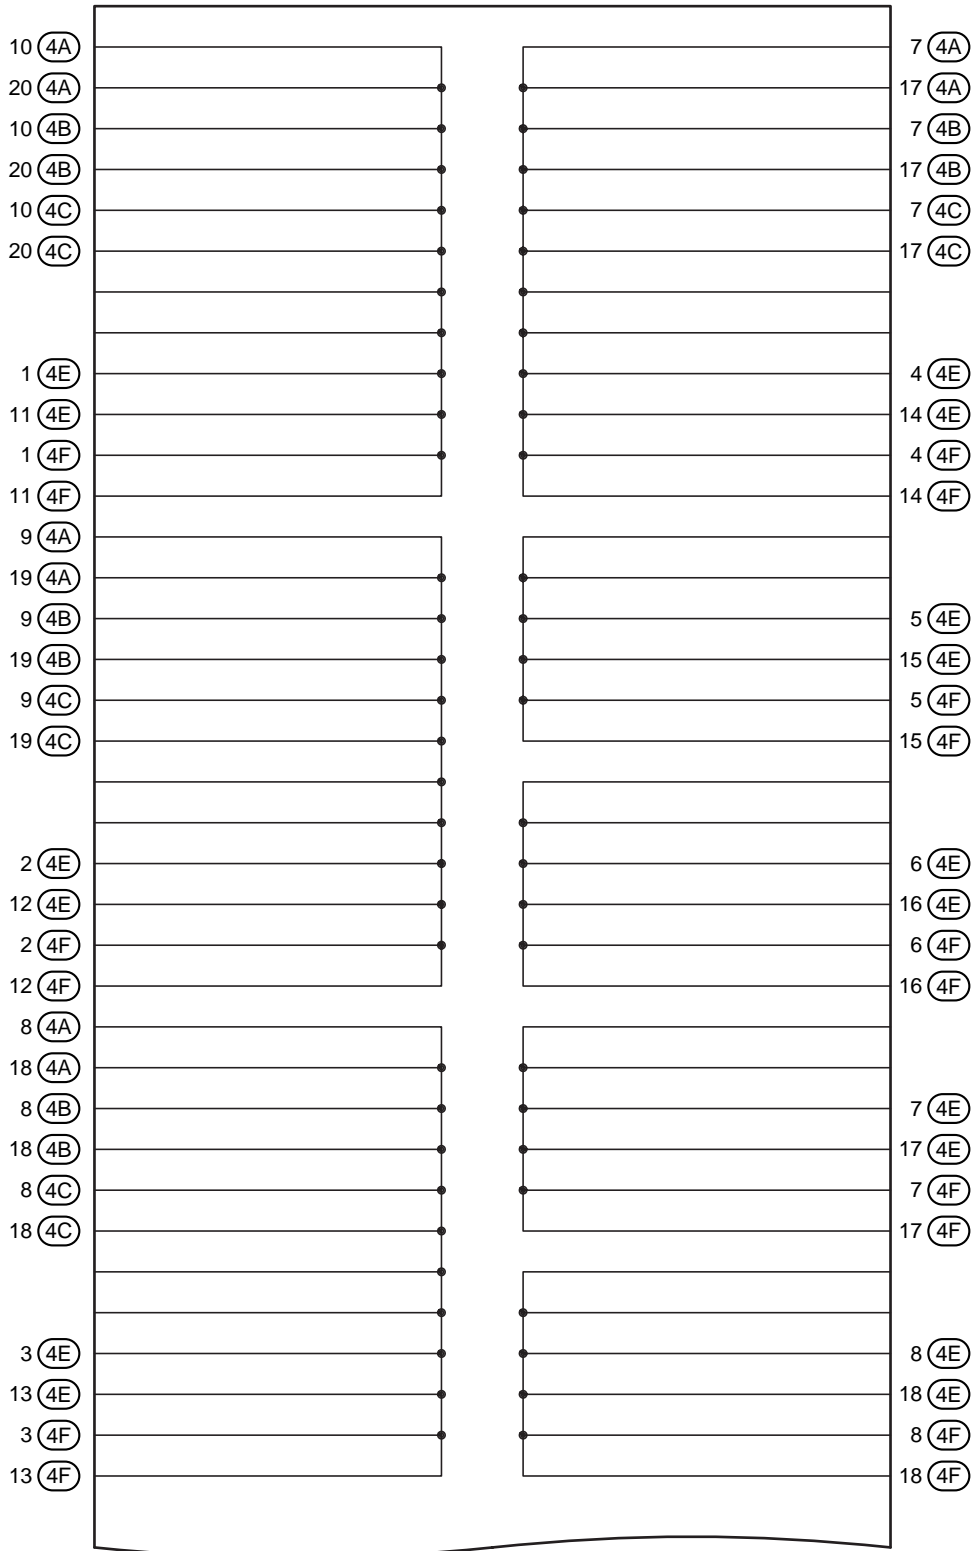


(Cont. next page)

(Cont' d)

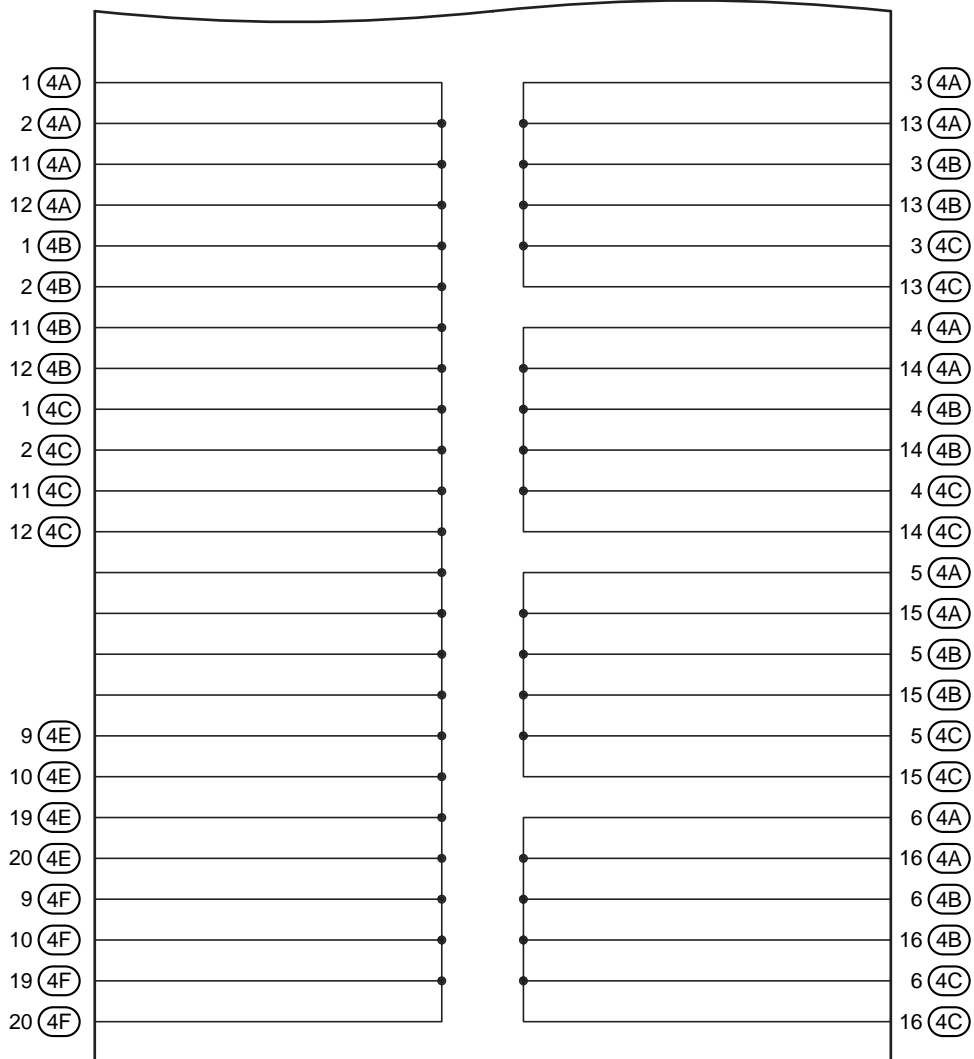


F RELAY LOCATIONS

○ : Rear J/B Left Rear Quarter Panel (See Page 21)

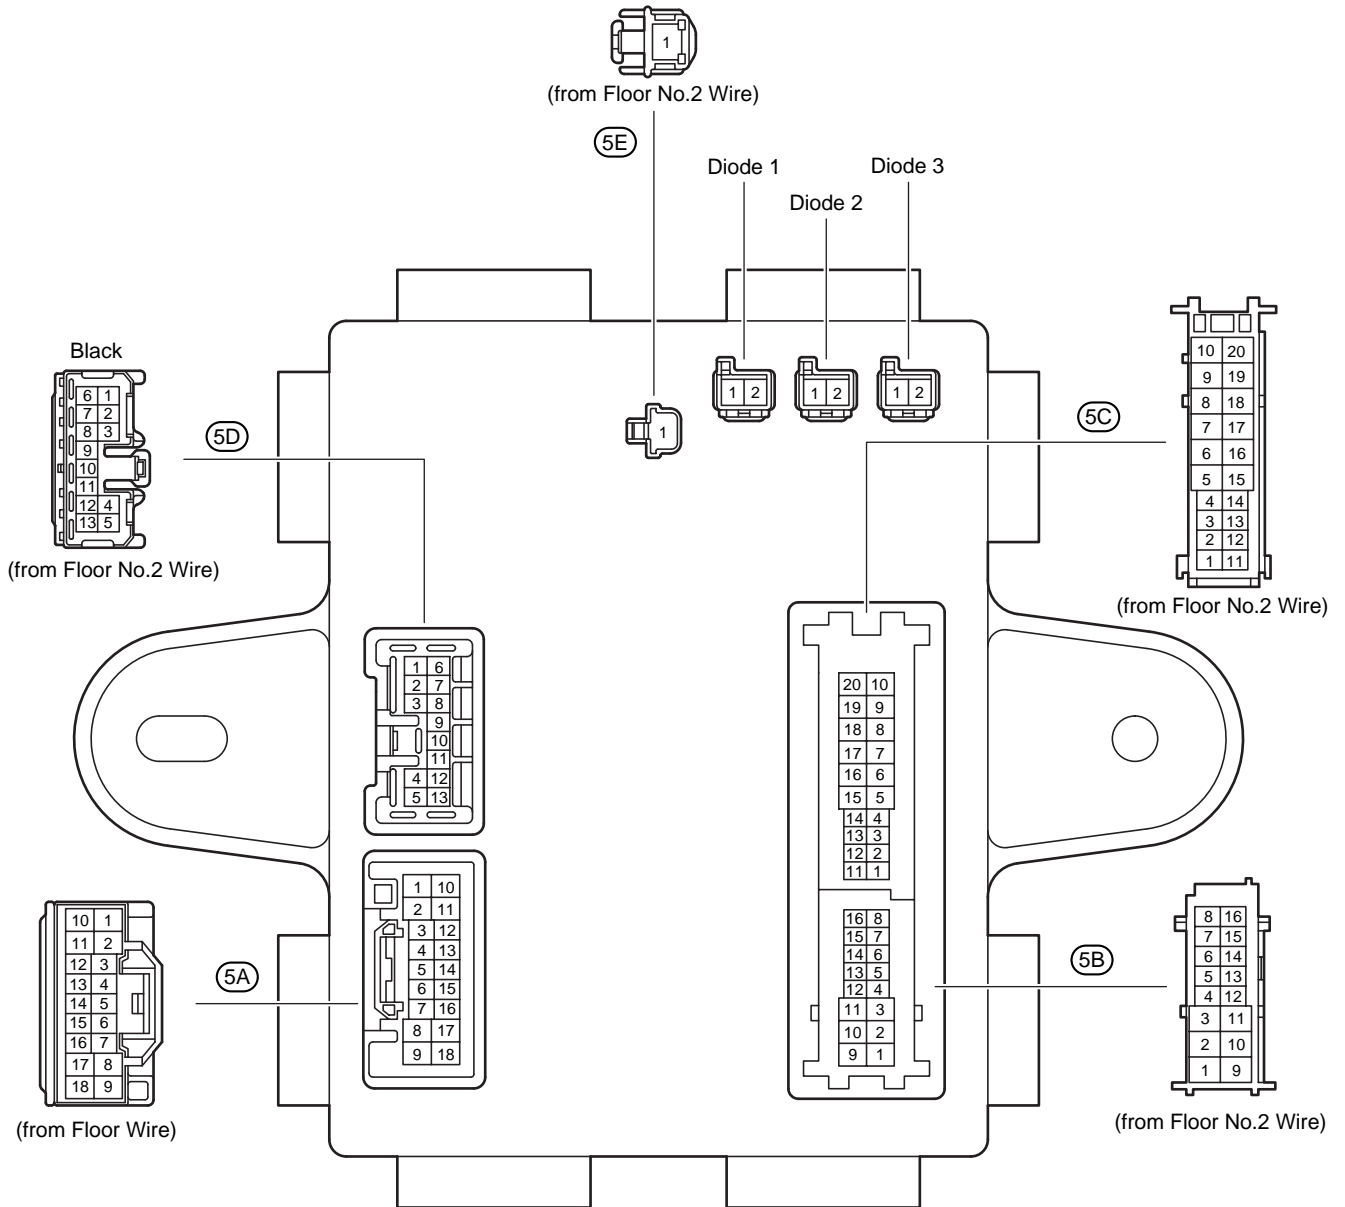


[Rear J/B Inner Circuit]

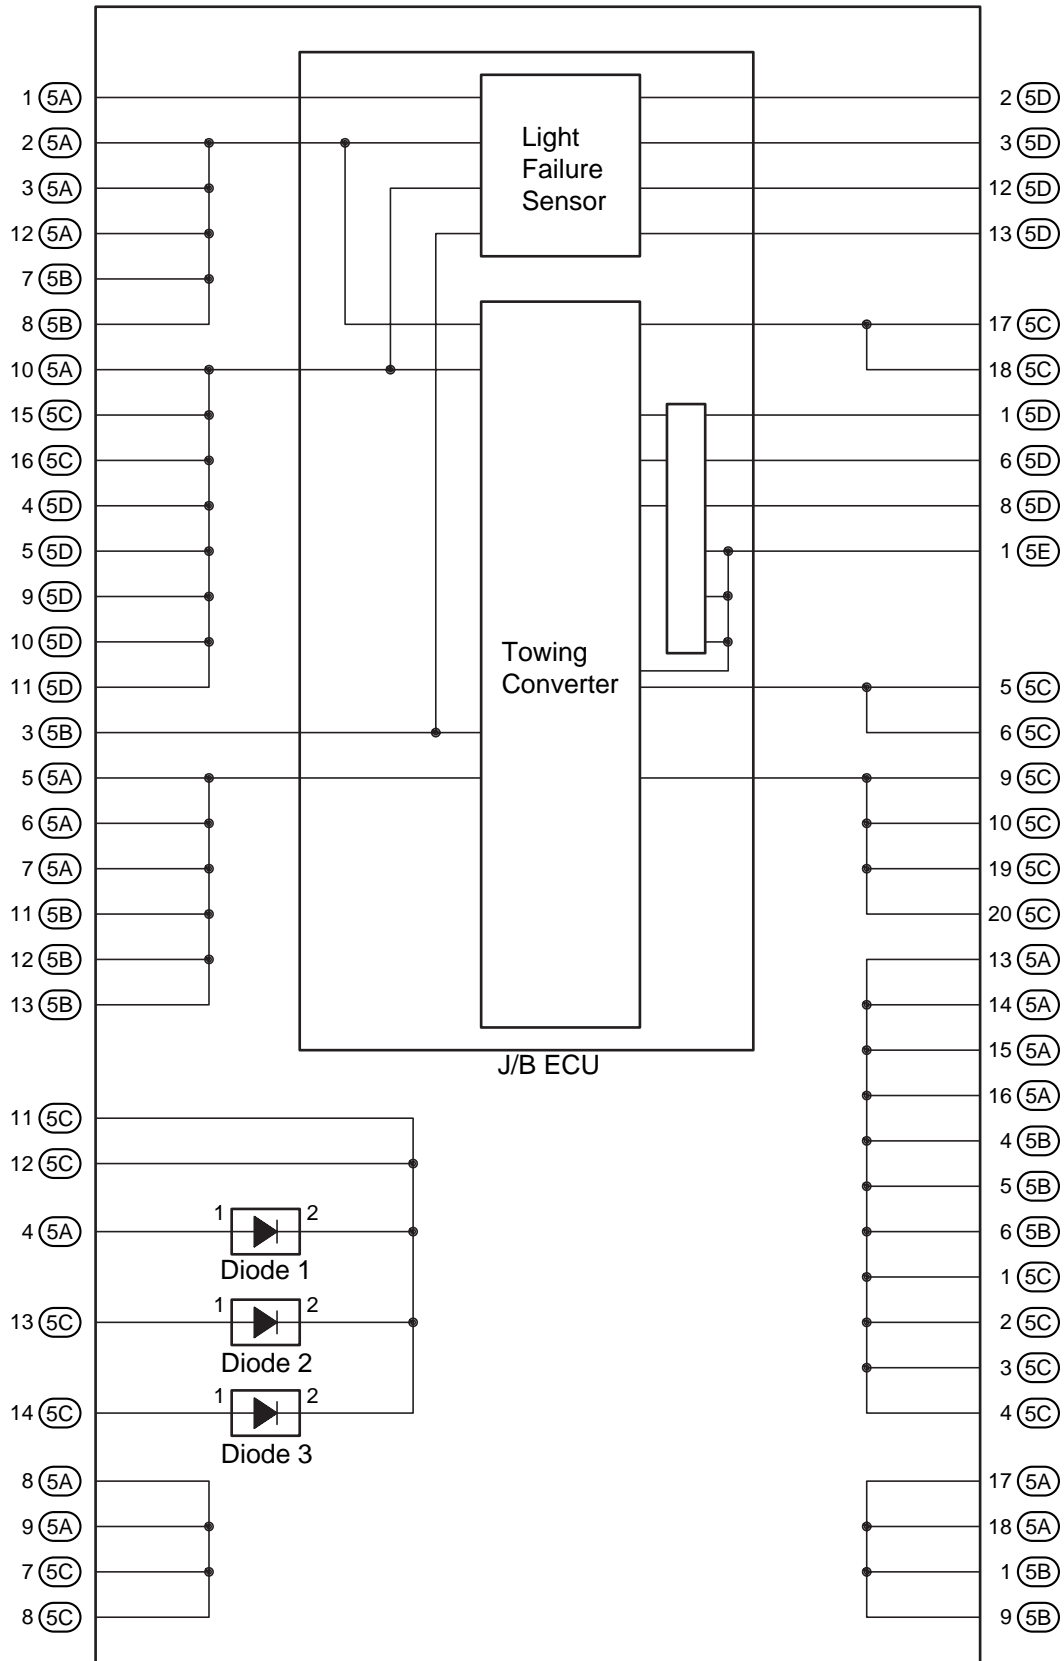

F RELAY LOCATIONS


Junction Connector
(CAN Center)

Instrument Panel Brace LH (See Page 20)

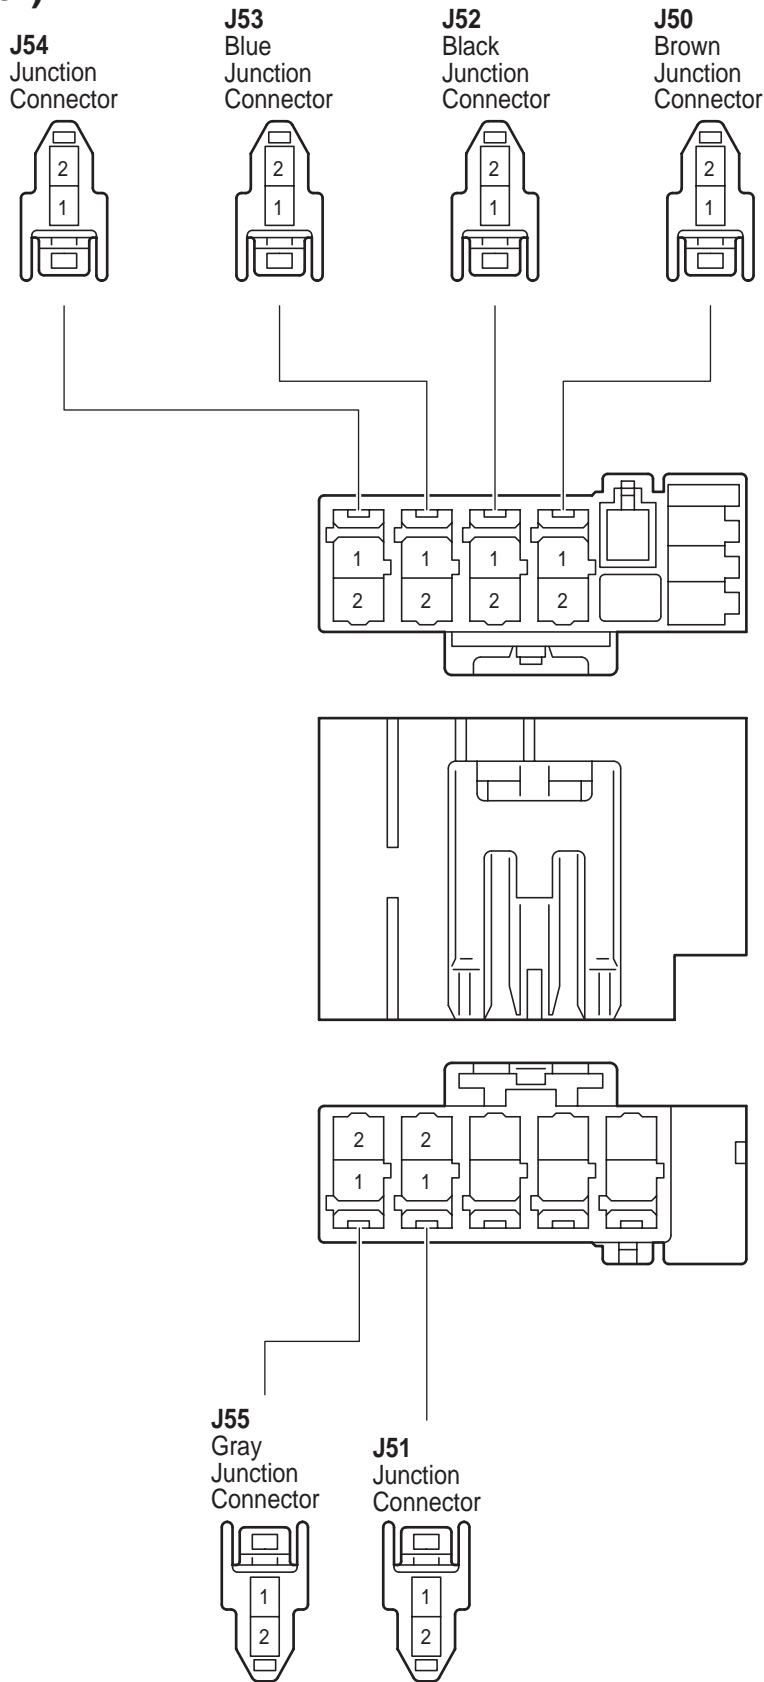

**[Junction Connector Inner Circuit]
(CAN Center)**

J50(A), J51(B), J52(C), J53(D),
J54(E), J55(F)
Junction Connector




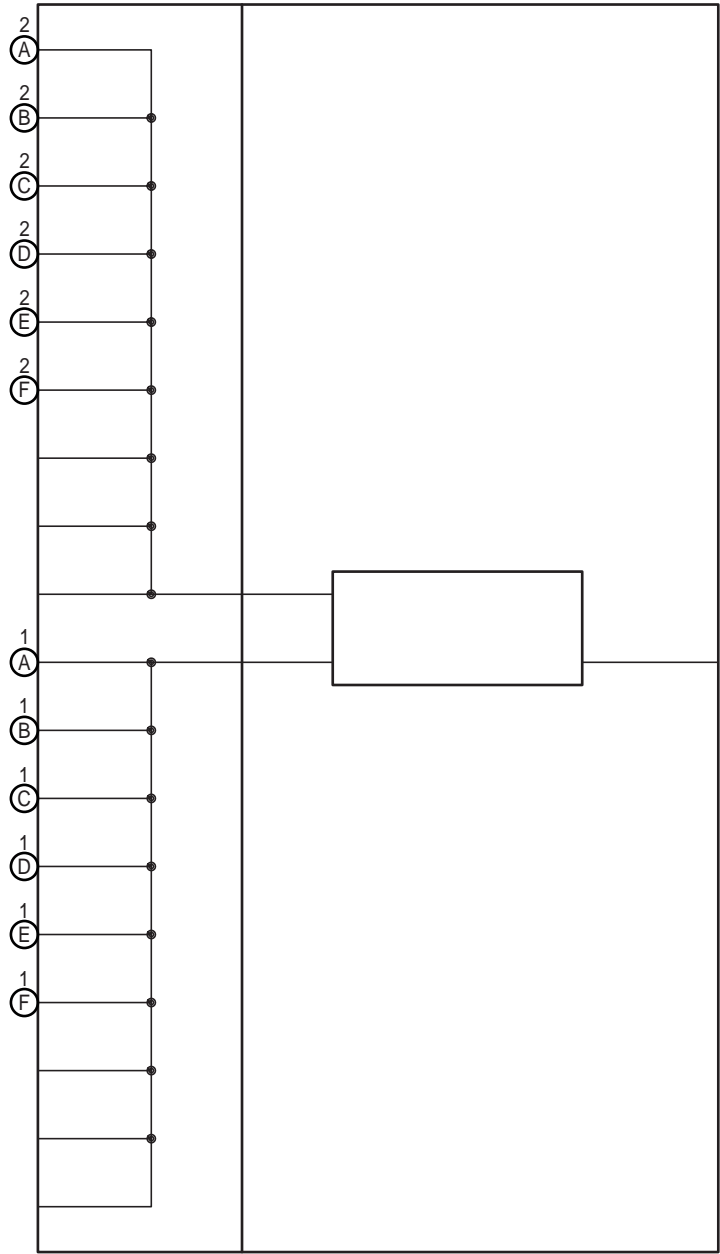


F RELAY LOCATIONS


Junction Connector
(CAN RH)

Right Kick Panel (See Page 20)

 
J22
Junction
Connector

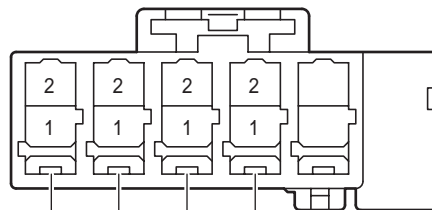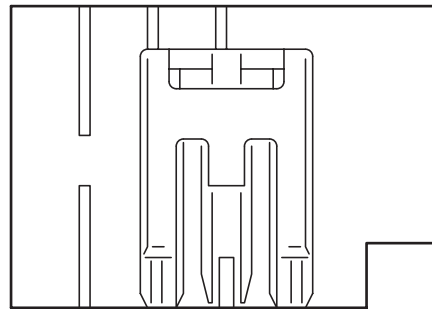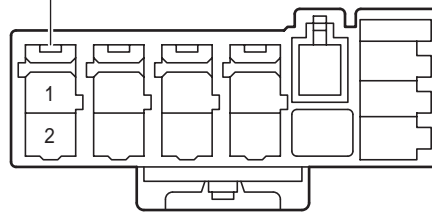


J57
Brown
Junction
Connector

 

J26
Blue
Junction
Connector

 

J27
Black
Junction
Connector

 

J56
Gray
Junction
Connector



[Junction Connector Inner Circuit]
(CAN RH)

J22(A), J26(B), J27(C), J56(D), J57(E)
Junction Connector

