2007 Lexus Truck RX 350 FWD V6-3.5L (2GR-FE)

Vehicle > Starting and Charging > Starting System > Starter Relay > Locations

② : Engine Room R/B Engine Compartment Left

