

## 6-2. Customization

# Customizable features

Your vehicle includes a variety of electronic features that can be personalized to suit your preferences. Programming of these preferences can be performed by your Lexus dealer.


It is also possible to customize certain vehicle features yourself using the multi-information switches and the navigation screen.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.


### Customizing vehicle features

It is possible to customize certain vehicle features using the multi-information switches.\*

When customizing vehicle features, ensure that the vehicle is parked in a safe place with the shift lever in P and the parking brake set.

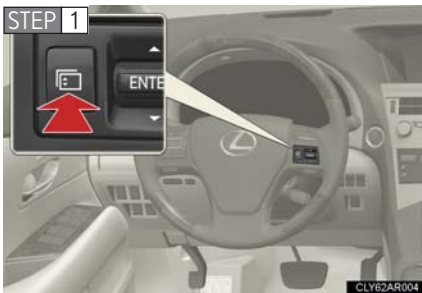

Press and hold the menu switch of the multi-information switches to display customization mode.

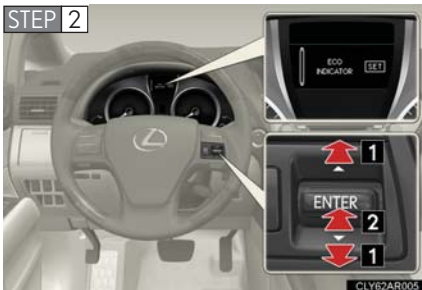

1 Press the “ENTER” switch upwards or downwards to select the item to be customized.

2 Press the “ENTER” switch to confirm.



- 1 Press the “ENTER” switch upwards or downwards to select the desired setting for the item being customized.
- 2 Press the “ENTER” switch to confirm.

When customization is completed, press the menu switch to clear the customization screen.

\*: For instructions on customizing vehicle features using the navigation screen, refer to the “Navigation System Owner’s Manual”.

## Customizable Features

- 1 Vehicles with a navigation system: Settings that can be changed using the screen of the navigation system
- 2 Vehicles with a navigation system: Settings that can be changed using the multi-information switches
- 3 Vehicles without a navigation system: Settings that can be changed using the multi-information switches
- 4 Settings that can be changed by your Lexus dealer

Definition of symbols: ○ = Available, – = Not available

Item	Function	Default setting	Customized setting	1	2	3	4
Door lock (→P. 46, 583)	Unlocking using a key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step	○	–	–	○
	Speed-detecting automatic door lock function	Off	On	○	–	○	○
	Shifting gears to position other than P locks all doors	On	Off	○	–	○	○

Item	Function	Default setting	Customized setting	1	2	3	4
Door lock (→P. 46, 583)	Shifting gears to P unlocks all doors	On	Off	○	–	○	○
	Opening driver's door unlocks all doors	Off	On	○	–	○	○
Smart access system with push-button start and wireless remote control (→P. 31, 42)	Operation signal (buzzer)	7	Off	○	–	○	○
			1 to 6				
	Operation signal (Emergency flashers)	On	Off	○	–	○	○
Time elapsed before the automatic door lock function is activated if a door is not opened after being unlocked	60 seconds	Off	○	–	○	○	
		30 seconds					
		120 seconds					
Smart access system with push-button start (→P. 31)	Smart door unlocking	Driver's door	All the doors	○	–	○	○
	Smart access system with push-button start	On	Off	○	–	○	○

Item	Function	Default setting	Customized setting	1	2	3	4
Wireless remote control (→P. 42)	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step	○	–	○	○
			Off				
Automatic light control system (→P. 180)	Time elapsed before the headlights turn off	30 seconds	60 seconds	○	–	○	○
			90 seconds				
			Standard	–2 to 2	○	–	○
	Light sensor sensitivity	Standard	–2 to 2	○	–	○	○
	Daytime running light system	On	Off	○	–	○	○
Automatic high beam system	On	Off	–	–	–	○	

Item	Function	Default setting	Customized setting	1	2	3	4
Illumination (→P. 398)	Time elapsed before the interior lights turn off	15 seconds	Off				
			7.5 seconds	○	–	○	○
			30 seconds				
	Time elapsed before the exterior lights turn off	15 seconds	Off				
			7.5 seconds	○	–	○	○
			30 seconds				
	Sensitivity of the ambient light sensor used for dimming the meter lights etc.	Standard	-2 to 2	○	–	–	○
	Sensitivity of the ambient light sensor used for brightening the meter lights etc.	Standard	-2 to 2	○	–	–	○
	Footwell lighting	On	Off	–	–	–	○
	Outer foot lights	On	Off	–	–	–	○

Item	Function	Default setting	Customized setting	1	2	3	4
Automatic air conditioning system	Switching between outside air and recirculated air mode linked to "AUTO" switch operation	Auto	Manual	○	-	-	○
	A/C Auto switch operation	Auto	Manual	○	-	-	○
	Exhaust gas sensor sensitivity	Standard	-3 to 3	○	-	-	○
Front seats (→P. 60)	Driver's seat movement when exiting the vehicle (on some models)	Full	Off				
			Partial	○	-	○	○
Multi-information display (→P. 169)	Eco Driving Indicator Light	On	Off	-	○	○	○
Power windows (→P. 88)	Mechanical key linked operation	On	Off	-	-	-	○
	Wireless remote control linked operation	Off	On	-	-	-	○

Item	Function	Default setting	Customized setting	1	2	3	4
Moon roof (→P. 91)	Mechanical key linked operation	On	Off	-	-	-	○
	Wireless remote control linked operation*	Off	On	-	-	-	○
Intuitive parking assist (→P. 215)	Buzzer volume	3	1 to 5	○	-	-	○
	Detection distance of the rear center sensor	Far	Near	○	-	-	○
	Display setting (when intuitive parking assist is operating)	All sensors displayed	No sensor displayed	○	-	-	○

\*: This function cannot be customized unless power window operation using the wireless remote control is enabled.



**Multi-information display (→P.169)**

Settings that can be changed using the multi-information switches

Available units	miles (MPG), km (km/l), km (l/100 km)
Available languages	English, French and Spanish

**n In the following situations, customize mode will automatically be turned off.**

- 1 A warning message appears after the customize mode screen is displayed.
- 1 The “ENGINE START STOP” switch is turned off.
- 1 The vehicle begins to move while the customize mode screen is displayed.

** CAUTION**

**n Cautions during customization**

As the engine needs to be running during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

** NOTICE**

**n During customization**

To prevent battery discharge, ensure that the engine is running while customizing features.