

Last Modified: 4-24-2018	6.8:8.0.48	Doc ID: RM0000024NS05JX
Model Year Start: 2013	Model: RX350	Prod Date Range: [03/2012 -]
Title: DOOR / HATCH: BACK DOOR: DISASSEMBLY; 2013 MY RX350 [03/2012 -]		

DISASSEMBLY

1. REMOVE UPPER BACK WINDOW PANEL TRIM


- (a) Disengage the 7 clips and 6 claws, and remove the upper back window panel trim.

Text in Illustration

*1	2-piece Type Clip
----	-------------------

HINT:


If any clips remain on the back door panel after the upper back window panel trim is removed, remove the clips and install them to the upper back window panel trim.

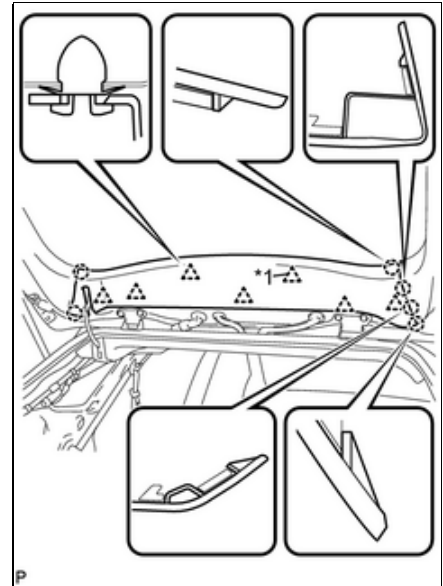

2. REMOVE TONNEAU COVER SUB-ASSEMBLY


3. REMOVE BACK DOOR TRIM BASE

- (a) Using a moulding remover, disengage the 4 claws and remove the back door trim base.

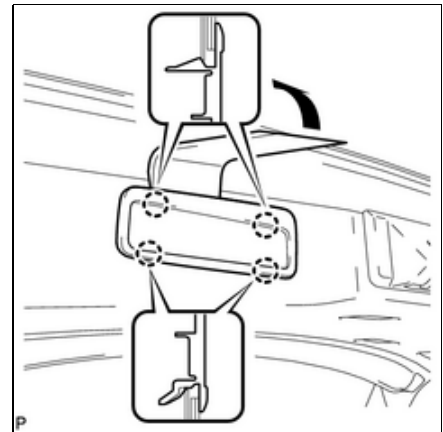

4. REMOVE DOOR PULL HANDLE WITH SWITCH


(a) Using a moulding remover, disengage the 6 claws and remove the door pull handle with switch.

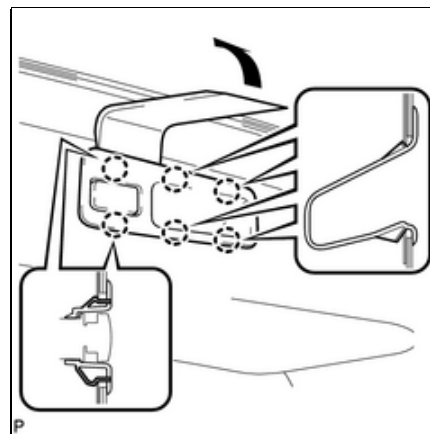

(b) Disconnect the connector.

5. REMOVE BACK DOOR LOCK COVER

(a) Disengage the 4 claws and remove the back door lock cover.

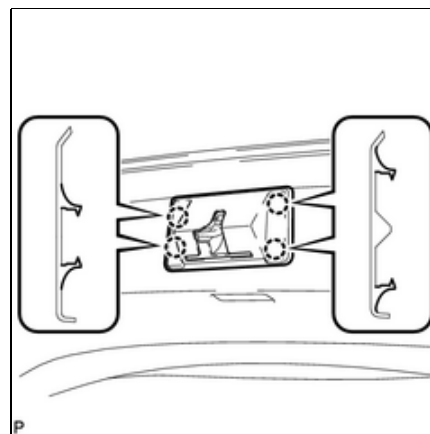

6. REMOVE NO. 2 ROOM LIGHT ASSEMBLY INFO

7. REMOVE BACK DOOR UPPER TRIM COVER LH


(a) Using a screwdriver, disengage the 2 claws and remove the back door upper trim cover LH as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

Text in Illustration

*1	Protective Tape
----	-----------------

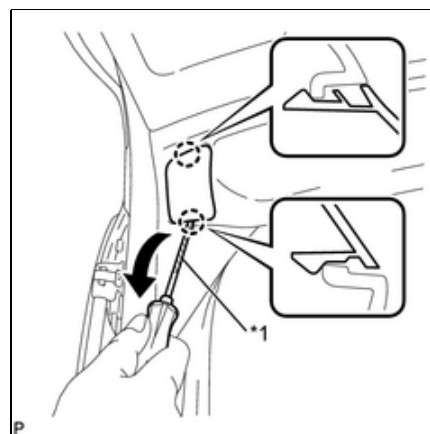

8. REMOVE BACK DOOR UPPER TRIM COVER RH


(a) Using a screwdriver, disengage the 2 claws and remove the back door upper trim cover RH as shown in the illustration.

HINT:

Tape the screwdriver tip before use.


Text in Illustration

*1	Protective Tape
----	-----------------

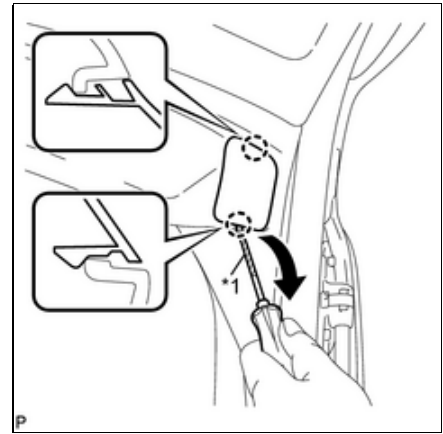


9. REMOVE BACK DOOR SERVICE HOLE COVER LH

(a) Disengage the 5 claws and remove the back door service hole cover LH.

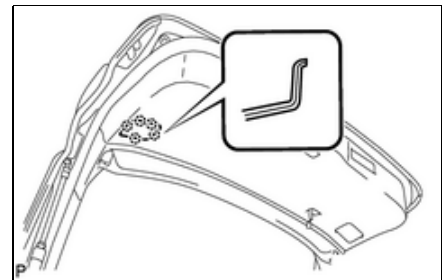


10. REMOVE BACK DOOR SERVICE HOLE COVER RH

(a) Disengage the 5 claws and remove the back door service hole cover RH.

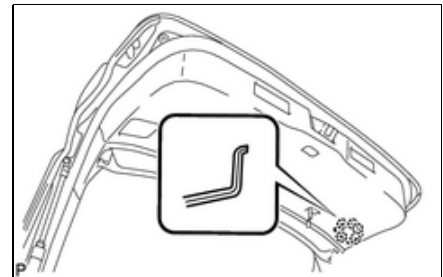

11. REMOVE BACK DOOR TRIM PANEL ASSEMBLY


(a) Remove the 2 screws.

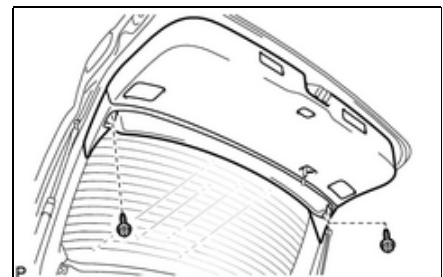

(b) Grab the service holes by hand.

NOTICE:

Make sure to hold the clip bases as shown in the illustration.

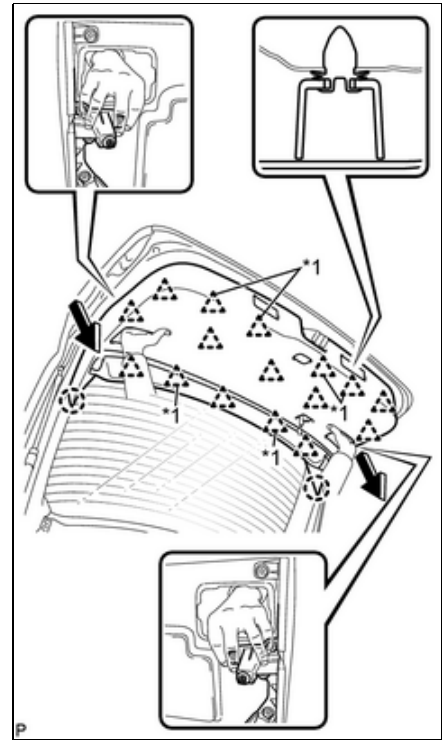

(c) Pull the back door trim panel assembly in the direction shown by the arrows in the illustration (pull perpendicular to the surface of the trim panel) to disengage the 2 claws and 16 clips, and remove the back door trim panel assembly.

Text in Illustration

*1	2-piece Type Clip
----	-------------------

NOTICE:


Removing the back door trim panel assembly at an angle may cause deformation or damage. To avoid this, make sure to pull the panel in the direction shown by the arrows (pull perpendicular to the surface of the panel).

HINT:

If any clips remain on the back door panel after the back door trim panel assembly is removed, remove the clips and install them to the back door trim panel assembly.


12. REMOVE BACK DOOR TRIM COVER LH

(a) Disengage the 3 clips and remove the back door trim cover LH.

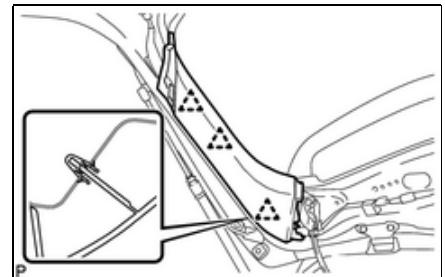


13. REMOVE BACK DOOR TRIM COVER RH

- (a) Disengage the 3 clips and remove the back door trim cover RH.

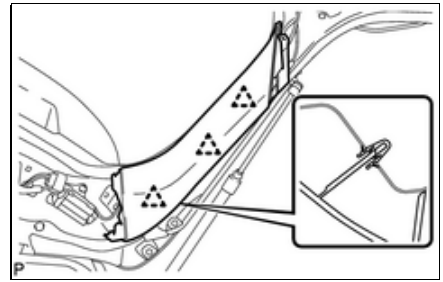

14. REMOVE BACK DOOR LOCK ASSEMBLY


- (a) Disconnect the connector.

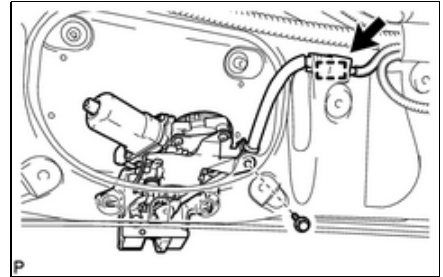

- (b) Disengage the clamp.


- (c) Remove the bolt.

- (d) Remove the 3 bolts and back door lock assembly.

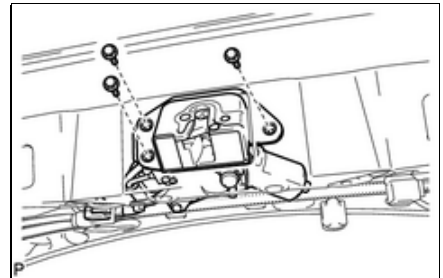

15. REMOVE LOWER BACK DOOR STOPPER LH

- (a) Remove the bolt and lower back door stopper LH.

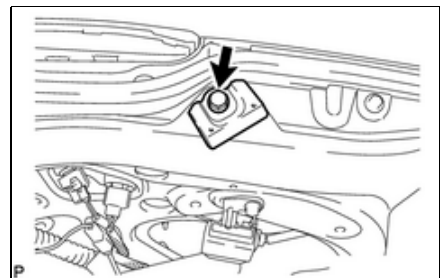

16. REMOVE LOWER BACK DOOR STOPPER RH

HINT:

Use the same procedure for the RH side and LH side.

17. REMOVE POWER BACK DOOR TOUCH SENSOR ASSEMBLY LH INFO


18. REMOVE POWER BACK DOOR TOUCH SENSOR ASSEMBLY RH

HINT:

Use the same procedure for the RH side and LH side.

19. DISCONNECT POWER BACK DOOR UNIT ASSEMBLY

- (a) Remove the 2 bolts and disconnect the power back door unit assembly.

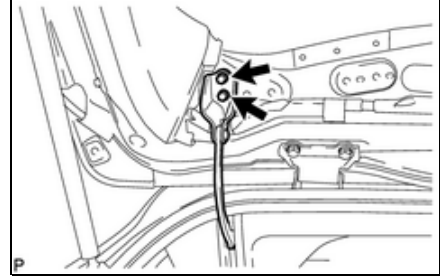

20. DISCONNECT BACK DOOR STAY ASSEMBLY LH


- (a) Using a screwdriver, remove the stop ring along the groove.

HINT:

Tape the screwdriver tip before use.

Text in Illustration

*1	Protective Tape
----	-----------------

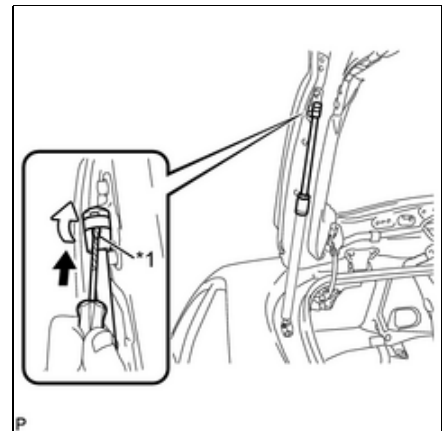

- (b) Release the ball joint and disengage the back door stay assembly LH.

NOTICE:

Remove the back door stay assembly while supporting the back door by hand.

21. DISCONNECT BACK DOOR STAY ASSEMBLY RH

HINT:

Use the same procedure for the RH side and LH side.

22. REMOVE BACK DOOR LOWER STAY BRACKET LH INFO

23. REMOVE BACK DOOR LOWER STAY BRACKET RH

HINT:

Use the same procedure for the RH side and LH side.

24. REMOVE AMPLIFIER ANTENNA ASSEMBLY INFO

25. REMOVE REAR LIGHT ASSEMBLY LH INFO

26. REMOVE REAR LIGHT ASSEMBLY RH

HINT:

Use the same procedure for the RH side and LH side.

27. REMOVE BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY INFO

28. REMOVE LICENSE PLATE LIGHT ASSEMBLY LH INFO

29. REMOVE LICENSE PLATE LIGHT ASSEMBLY RH

HINT:

Use the same procedure for the RH side and LH side.

30. REMOVE REAR TELEVISION CAMERA ASSEMBLY (w/ Rear Monitor) [INFO](#)

31. REMOVE REAR SPOILER SUB-ASSEMBLY [INFO](#)

32. REMOVE REAR WIPER ARM AND BLADE ASSEMBLY [INFO](#)

33. REMOVE REAR WIPER MOTOR GROMMET [INFO](#)

34. REMOVE REAR WIPER MOTOR AND BRACKET ASSEMBLY [INFO](#)

35. REMOVE REAR WASHER NOZZLE [INFO](#)

36. REMOVE ROOF HEADLINING ASSEMBLY

HINT:

Refer to the procedure up to Remove Roof Headlining Assembly [INFO](#) .

37. REMOVE NO. 3 ANTENNA CORD SUB-ASSEMBLY [INFO](#)

38. REMOVE RADIO SETTING CONDENSER [INFO](#)

