

Lexus Personalized Settings



LEXUS PRECISION SERVICE
Expert technicians. Personalized service.

Your vehicle includes a variety of electronic features that can be programmed to your preferences. The programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 6-month/8,000 km

scheduled maintenance service.

2023

It is also possible to customize certain vehicle features yourself using the vehicle's

Programmable by Guest

LIGHTS

Headlights: Auto on sensitivity

The front headlights can be programmed to turn On under varying degrees of ambient light conditions (headlight switch must be in Auto mode).

- Brighter
- Bright
- Normal (Default)
- Dark
- Darker

Headlights: Auto off timer

The front headlights can be programmed to turn Off after a certain delay once the ignition is turned off and all the doors are closed (headlight switch must be in On or Auto mode).

- 90 seconds
- 60 seconds
- 30 seconds
- Off (Default)

Headlights: Daytime running lights

The daytime running lights make your vehicle more visible to other drivers during daytime driving.

- On (Default)
- Off

Exterior lights: Auto off timer

The exterior lights can be programmed to stay on for a certain length of time after closing the door.

- 30 seconds
- 15 seconds (Default)
- 7.5 seconds
- Off


Interior lights: Auto off timer

The interior lights can be adjusted to stay on after closing the door. o 30 seconds o 15 seconds (Default) o 7.5 seconds o Off

RX 350

display screen. Vehicle must be in “On” mode to program personalized settings.

To customize your vehicle’s settings:

1. Touch the Settings icon  on the lower left side of the main menu screen.
2. Scroll down the menu and select “Vehicle Customize.”
3. Select the desired categories for customization.

There are three methods of making changes through the display, as seen here: an On/Off toggle, an adjustable slider and a link to multiple settings options.



Programmable by Guest (continued)

DOOR CONTROL

Door auto lock/unlock: Auto unlock

The automatic door unlocking function is programmable.

- o By shift to park (Default) = The doors automatically unlock when the vehicle is shifted into Park
- o By driver door = All the doors automatically unlock when the driver door is opened
- o Off = The doors will not automatically unlock

Door auto lock: By shift from P

The doors automatically lock when the vehicle is taken out of Park and shifted into another

- range.
- o On (Default)
- o Off

Wireless electronic key: 2-press unlock

The unlock button on the electronic key is programmable.

- o On (Default) = Pressing the unlock button one time unlocks the driver's door and two times unlocks all doors
- o Off = Pressing the unlock button one time unlocks all doors

Wireless electronic key: Lock when door opened

Pressing lock button on electronic key will lock doors when they are

- open:
- o On (Default)
- o Off

Smart access doors: Unlock

The smart access system can be used to unlock the doors.

- o All doors = Gripping the driver door handle will unlock all doors
- o Driver door only (Default) = Gripping the driver door handle will unlock the driver's door

Key settings: Auto relock timer

If the doors are unlocked but not opened, they can be programmed to automatically relock after a certain length of time.

- o 120 seconds
- o 60 seconds (Default)
- o 30 seconds
- o Off

Key settings: Feedback lights

The flashing lights after the lock or unlock button on the electronic key is pressed can be programmed.

- o On (Default) = Lock button makes lights flash once/Unlock button makes lights flash twice
- o Off = Lights will not flash

Key settings: Feedback tone

The tone volume after the lock button on the electronic key is pressed can be programmed.

- o Drag the slider to adjust the volume of the tone

Back door: Buzzer volume

The back door buzzer volume can be programmed.

- o Soft
- o Normal
- o Loud (Default)

Programmable by Guest (continued)

Back door: Opening position

The back door can be programmed to open to a pre-selected height.

- o 5 o 4 o 3 o 2 o 1
- o Manual (Default)

BOARDING & EXIT

Driver easy exit: Seat slide*

When the vehicle is placed in Park and the ignition turned Off, the driver seat will:

- o Full (Default) = Automatically move fully away from the steering wheel
- o Partial = Automatically move partially away from the steering wheel
- o Off = Remain in the current position, as set by the driver

Driver easy exit: Seat lift*

When the vehicle is placed in Park and the ignition turned Off, the driver's side seat cushions will:

- o Full (Default) = Automatically fully lower
- o Partial = Automatically partially lower
- o Off = Remain in the current position

Driver easy exit: Steering column

When vehicle is shifted into Park and engine switch turned to ACC or off, steering wheel will automatically move to facilitate the driver's exit from the vehicle.

- o Tilt (Default) = Automatically tilt up from the driver
- o Telescopic = Automatically move away from the driver
- o Tilt & telescopic = Automatically tilt up and move away from the driver
- o Off = Remain in the current position

CLIMATE

Auto seat temperature: Front left*

Adjust the sensitivity level for climate controlled (A/C, heater) driver seat.

- o +2 o +1 o 0 (Default) o -1 o -2

Auto seat temperature: Front right*

Adjust the sensitivity level for climate controlled (A/C, heater) front passenger seat. +2 +1 0 (Default) -1 -2

Programmable by Guest (continued)

Steering wheel temperature: Operation time*

Adjust the time when the heated steering wheel automatically turns off.

- +2 +1
- 0 (Default)
- 1 -2

Auto climate settings: A/C mode with AUTO When

Auto AC is selected:

- On (Default) = It will automatically engage the air conditioner compressor to reach the set temperature
- Off = It will automatically achieve the set temperature, warm or cool, without engaging the air conditioner compressor** ** The A/C compressor will be engaged when the Auto A/C button is pressed a second time.

Auto climate settings: Smog sensitivity*

When in Auto recirculation mode, the sensor will determine when to switch from outside air to recirculated air based on outside air quality. +3 +2 +1 0 (Default) -1 -2 -3 Off

UTILITY

Rear seat reminder

As a reminder not to forget luggage, etc. in the rear seat, a buzzer may sound for 6 seconds after the engine is turned off if a rear door is not opened. On (Default) Off

Stop & Start duration

Select the duration of the Stop & Start system to improve fuel economy and reduce engine idling.

- Standard (Default) = Minimal reduction to A/C system cooling
- Extended = Further reduction of A/C system cooling due to longer duration of the Stop & Start system. The vehicle transfers to a lower performance mode in less time than in Standard mode.

| | |
|---|--|
| 1 | <p>Unlock on Second Key Turn</p> <p>When using the mechanical key to unlock the doors:</p> <ul style="list-style-type: none"> o Turning the key one time will unlock all the doors = Off o Turning the key one time unlocks the driver door, and two times unlocks all the doors (Default) = On |
| 2 | <p>Illumination of the Interior Cabin Light when Approaching the Vehicle When approaching the vehicle with the electronic key:</p> <ul style="list-style-type: none"> o The cabin light will illuminate (Default) = On o The cabin light will not illuminate = Off |
| 3 | <p>Illumination of the Interior Cabin Light when Unlocking Door When using the electronic or mechanical key to unlock the door:</p> <ul style="list-style-type: none"> o The cabin light will not illuminate = Off o The cabin light will illuminate (Default) = On |
| 4 | <p>Interior Light</p> <p>The interior light will illuminate when Power is switched to Off:</p> <ul style="list-style-type: none"> o Off o On (Default) |
| 5 | <p>Illumination of the Outer Foot Lights when Approaching the Vehicle When approaching the vehicle with the electronic key:</p> <ul style="list-style-type: none"> o The outer foot lights will not illuminate = Off o The outer foot lights will illuminate (Default) = On |
| 6 | <p>Illumination of the Outer Foot Lights when Unlocking Door When unlocking the vehicle with the electronic key:</p> <ul style="list-style-type: none"> o The outer foot lights will not illuminate = Off o The outer foot lights will illuminate (Default) = On |
| 7 | <p>Headlight Illumination Linked to Windshield Wiper</p> <p>If wipers are used in daylight with headlight switch in Auto mode, the headlights will turn on automatically:</p> <ul style="list-style-type: none"> o Off o On (Default) |
| 8 | <p>Instrument Dimming Sensitivity</p> <p>Level of light at which the instrument panel lights will dim:</p> <ul style="list-style-type: none"> o Very Dark o Dark o Normal (Default) o Light o Very Light |

| | |
|------------------|---|
| <p>9</p> | <p>Instrument Restore Sensitivity Level of light at which the instrument panel lights will brighten:</p> <ul style="list-style-type: none"> o Very Light o Light o Normal (Default) o Dark o Very Dark |
| <p>10</p> | <p>Automatic Mirror Fold and Extend Select when mirrors should fold and extend:</p> <ul style="list-style-type: none"> o Fold linked with Power switch o Fold linked with door lock (Default) o Don't fold = Off |
| <p>11</p> | <p>Power Back Door Switch Operation The back door opener button can be programmed as follows:</p> <ul style="list-style-type: none"> o Press button one time to open back door = No Delay o Press and hold the button for 0.8 seconds to open back door (Default) = Short Delay |
| <p>12</p> | <p>Back Door Chime The chime that sounds while opening the back door can be programmed as follows:</p> <ul style="list-style-type: none"> o Start buzzer On; in-operation buzzer Off (Default) o Start buzzer Off; in-operation buzzer On |
| <p>13</p> | <p>Power Back Door Open Assist Operation Pressing the power back door opener button on the rear door engages the power door function, and the door opens.</p> <ul style="list-style-type: none"> o Off o On (Default) |
| <p>14</p> | <p>Automatic Closing of the Back Door when Lowered* Back door will automatically close when partially lowered.</p> <ul style="list-style-type: none"> o Off o On (Default) |
| <p>15</p> | <p>Opening Back Door Using Electronic Key Press and hold the back door opener button on the electronic key to:</p> <ul style="list-style-type: none"> o Unlock and open only the back door o Unlock all doors, and open the back door (Default) |
| <p>16</p> | <p>Close Windows and Moon Roof* with Mechanical Key When using the mechanical key to operate windows and moon roof:</p> <ul style="list-style-type: none"> o Turning the key right and holding the position for 2 seconds will not close the windows and moon roof (Default) = Off o Turning the key right and holding the position for 2 seconds will close the windows and moon roof = On |
| <p>17</p> | <p>Open Windows and Moon Roof* with Mechanical Key When using the mechanical key to operate windows and moon roof:</p> |

| | |
|-----------|---|
| | <ul style="list-style-type: none"> o Turning the key left and holding the position for 2 seconds will not open the windows and moon roof (Default) = Off o Turning the key left and holding the position for 2 seconds will open the windows and moon roof = On |
| 18 | <p>Open Windows and Moon Roof* with Electronic Key</p> <p>When pressing the unlock button on the electronic key for 3 seconds:</p> <ul style="list-style-type: none"> o The windows and moon roof will not open (Default) = Off o All the windows and moon roof will open = On |
| 19 | <p>Slide/Tilt Moon Roof* with Mechanical Key</p> <p>When option #17 is on, the moon roof can be programmed to::</p> <ul style="list-style-type: none"> o Slide (Default) o Tilt |
| 20 | <p>Slide/Tilt Moon Roof* with Electronic Key</p> <p>When option #18 is on, the moon roof can be programmed to::</p> <ul style="list-style-type: none"> o Slide (Default) o Tilt |
| 21 | <p>Driver Seat Belt Reminder</p> <p>When the vehicle reaches 12 mph:</p> <ul style="list-style-type: none"> o The driver seat belt reminder will not beep = Off o The driver seat belt reminder will beep (Default) = On |
| 22 | <p>Front Passenger Seat Belt Reminder When the vehicle reaches 12 mph:</p> <ul style="list-style-type: none"> o The passenger seat belt reminder will not beep = Off o The passenger seat belt reminder will beep (Default) = On |
| 23 | <p>Rear Right Passenger Seat Belt Reminder When the vehicle reaches 12 mph:</p> <ul style="list-style-type: none"> o The passenger seat belt reminder will not beep = Off o The passenger seat belt reminder will beep (Default) = On |
| 24 | <p>Rear Left Passenger Seat Belt Reminder When the vehicle reaches 12 mph:</p> <ul style="list-style-type: none"> o The passenger seat belt reminder will not beep = Off o The passenger seat belt reminder will beep (Default) = On |
| 25 | <p>Lane Change Signal Flashes</p> <p>When the turn signal lever is pushed partway to signal a lane change, the signal will flash:</p> <ul style="list-style-type: none"> o Off o 3 times (Default) o 4 times o 5 times o 6 times o 7 times |

| | |
|------------------|--|
| <p>26</p> | <p>Lane Change Flasher Volume The turn signal volume can be programmed: <input type="radio"/> Loud <input type="radio"/> Medium (Default) <input type="radio"/> Soft</p> |
| <p>27</p> | <p>Open Window Buzzer When the lock button on the electronic key is pressed and a window is not fully closed: <input type="radio"/> The buzzer will not sound = Off <input type="radio"/> The buzzer will sound (Default) = On</p> |
| <p>28</p> | <p>Open Moon Roof* Buzzer When the lock button on the electronic key is pressed and the moon roof is not fully closed: <input type="radio"/> The buzzer will not sound = Off <input type="radio"/> The buzzer will sound (Default) = On</p> |

| | |
|-----------|--|
| 29 | <p>Suggestion Function</p> <p>Suggestion messages for headlight operation and power window lock displayed on the Multi-Information Display:</p> <ul style="list-style-type: none"> <input type="radio"/> Off <input type="radio"/> On While Stopped <input type="radio"/> On (Default) |
| 30 | <p>Reverse Beep Alert</p> <p>When the vehicle is shifted into Reverse:</p> <ul style="list-style-type: none"> <input type="radio"/> The alert will beep continuously = Continuous <input type="radio"/> The alert will beep once (Default) = Once |
| 31 | <p>Panic Mode</p> <p>When pressing the panic button on the electronic key:</p> <ul style="list-style-type: none"> <input type="radio"/> The alarm will not sound and the vehicle lights will not flash = Off <input type="radio"/> The alarm will sound intermittently and the vehicle lights will flash (Default) = On |

Date

Customer Signature

Repair Order Number (Dealer only)

Vehicle Identification Number (Dealer only)