



K POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

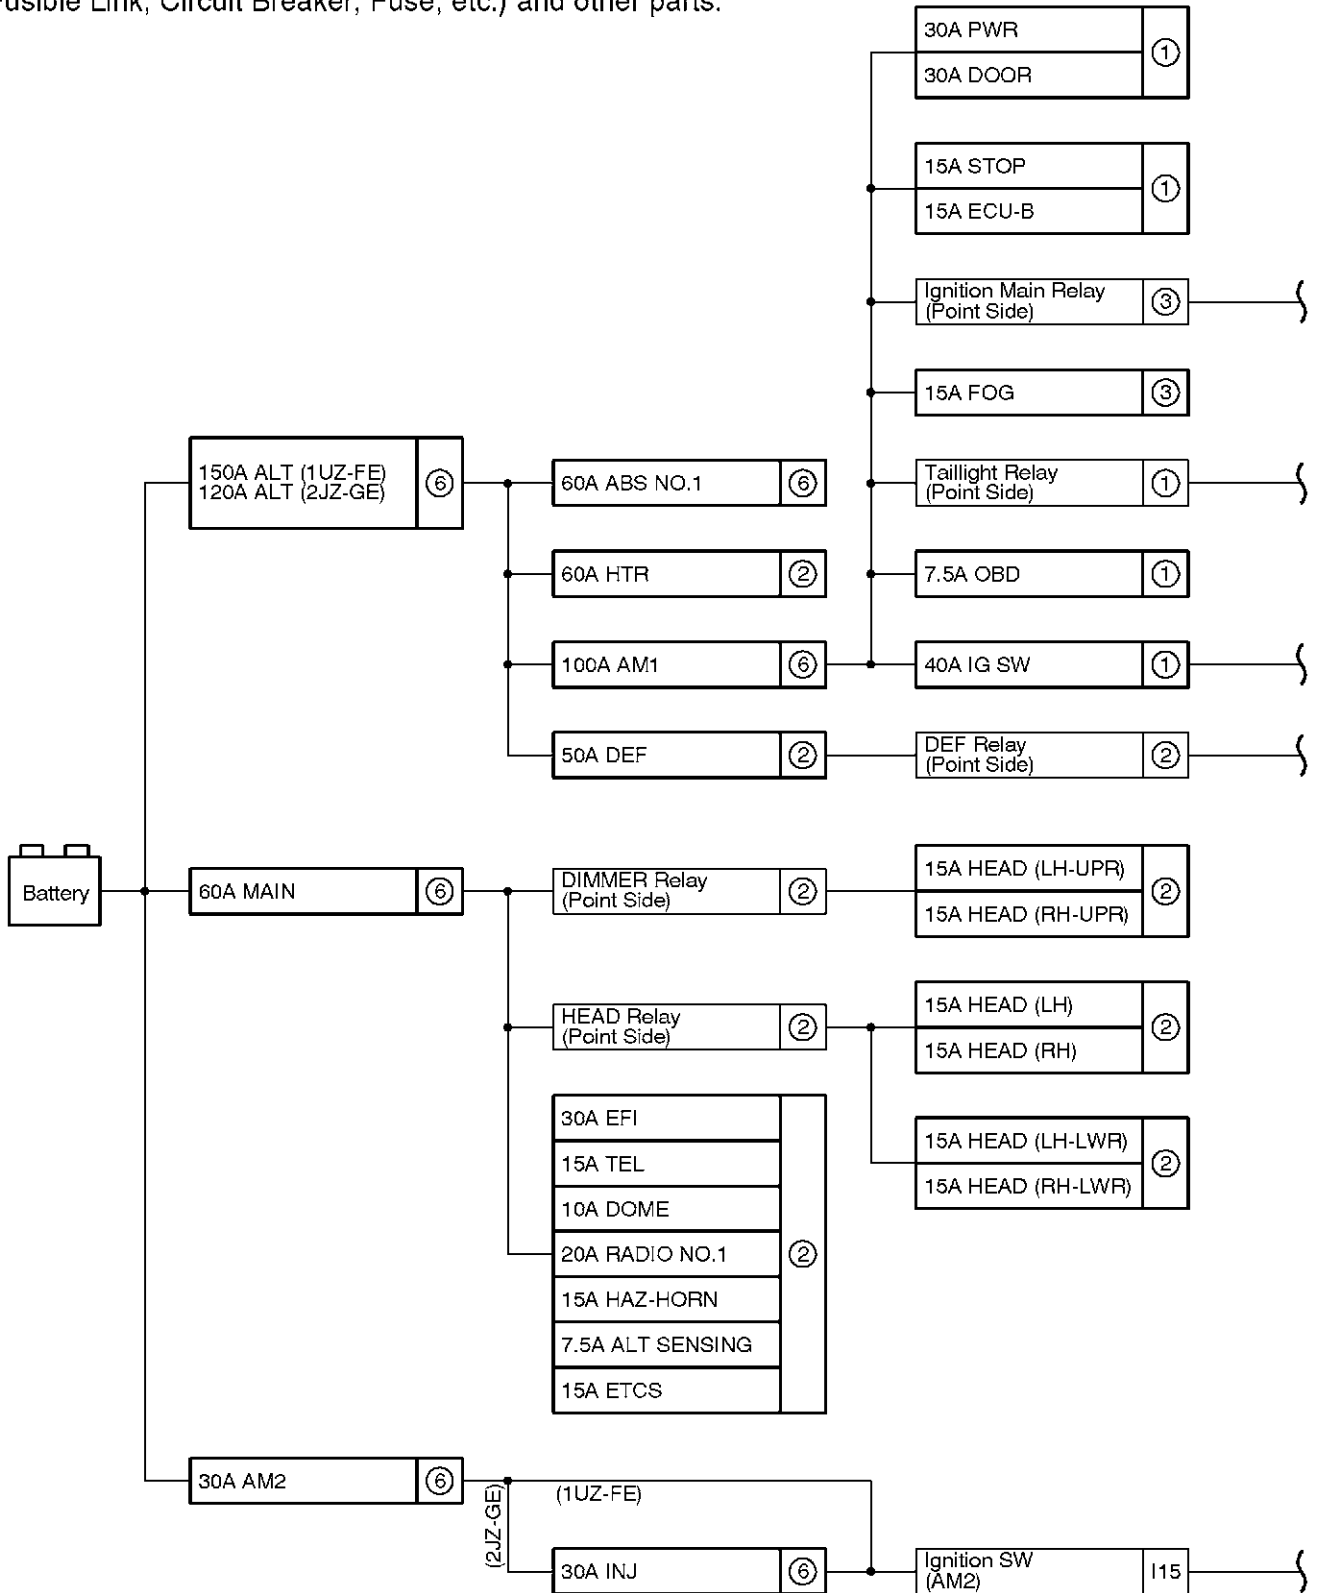


[LOCATION] ① : J/B No.1 (See page 20)
 ⑤ : Fuse Block (F9 See on page 19)

② : R/B No.2 (See page 19)

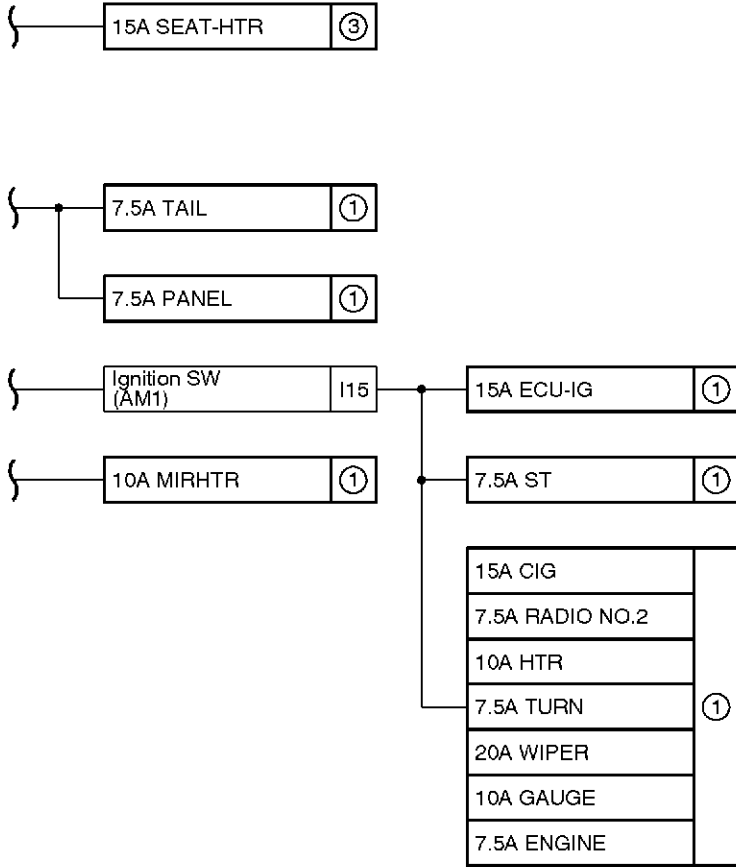

③ : R/B No.4 (See page 23)

④ : R/B No.6 (See page 24)

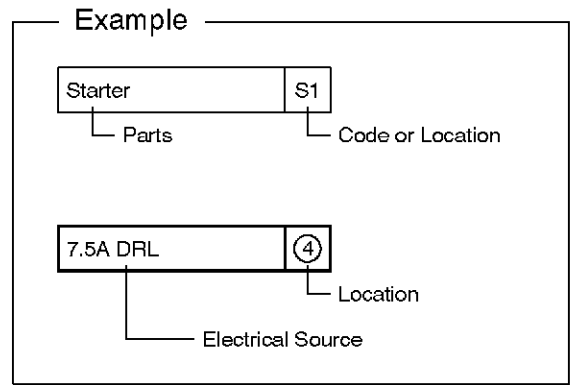

K POWER SOURCE (Current Flow Chart)

J/B No.1 (See Page 20)

Fuse		System	Page
7.5A	ENGINE	Charging	54
7.5A	IGN	Charging	54
		Combination Meter	280
		Cruise Control (1UZ-FE)	186
		Cruise Control (2JZ-GE)	192
		Electronically Controlled Transmission and A/T Indicator (1UZ-FE)	152
		Electronically Controlled Transmission and A/T Indicator (2JZ-GE)	162
		Engine Control and Engine Immobiliser System (1UZ-FE)	64
		Engine Control and Engine Immobiliser System (2JZ-GE)	76
	SRS	223	
7.5A	OBD	Engine Control and Engine Immobiliser System (1UZ-FE)	64
		Engine Control and Engine Immobiliser System (2JZ-GE)	76
7.5A	PANEL	Automatic Air Conditioning	288
		Combination Meter	280
		Illumination	98
7.5A	RADIO NO.2	Auto Antenna	262
		Interior Light	102
		Radio and Player (NAKAMICHI)	270
		Radio and Player (PIONEER)	276
		Remote Control Mirror (w/ Driving Position Memory)	214
		Remote Control Mirror (w/o Driving Position Memory)	220
7.5A	ST	Combination Meter	280
		Electronically Controlled Transmission and A/T Indicator (2JZ-GE)	162
		Engine Control and Engine Immobiliser System (1UZ-FE)	64
		Engine Control and Engine Immobiliser System (2JZ-GE)	76
		Starting and Ignition (1UZ-FE)	56
		Starting and Ignition (2JZ-GE)	60
		Theft Deterrent and Door Lock Control	134
7.5A	TAIL	Engine Control and Engine Immobiliser System (1UZ-FE)	64
		Engine Control and Engine Immobiliser System (2JZ-GE)	76
		Taillight	94
7.5A	TURN	Turn Signal and Hazard Warning Light	116
10A	GAUGE	ABS	180
		ABS and Traction Control	172
		Back-Up Light	112
		Combination Meter	280
		Cruise Control (1UZ-FE)	186
		Cruise Control (2JZ-GE)	192
		Electronically Controlled Transmission and A/T Indicator (1UZ-FE)	152
		Electronically Controlled Transmission and A/T Indicator (2JZ-GE)	162
		Engine Control and Engine Immobiliser System (1UZ-FE)	64
		Engine Control and Engine Immobiliser System (2JZ-GE)	76

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
10A	GAUGE	Interior Light	102
		Key Reminder and Seat Belt Warning	228
		Light Auto Turn Off	122
		Power Seat (w/ Driving Position Memory)	198
		Power Tilt and Power Telescopic	208
		PPS	232
		Shift Lock	236
		Stop Light	108
		Taillight	94
		Wiper and Washer	254
		Wireless Door Lock Control	142
10A	HTR	Automatic Air Conditioning	288
		Rear Window Defogger and Mirror Heater	242
10A	MIRHTR	Engine Control and Engine Immobiliser System (2JZ-GE)	76
		Rear Window Defogger and Mirror Heater	242
15A	CIG	Automatic Air Conditioning	288
		Cigarette Lighter	120
		Shift Lock	236
		SRS	223
		Theft Deterrent and Door Lock Control	134
15A	ECU-B	Automatic Light Control	126
		Combination Meter	280
		Remote Control Mirror (w/ Driving Position Memory)	214
		SRS	223
15A	ECU-IG	ABS	180
		ABS and Traction Control	172
		Auto Antenna	262
		Automatic Glare-Resistant EC Mirror	130
		Automatic Light Control	126
		Cellular Mobile Telephone	266
		Electric Tension Reducer	246
		Electronically Controlled Hydraulic Cooling Fan	258
		Moon Roof	248
		Power Seat (w/ Driving Position Memory)	198
		Power Tilt and Power Telescopic	208
		Power Window	146
		PPS	232
		Radio and Player (NAKAMICHI)	270
		Radio and Player (PIONEER)	276
Shift Lock	236		
Theft Deterrent and Door Lock Control	134		
15A	STOP	ABS	180
		ABS and Traction Control	172
		Cruise Control (1UZ-FE)	186

* These are the page numbers of the first page on which the related system is shown.

K POWER SOURCE (Current Flow Chart)

Fuse		System	Page
15A	STOP	Cruise Control (2JZ-GE)	192
		Electronically Controlled Transmission and A/T Indicator (1UZ-FE)	152
		Electronically Controlled Transmission and A/T Indicator (2JZ-GE)	162
		Engine Control and Engine Immobiliser System (1UZ-FE)	64
		Engine Control and Engine Immobiliser System (2JZ-GE)	76
		Power Seat (w/ Driving Position Memory)	198
		Shift Lock	236
		Stop Light	108
20A	WIPER	Wiper and Washer	254
30A	DOOR	Moon Roof	248
		Power Seat (2JZ-GE w/o Driving Position Memory)	206
		Power Seat (w/ Driving Position Memory)	198
		Power Window	146
		Theft Deterrent and Door Lock Control	134
		Wireless Door Lock Control	142
30A	PWR	Moon Roof	248
		Power Tilt and Power Telescopic	208
		Power Window	146
		Theft Deterrent and Door Lock Control	134
40A	IG SW	Engine Control and Engine Immobiliser System (1UZ-FE)	64
		Engine Control and Engine Immobiliser System (2JZ-GE)	76
		Starting and Ignition (1UZ-FE)	56
		Starting and Ignition (2JZ-GE)	60

R/B No.2 (See Page 19)

Fuse		System	Page
7.5A	ALT SENCING	Charging	54
7.5A	DRL	Headlight	88
10A	DOME	Automatic Air Conditioning	288
		Combination Meter	280
		Garage Door Opener	106
		Interior Light	102
		Key Reminder and Seat Belt Warning	228
		Light Auto Turn Off	122
		Moon Roof	248
		Power Seat (w/ Driving Position Memory)	198
		Power Tilt and Power Telescopic	208
		Power Window	146
		Radio and Player (NAKAMICHI)	270
		Theft Deterrent and Door Lock Control	134
Wireless Door Lock Control	142		
15A	ETCS	Cruise Control (1UZ-FE)	186
		Cruise Control (2JZ-GE)	192
		Electronically Controlled Transmission and A/T Indicator (1UZ-FE)	152

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
15A	ETCS	Electronically Controlled Transmission and A/T Indicator (2JZ-GE)	162
		Engine Control and Engine Immobiliser System (1UZ-FE)	64
		Engine Control and Engine Immobiliser System (2JZ-GE)	76
15A	HAZ-HORN	Horn	132
		Theft Deterrent and Door Lock Control	134
		Turn Signal and Hazard Warning Light	116
15A	HEAD (LH)		
15A	HEAD (LH-LWR)	Fog Light	114
		Headlight	88
15A	HEAD (LH-UPR)	Headlight	88
15A	HEAD (RH)		
15A	HEAD (RH-LWR)	Combination Meter	280
		Headlight	88
15A	HEAD (RH-UPR)	Headlight	88
15A	TEL	Cellular Mobile Telephone	266
20A	RADIO NO.1	Auto Antenna	262
		Radio and Player (NAKAMICHI)	270
		Radio and Player (PIONEER)	276
30A	EFI	Cruise Control (1UZ-FE)	186
		Cruise Control (2JZ-GE)	192
		Electronically Controlled Transmission and A/T Indicator (1UZ-FE)	152
		Electronically Controlled Transmission and A/T Indicator (2JZ-GE)	162
		Engine Control and Engine Immobiliser System (1UZ-FE)	64
	Engine Control and Engine Immobiliser System (2JZ-GE)	76	
50A	DEF	Rear Window Defogger and Mirror Heater	242
60A	HTR	Automatic Air Conditioning	288

R/B No.4 (See Page 23)

Fuse		System	Page
15A	FOG	Fog Light	114
15A	SEAT-HTR	Seat Heater	240

Fuse Block (F9 on See Page 24)

Fuse		System	Page
30A	AM2	Engine Control and Engine Immobiliser System (1UZ-FE)	64
		Engine Control and Engine Immobiliser System (2JZ-GE)	76
		Starting and Ignition (1UZ-FE)	56
		Starting and Ignition (2JZ-GE)	60
30A	INJ	Engine Control and Engine Immobiliser System (2JZ-GE)	76
		Starting and Ignition (2JZ-GE)	60
60A	ABS NO.1	ABS	180
		ABS and Traction Control	172
60A	MAIN	Automatic Light Control	126
		Charging	54

* These are the page numbers of the first page on which the related system is shown.

K POWER SOURCE (Current Flow Chart)

Fuse		System	Page
60A	MAIN	Headlight	88
		Light Auto Turn Off	122
		Starting and Ignition (1UZ-FE)	56
		Starting and Ignition (2JZ-GE)	60
		Theft Deterrent and Door Lock Control	134
100A	AM1	Automatic Light Control	126
		Engine Control and Engine Immobiliser System (1UZ-FE)	64
		Engine Control and Engine Immobiliser System (2JZ-GE)	76
		Illumination	98
		Light Auto Turn Off	122
		Starting and Ignition (1UZ-FE)	56
		Starting and Ignition (2JZ-GE)	60
		Taillight	94
Theft Deterrent and Door Lock Control	134		
120A	ALT (2JZ)	ABS	180
		ABS and Traction Control	172
		Automatic Light Control	126
		Charging	54
		Engine Control and Engine Immobiliser System (2JZ-GE)	76
		Illumination	98
		Light Auto Turn Off	122
		Starting and Ignition (2JZ-GE)	60
		Taillight	94
Theft Deterrent and Door Lock Control	134		
150A	ALT (1UZ)	ABS	180
		ABS and Traction Control	172
		Automatic Light Control	126
		Charging	54
		Engine Control and Engine Immobiliser System (1UZ-FE)	64
		Illumination	98
		Light Auto Turn Off	122
		Starting and Ignition (1UZ-FE)	56
		Taillight	94
Theft Deterrent and Door Lock Control	134		

* These are the page numbers of the first page on which the related system is shown.

