


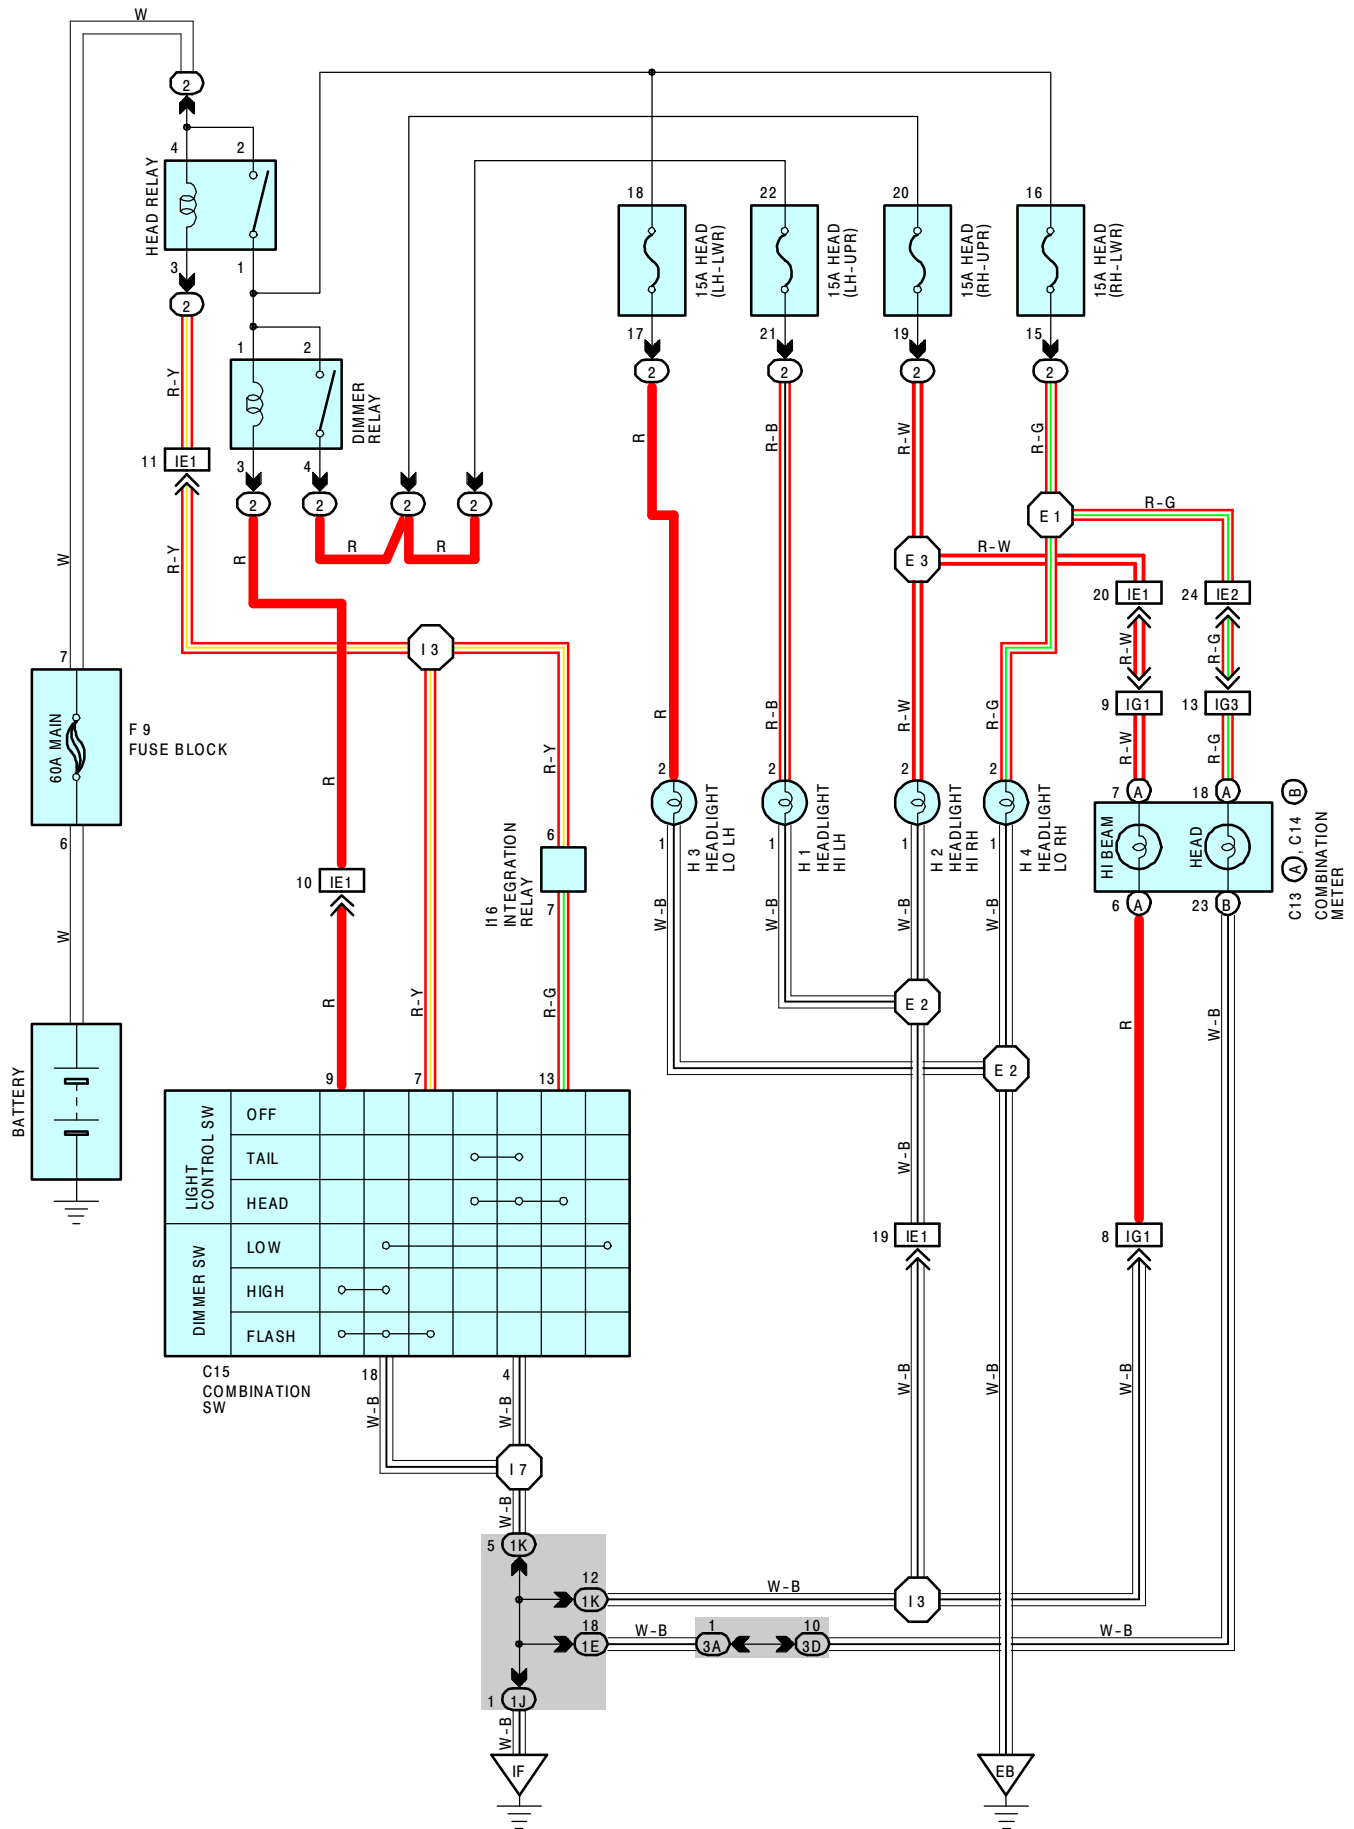

# HEADLIGHT (1UZ-FE USA)



## SERVICE HINTS

### HEAD RELAY

1-2 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

### C15 LIGHT CONTROL SW [COMB. SW]

13-4 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION

### C15 DIMMER SW [COMB. SW]

7-18 : CLOSED WITH DIMMER SW AT **FLASH** POSITION

9-18 : CLOSED WITH DIMMER SW AT **HIGH** OR **FLASH** POSITION

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE	
C13	A	30	F 9	26	H 3	26
C14	B	30	H 1	26	H 4	26
C15	30	H 2	26	I16	31	

### ○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO. 2

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1E	20	INSTRUMENT PANEL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1J	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1K		
3A	22	INSTRUMENT PANEL WIRE AND J/B NO. 3 (BEHIND THE INSTRUMENT PANEL CENTER)
3D		

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (R/B NO. 4)
IE2	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IG1	40	INSTRUMENT PANEL WIRE AND COWL WIRE (R/B NO. 5)
IG3	40	INSTRUMENT PANEL WIRE AND COWL WIRE (RIGHT KICK PANEL)

### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	36 (1UZ-FE)	FRONT SIDE OF LEFT FENDER
IF	40	LEFT KICK PANEL

### ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	36 (1UZ-FE)	ENGINE ROOM MAIN WIRE	I 3	42	COWL WIRE
E 2			I 7		
E 3					

