

- [Home](#)
- [New](#)
- [Top](#)
- [Sitemap](#)
- [Contacts](#)
- [Search](#)

Search 



- [Home](#)
- [Lexus IS](#)
- [Lexus ES](#)
- [Lexus GS](#)
- [Lexus LS](#)
- [Lexus RX](#)
- [Lexus GX](#)
- [Lexus CT](#)

Compass


[Lexus ES](#) / [Lexus ES 350 user manual](#) / [Interior features](#) / [Other interior features](#) / [Compass](#)

Watch Demo

Beat Local Competition With Reviews Podium

The compass on the inside rear view mirror indicates the direction in which the vehicle is heading.

Operation

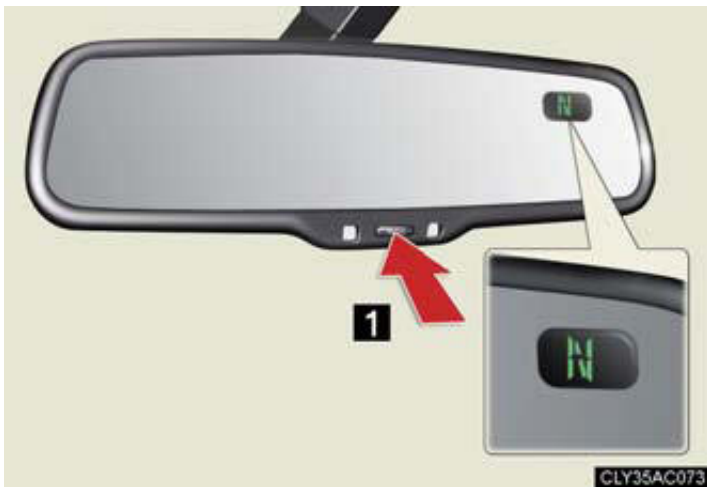


1. To turn the compass on or off, push and hold “AUTO” for 3 seconds.

Displays and directions

Display	Direction
N	North
NE	Northeast
E	East
SE	Southeast
S	South
SW	Southwest
W	West
NW	Northwest

Calibrating the compass

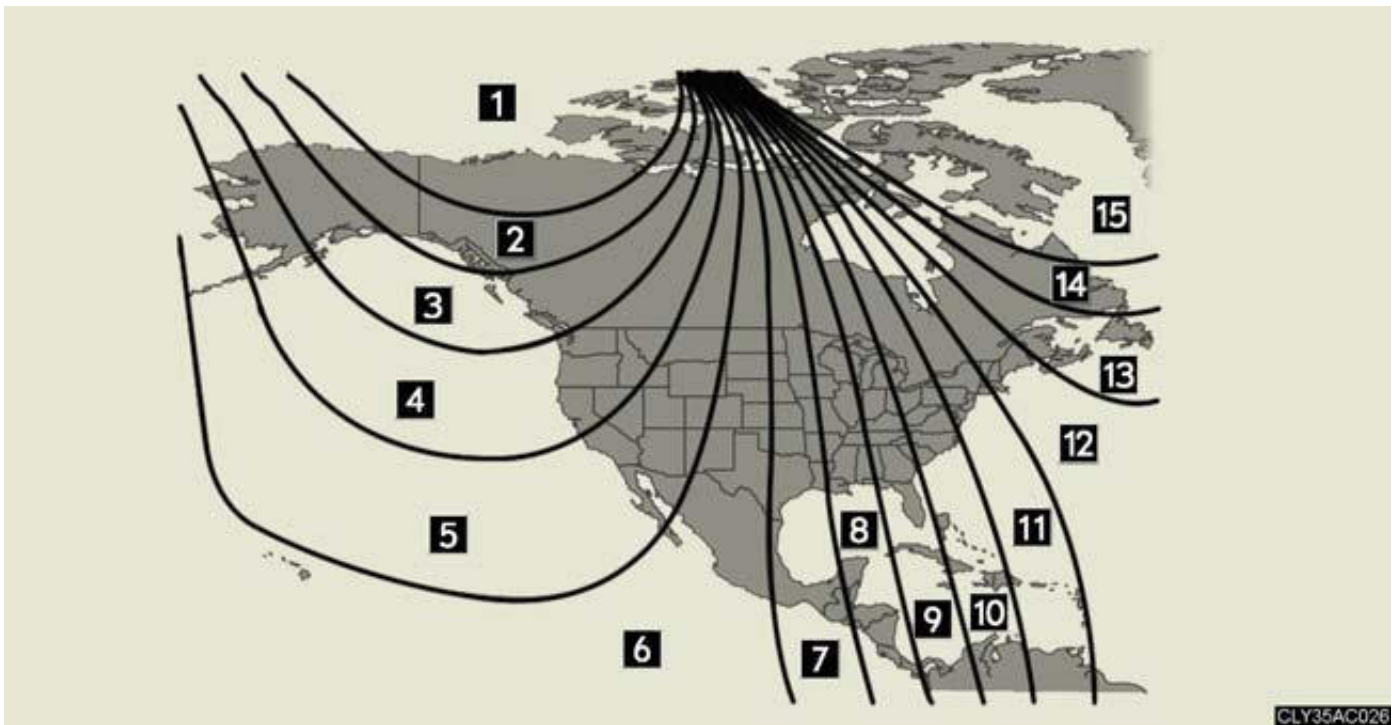

The direction display deviates from the true direction determined by the earth's magnetic field. The amount of deviation varies according to the geographic position of the vehicle.

If you cross over a map boundary shown in illustration, the compass will deviate.

To obtain higher precision or perfect calibration, refer to the following.

Deviation calibration

1. Stop the vehicle where it is safe to drive in a circle.



2. Push and hold "AUTO" for 6 seconds.


A number (1 to 15) appears on the compass display.

3. Press “AUTO”, and referring to the map above, select the number of the zone where you are.

If the direction is displayed several seconds after adjustment, the calibration is complete.


Circling calibration

1. Stop the vehicle where it is safe to drive in a circle.

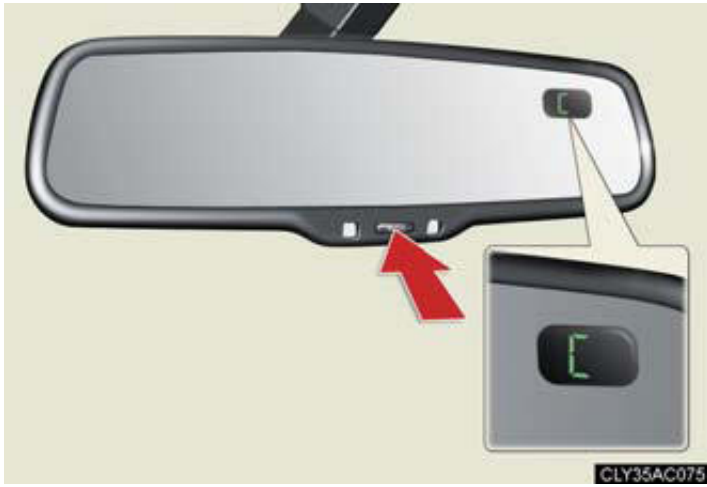

2. Push and hold “AUTO” for 9 seconds.

C appears on the compass display

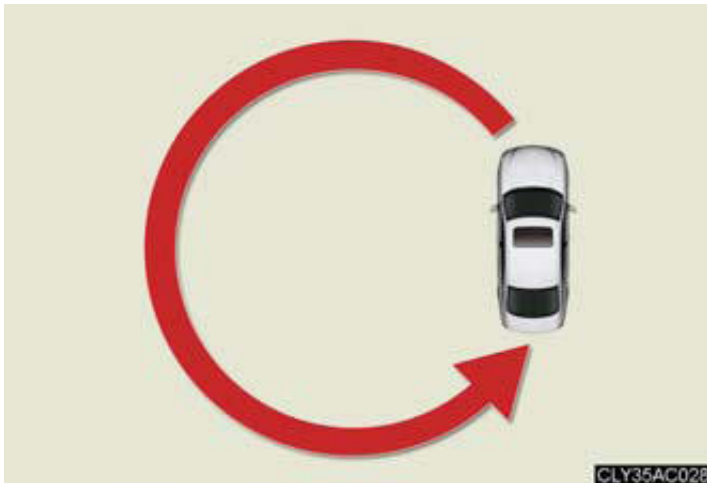

3. Drive the vehicle at 5 mph (8 km/ h) or less in a circle until a direction is displayed.

If there is not enough space to drive in a circle, drive around the block until the direction is displayed.

Conditions unfavorable to correct operation

The compass may not show the correct direction in the following conditions: - The vehicle is stopped immediately after turning.

- The vehicle is on an inclined surface.

- The vehicle is in a place where the earth's magnetic field is subject to interference by artificial magnetic fields (underground car park/parking lot, under a steel tower, between buildings, roof car park/parking lot, near an intersection, near a large vehicle, etc.).

- The vehicle has become magnetized.

(There is a magnet or metal object near the inside rear view mirror.) - The battery has been disconnected.

- A door is open.

CAUTION:

While driving the vehicle Do not adjust the display. Be sure to adjust the display only when the vehicle is stopped.

When doing the circling calibration Be sure to secure a wide space, and watch out for people and vehicles in the neighborhood.

Do not violate any local traffic rules while performing circling calibration.


NOTICE:

To avoid compass malfunctions Do not place magnets or any metal objects near the inside rear view mirror.

Doing this may cause a malfunction of the compass sensor.

To ensure normal operation of the compass - Do not perform circling calibration of the compass in a place where the earth's magnetic field is subject to interference by artificial magnetic fields.

- During calibration, do not operate electric systems (moon roof, power windows, etc.) as they may interfere with the calibration.

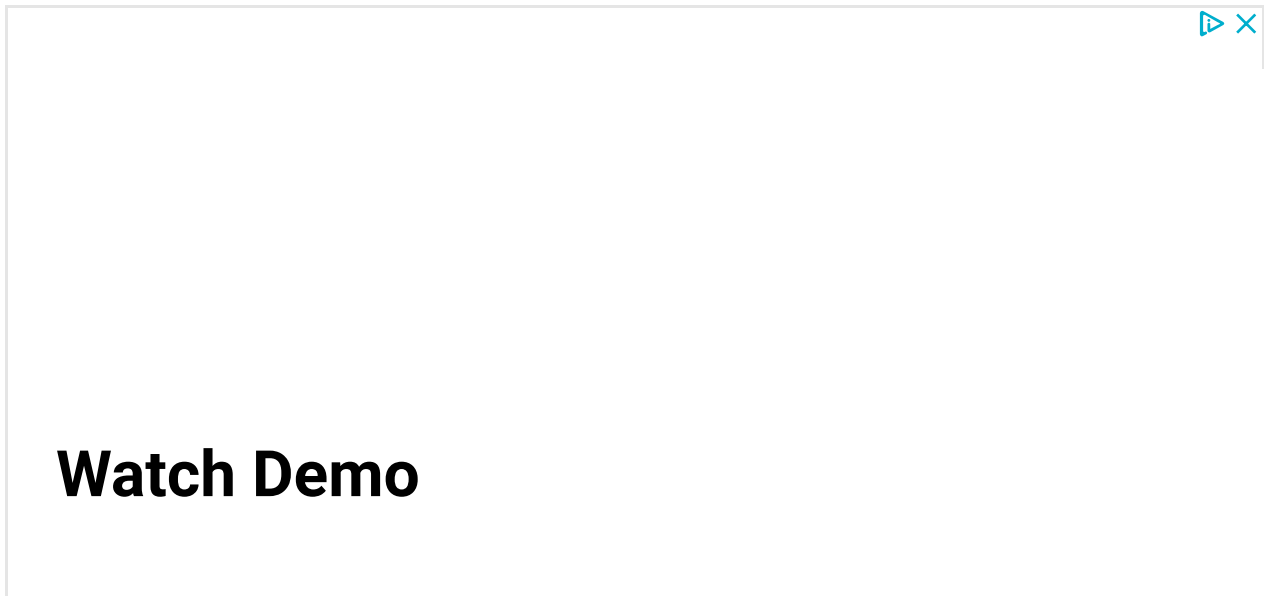

See also:

[Used Lexus ES 350](#)

Models Introduced for 2007, the present-generation Lexus ES 350 essentially hasn't changed much, making low-mileage, well-kept examples top used car choices. The previous generation of the ES, w ...

[Dinghy towing](#)

Your vehicle is not designed to be dinghy towed (with 4 wheels on the ground) behind a motor home. NOTICE: To avoid serious damage to your vehicle Do not tow your vehicle with four wheels on the ...

[Lexus Hybrid Drive Unique Energy Management System](#)

Through the application of brand-specific engineering solutions and a unique energy management system incorporating bespoke software tuning, Lexus engineers have focused on enhancing both the envi ...

Watch Demo

Podium

• Categories

- [Home](#)
- [Lexus IS](#)
- [Lexus ES](#)
- [Lexus GS](#)
- [Lexus LS](#)
- [Lexus RX](#)
- [Lexus GX](#)
- [Lexus CT](#)

