

REAR COMBINATION LAMP LENS LH REPLACEMENT

6509H-01

HINT:


COMPONENTS: [See page 65-5](#)

1. REMOVE REAR LAMP COVER LH

(a) Using a screwdriver, remove the rear lamp cover LH.

HINT:

Tape the screwdriver tip before use.

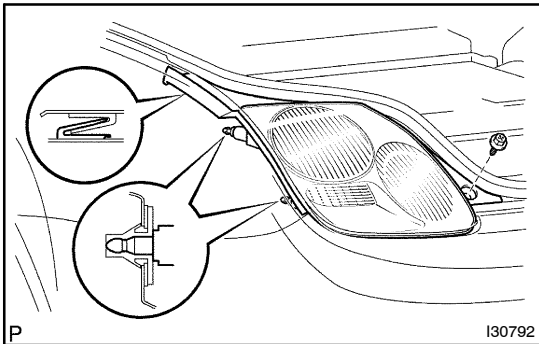

2. REMOVE REAR COMBINATION LAMP LENS LH

- (a) Remove the bolt.
- (b) Pull out the rear combination lamp lens LH forward, then disconnect the 2 pins and rear combination lamp guide of body side.
- (c) Remove the 2 bulb sockets and rear combination lamp lens LH.