

## DIAGNOSTIC TROUBLE CODE CHART

### 1. DOOR ECU

#### Door ECU (driver's side, passenger's side)

| SAE code | Item  | Diagnosis  |
|----------|---|--|
| B1231    | Driver's side jam protection limit switch malfunctions    | Driver side power window regulator motor assembly open in limit switch system                |
| B1232    | Driver's side jam protection sensor malfunctions          | Driver side power window regulator motor assembly open or short in pulse sensor system       |
| B1233    | Passenger's side jam protection limit switch malfunctions | Passenger side power window regulator motor assembly RH open in limit switch system          |
| B1234    | Passenger's side jam protection sensor malfunctions       | Passenger side power window regulator motor assembly RH open or short in pulse sensor system |

### 2. TRANSPONDER KEY (IMMOBILISER) ECU

#### Immobiliser ECU

| SAE code | Item                                   | Diagnosis   |
|----------|--|---|
| B2780    | Key unlock warning switch malfunctions | Key unlock warning switch ON is not detected when the ignition switch is ON |

### 3. MONITOR CODE

#### HINT:

- Monitor code shows the switch condition when a DTC is output.
- If a code is indicated when the switch is not operated, it is detected that the switch is stuck. If a code is not indicated when the switch is operated, it is detected that the switch contact condition is bad.

| SAE code | Item                                  | Diagnosis   |
|----------|---------------------------------------|---|
| B1221    | Driver's side switch 1 (operating)    | Power window switch of master switch or door unlock switch (for manual operation) is ON |
| B1223    | Passenger's side switch 1 (operating) | Switch of the passenger's side regulator switch is ON                                   |