

OPERATING INSTRUCTIONS FOR SC430 LuxLink® Luxury Vehicle Remote Control

TO USE REMOTE START

1. Press Unlock Button first one time.
2. Press Lock button two times to start.

Note: You have 3 seconds to unlock the doors before the ignition is turned on. When the ignition is turned on the remote is disabled and the door will have to be unlocked by using the driver's door cylinder.

3. Press Unlock Button within 2 seconds to unlock Driver's Door, or press Unlock Button 2 times to unlock both doors.
 - Note: For security: Unlock must be pressed before starting, to prevent alarm from going off.
 - Note: Key must be put in ignition and turned to on position prior to stepping on brake pedal or engine will stall.
 - Note: After approximately 15 minutes of running, vehicle will automatically turn off.
 - Note: Have FUN! Show it off! Heat up or cool down your cabin whenever possible by starting the car early!
 - **Note: Hood pin must be closed in order for remote start to operate.**

TO USE REMOTE TOP

*****CAUTION:** The only way to stop the remote top while in motion is to turn the key to the lock position in the driver's door key hole or by pressing the inside top switch.

4. Press and hold Unlock Button for approximately 3 seconds till a long audible beep is heard.
 - Note: Once you have heard the long audible beep, you have approximately 2 seconds to press the lock button and lock the doors. After the top has completed its cycle, the doors will be locked and the alarm will be armed.