

- Note: LuxLink detects what position the top is in, therefore will open or close the top accordingly

### TO OPERATE REMOTE TOP AND STARTER SIMUTANEOUSLY

1. Press and hold Unlock Button for approximately 3 seconds till a long audible beep is heard then immediately press the lock button 2 times. (Timing is crucial)

- Note: The engine will first start then the top will either open or close.
- Note: LuxLink detects what position the top is in, therefore will open or close the top accordingly

### TO OPERATE REMOTE TOP ONE TOUCH

1. Press the inside top switch 2 times to either open or close the top.

- Note: You can stop the top by pressing the opposite button one time.

### TO OPERATE REAR QUARTER WINDOWS

1. Press driver's window switch down 3 times.
  - a. Window's will either open or close.
  - b. Wait at least 5 seconds between each window motion.

Note: The rear quarter windows alternate between up and down. If window does not move on the first try wait 5 seconds and try again. Rear windows do not have the ability to recognize if the windows are in the up or down position.

For Ordering or Warranty Information please visit [www.luxurymotorworks.com](http://www.luxurymotorworks.com) or  
Luxury Motorworks  
227 W. Chestnut Ave.  
Monrovia, CA 91016  
626-256-4849