


FAN AND GENERATOR V BELT REPLACEMENT

140C8-01

1. REMOVE AIR CLEANER INLET NO. 1

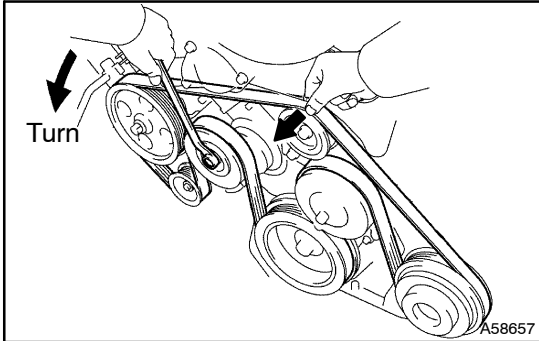

2. REMOVE FAN AND GENERATOR V BELT

- Loosen the belt tension by turning the belt tensioner counterclockwise, and remove the belt.
- Disconnect the belt from the idler pulley No. 2, and remove the belt.


HINT:

The tension pulley has a left-hand thread.

3. INSPECT V-RIBBED BELT TENSIONER ASSY


- Remove the V belt from the tensioner pulley. Then check that nothing gets caught the tensioner by turning it clockwise and counterclockwise.

When a malfunction exists, replace the tensioner.

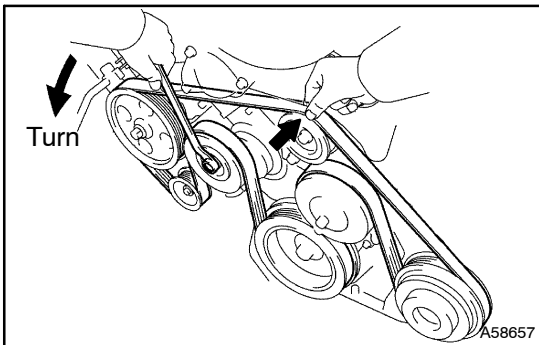

4. INSTALL FAN AND GENERATOR V BELT

- Set the belt to everything except the idler pulley No. 2 as shown in the illustration.
- Loosen the belt by turning the belt tensioner counterclockwise.
- Connect the belt to the idler pulley No. 2.

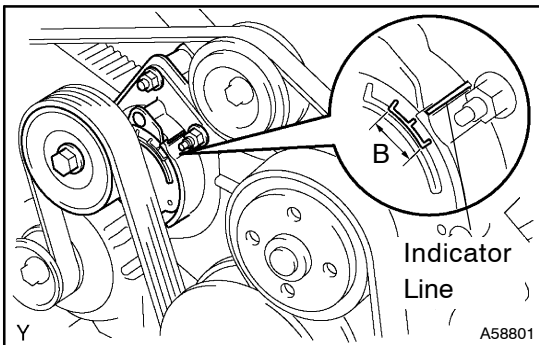

- After a new belt has been installed, check that the indicator line is within the B range.

5. INSTALL AIR CLEANER INLET NO. 1