


# FOG LAMP UNIT ADJUSTMENT

651C1-01

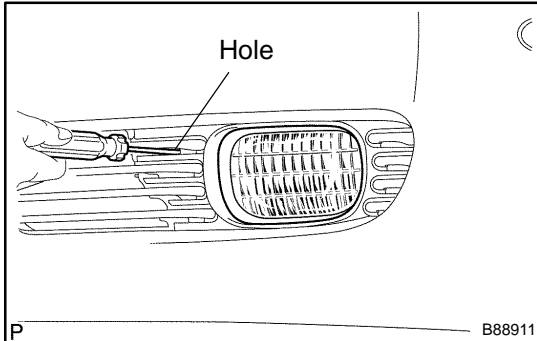

## 1. ADJUST FOG LAMP AIMING

- (a) Tire inflation pressure is the specified value (120 kPa (1.2 kgf/cm<sup>2</sup>, 17 psi)).
- (b) Start the engine.
- (c) Insert the screwdriver tip into the hole in the front bumper and rotate the aiming screw while observing through the front bumper (vertical adjustment).

### HINT:

Rotating the screwdriver clockwise aims the fog lamp axis downward, and rotating counterclockwise aims it upward.