

OVERHAUL

HINT:


- COMPONENTS: See page [65-2](#).
- The installation procedures are the removal procedures in reverse order.
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- A bolt without a torque specification is shown in the standard bolt chart (see page [03-2](#)).

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE RADIATOR GRILLE (See page [76-2](#))
3. REMOVE FRONT FENDER LINER LH (See page [76-2](#))
4. REMOVE FRONT FENDER LINER RH (See page [76-2](#))
5. REMOVE FRONT BUMPER COVER (See page [76-2](#))

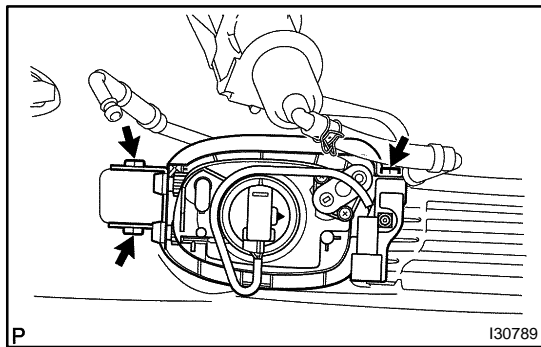

6. REMOVE FOG LAMP UNIT LH

- (a) Remove the 3 bolts and fog lamp.
- (b) Remove the screw and fog lamp bracket LH.
- (c) Remove the bulb from the lamp unit.

7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

8. PERFORM INITIALIZATION (See page [01-17](#))

NOTICE:

Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.

9. ADJUST FOG LAMP AIMING (See page [65-7](#))