



Vehicle: Electrical Diagrams

System Diagram

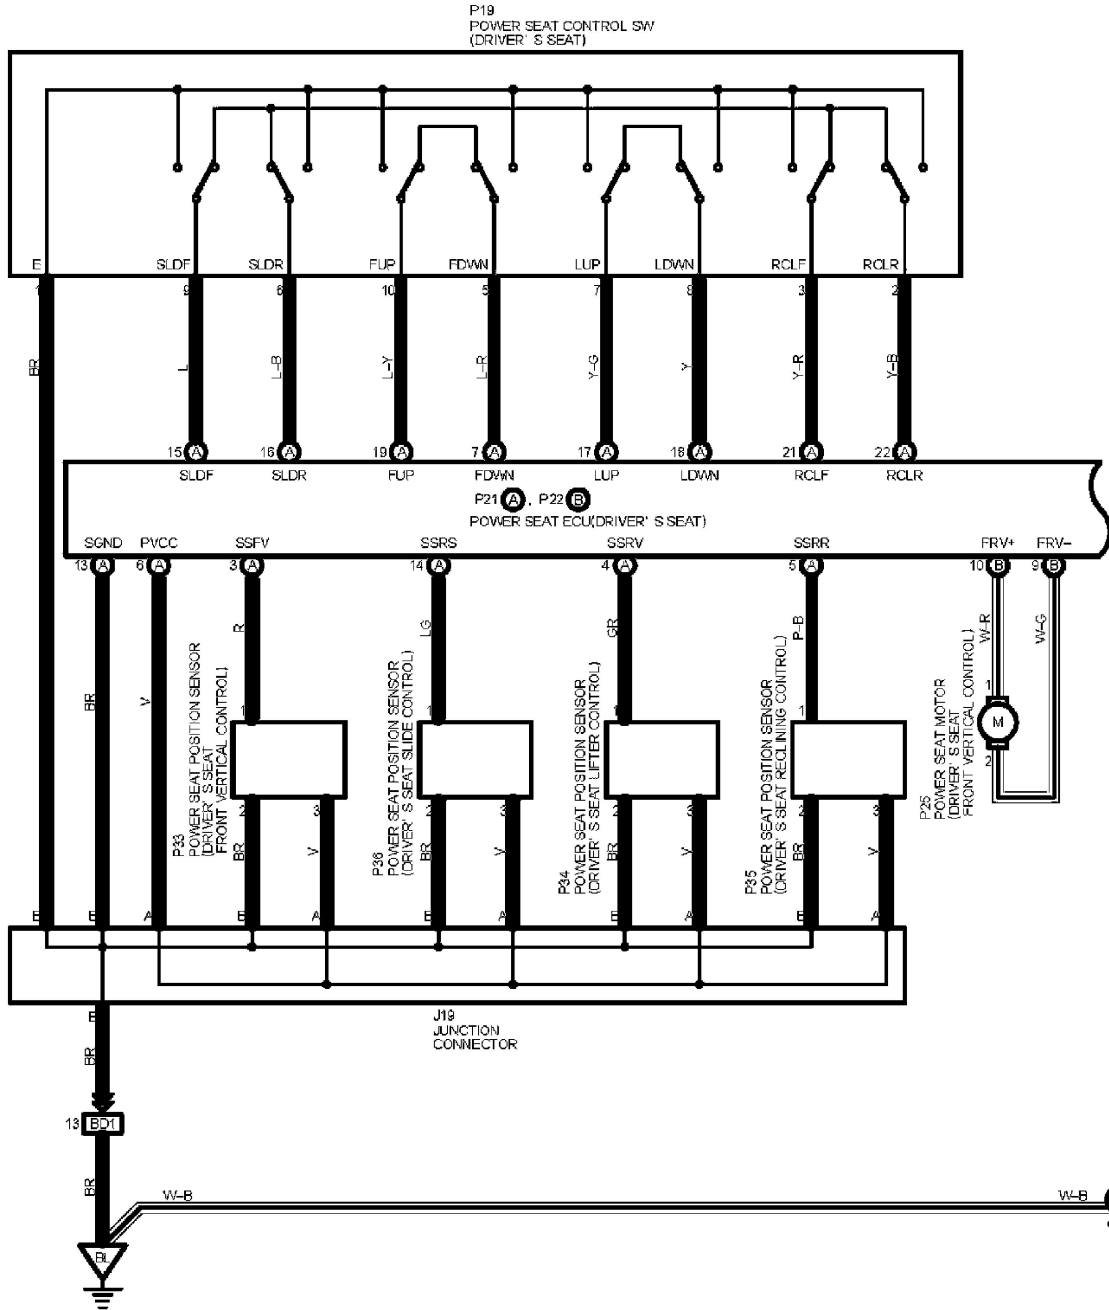


Power Seat Part 1

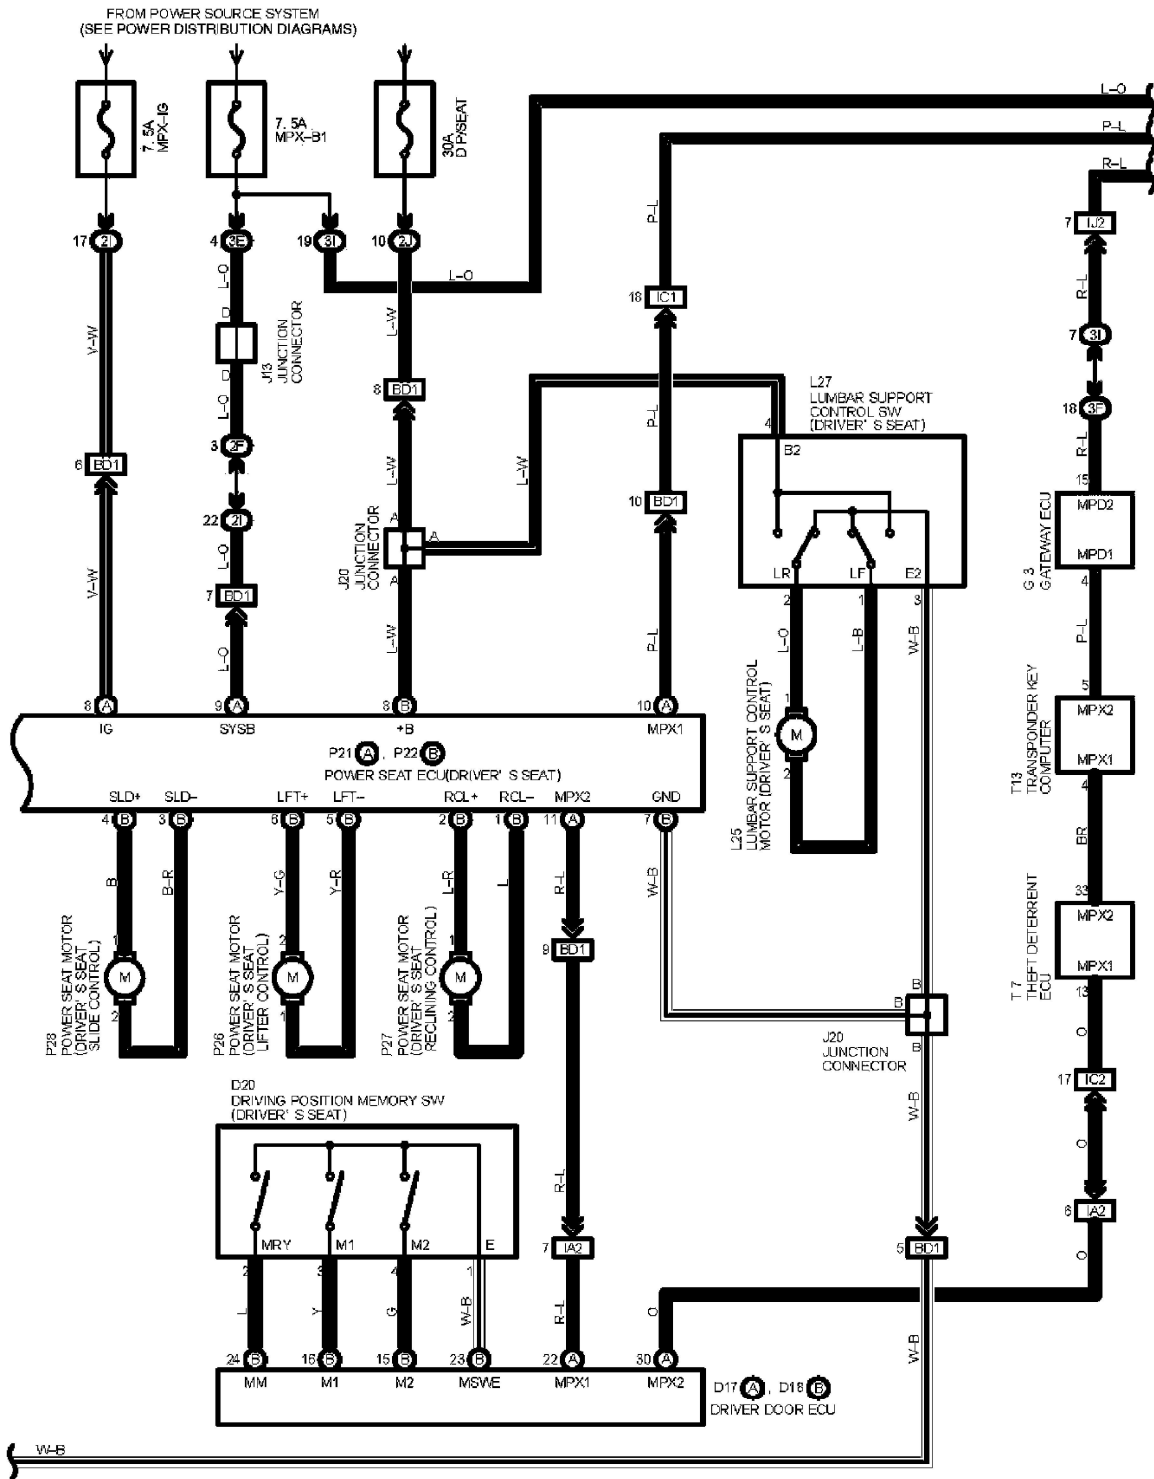

Power Seat Part 2

FROM POWER SOURCE SYSTEM
(SEE POWER DISTRIBUTION DIAGRAMS)

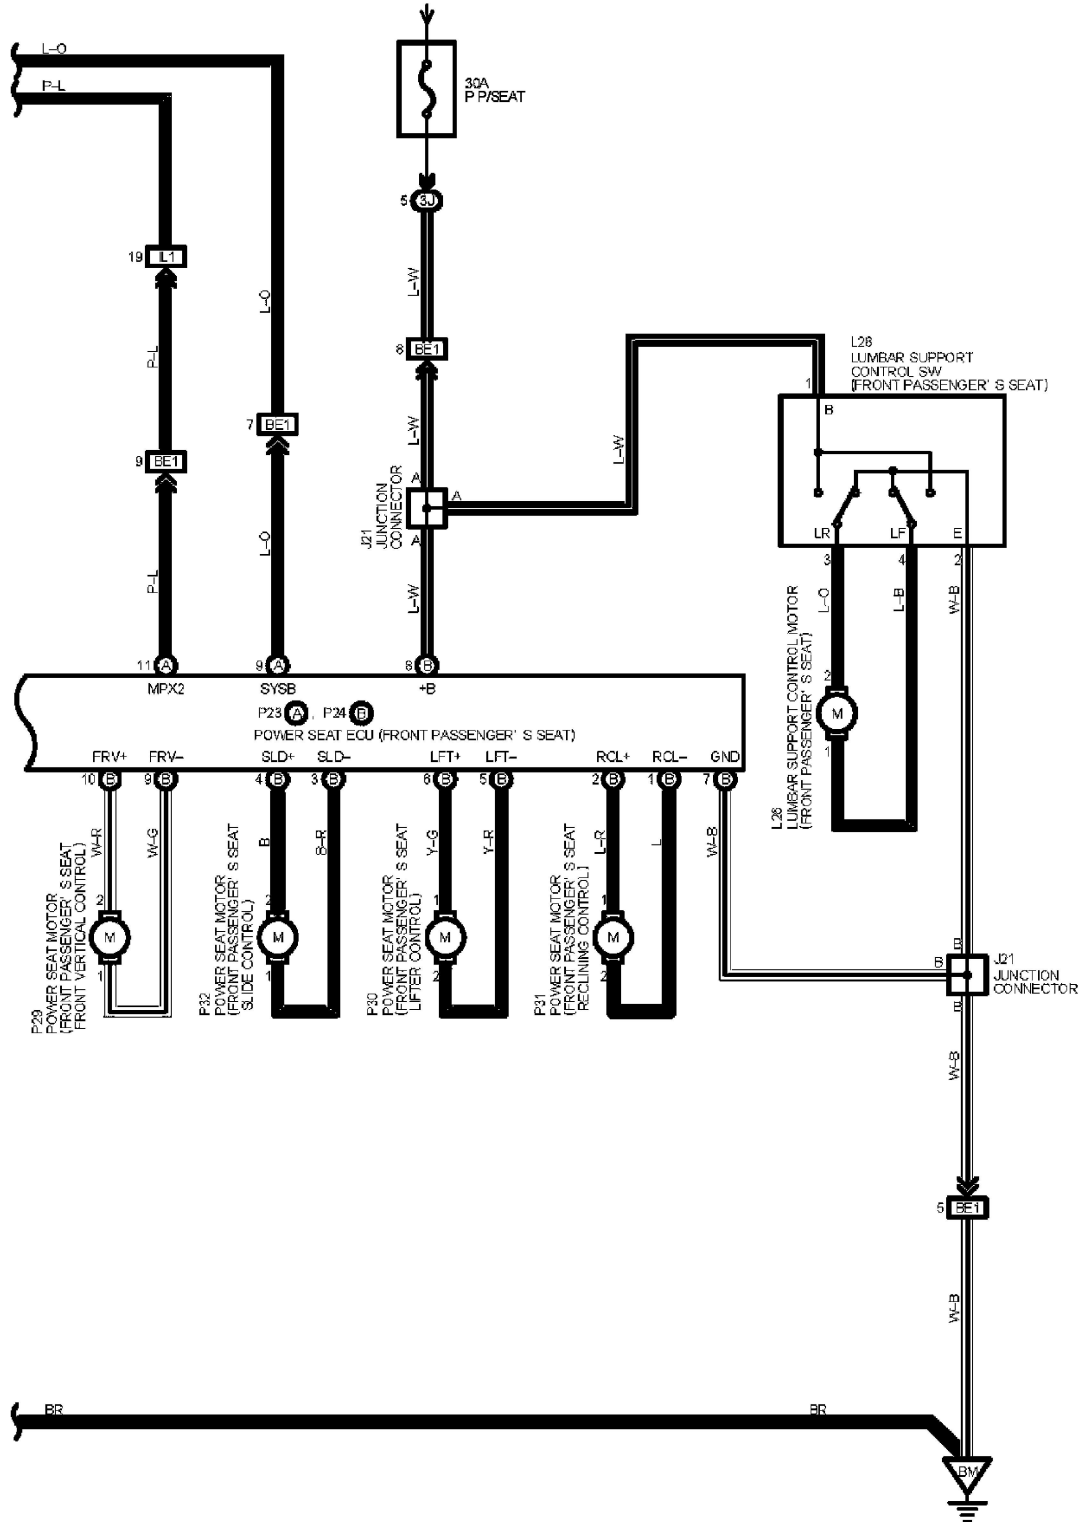

Power Seat Part 4

SERVICE HINTS**P21 (A), P22 (B) POWER SEAT ECU (DRIVER'S SEAT)**(A) 9, (B) 8-GROUND : Always approx. **12** volts(A) 8-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position

(A) 13, (B) 7-GROUND : Always continuity

P23 (A), P24 (B) POWER SEAT ECU (FRONT PASSENGER'S SEAT)(A) 9, (B) 8-GROUND : Always approx. **12** volts

(A) 13, (B) 7-GROUND : Always continuity

**: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	Junction Block and Wire Harness (Connector Location)
2F	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
2I	Floor No.2 Wire and Driver Side J/B (Left Kick Panel)
2J	
3E	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
3F	
3I	Floor Wire and Passenger Side J/B (Right Kick Panel)
3J	

**: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA2	Front Door LH Wire and Floor No.2 Wire (Near the Driver Side J/B)
IC1	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IC2	
IJ2	Front Door RH Wire and Floor Wire (Near the Passenger Side J/B)
IL1	Instrument Panel Wire and Floor Wire (Right Kick Panel)
BD1	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)
BE1	Floor Wire and Front Seat RH Wire (Under the Front Passenger's Seat)

**: GROUND POINTS**

Code	Ground Points Location
BL	Under the Driver's Seat
BM	Under the Front Passenger's Seat

Diagram Legend

Locations: The locations of components, connectors, ground points, and splices referred to within these diagrams can be found at Vehicle Locations. See: Locations

Connector Views: The connector views for connectors referred to within these diagrams can be found at the Vehicle level Connector Views. See: Connector Views