


y B00809

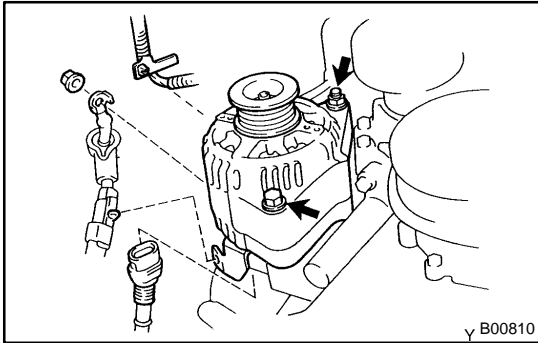

y B00810

REMOVAL

1. REMOVE BATTERY CLAMP COVER
2. REMOVE AIR CLEANER INLET
3. REMOVE GENERATOR DRIVE BELT

Loosen the belt tension by turning the belt tensioner counter-clockwise, and remove the drive belt.

HINT:

The pulley bolt for the belt tensioner has a left - hand thread.

4. REMOVE OIL PAN PROTECTOR
5. REMOVE ENGINE UNDER COVER
6. DISCONNECT PS OIL COOLER PIPE FROM OIL PAN
7. REMOVE PS PUMP

(See page [EM-77](#))

8. REMOVE GENERATOR

- (a) Disconnect the generator connector.
- (b) Remove the rubber cap and nut, and disconnect the generator wire.
- (c) Disconnect the generator wire clamp from the cord clip on the generator.
- (d) Disconnect the heated oxygen sensor wire clamp from the cord clip on the generator.
- (e) Remove the bolt, nut and generator.