


## REMOVAL

### 1. w/o Power Headrest: REMOVE HEADREST

While pushing the lock button, pull up the headrest to remove it.

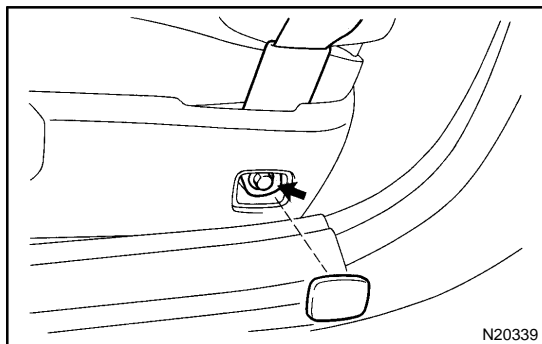

### 2. REMOVE FRONT SEAT OUTER BELT FLOOR ANCHOR

- (a) Using a screwdriver, remove the seat belt anchor cover cap.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the front seat outer belt floor anchor.

**Torque: 43 N·m (440 kgf-cm, 32 ft-lbf)**

### 3. REMOVE SEAT TRACK COVER

Using a screwdriver, pry out the 4 covers.

HINT:

Tape the screwdriver tip before use.

### 4. REMOVE FRONT SEAT

- (a) Remove the 4 bolts.

**Torque: 37 N·m (375 kgf-cm, 27 ft-lbf)**

- (b) Disconnect the connectors.