


ADJUSTMENT

1. INSPECT SHIFT LEVER POSITION


- (a) When shifting from the P to R position with the ignition switch on and brake pedal depressed, make sure that the shift lever moves smoothly and moves correctly into position.
- (b) Start the engine and make sure that the vehicle moves forward when shifting from the N to D position and moves rearward when shifting to the R position.

If operation cannot be done as specified, inspect the park/neutral position switch assy and check the shift lever assy installation condition.

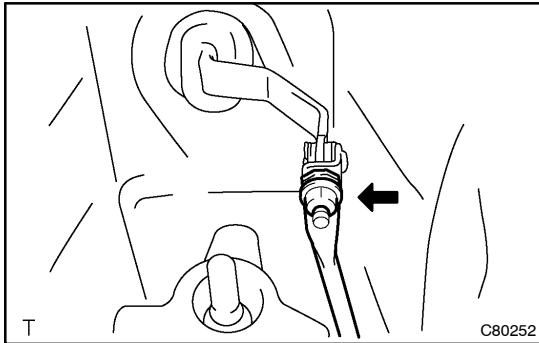

2. ADJUST SHIFT LEVER POSITION

- (a) Remove the nut and disconnect the shifting rod from the connecting rod swivel.

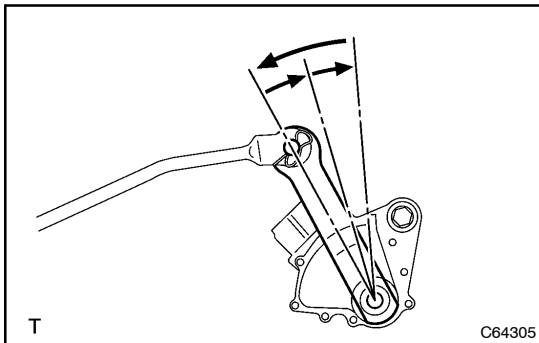

- (b) Turn the control shaft lever of the neutral start switch counterclockwise until it stops, and turn it clockwise 2 notches to set it to the N position.
- (c) Move the shift lever to the N position and tighten the nut while lightly pushing the lever toward the R position.

NOTICE:

Do not push the shift lever too hard.

- (d) After adjustment, check that the shift lever moves smoothly and the shift lever and gear operate correctly.