

REMOVAL [10/2014 -]

PROCEDURE

1. REMOVE RADIATOR SUPPORT OPENING COVER


- a. Remove the 10 clips and radiator support opening cover.




Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

2. REMOVE RADIATOR GRILLE PROTECTOR

- a. Remove the 2 radiator grille protectors.



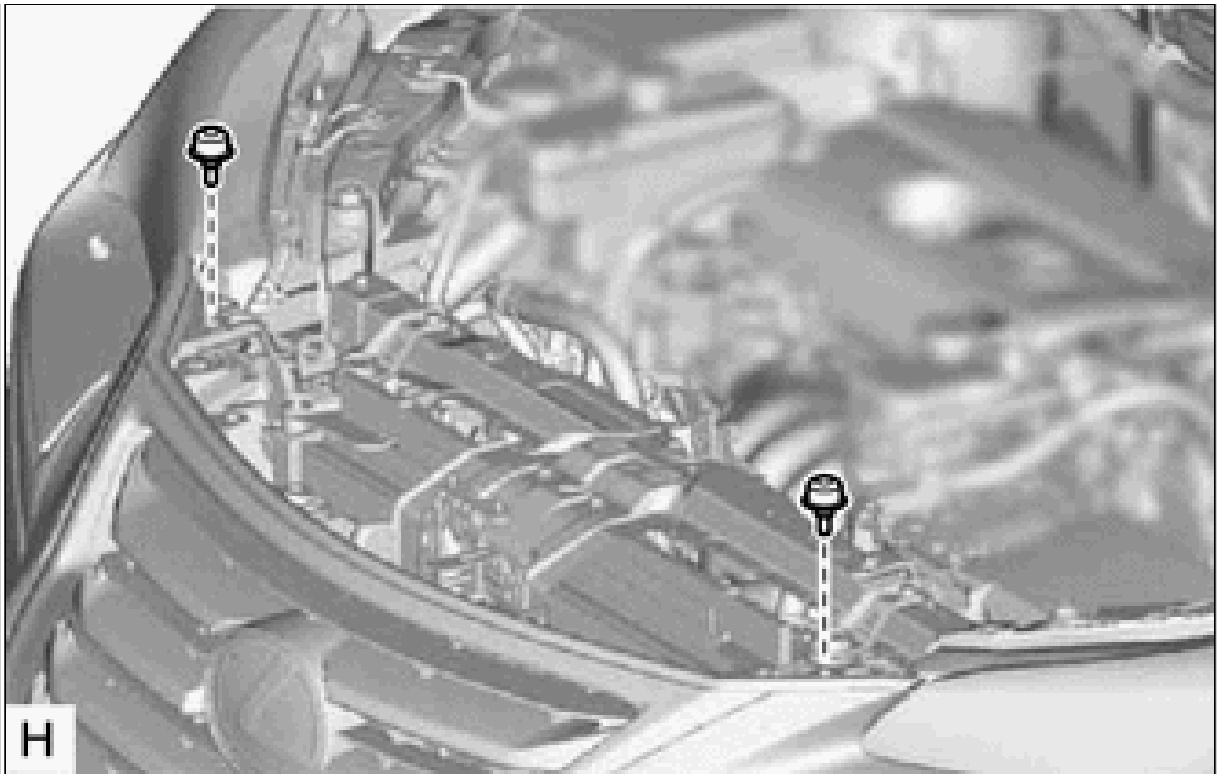

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

3. REMOVE FRONT FENDER MOULDING SUB-ASSEMBLY LH

Refer to REMOVAL [10/2014 -]

4. REMOVE FRONT FENDER MOULDING SUB-ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

5. REMOVE NO. 1 MOULDING TAPE


Refer to DISASSEMBLY [10/2014 -]


6. REMOVE NO. 2 MOULDING TAPE

Refer to DISASSEMBLY [10/2014 -]

7. REMOVE FRONT FENDER FRONT SPLASH SHIELD LH

a.



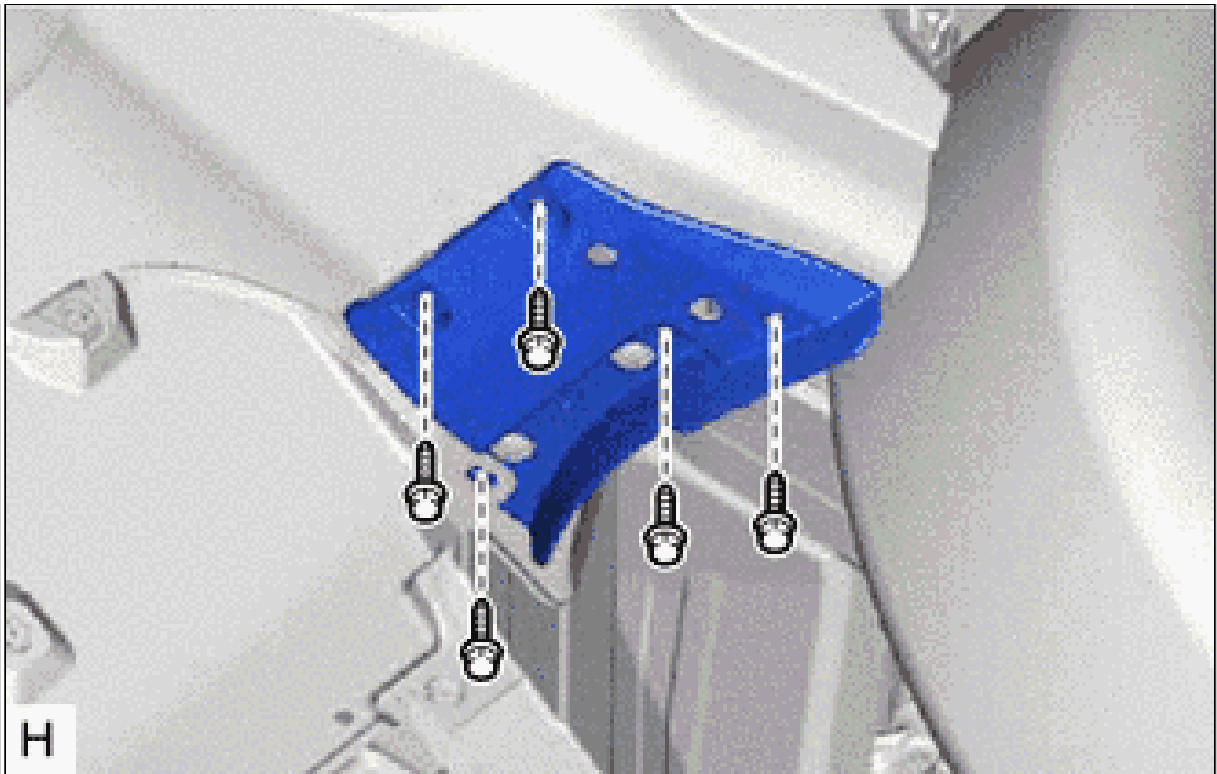

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

Remove the 5 screws and front fender front splash shield LH.


8. REMOVE FRONT FENDER FRONT SPLASH SHIELD RH


HINT:

Use the same procedure described for the LH side.

9. REMOVE FRONT BUMPER COVER


- a. Remove the 4 bolts.




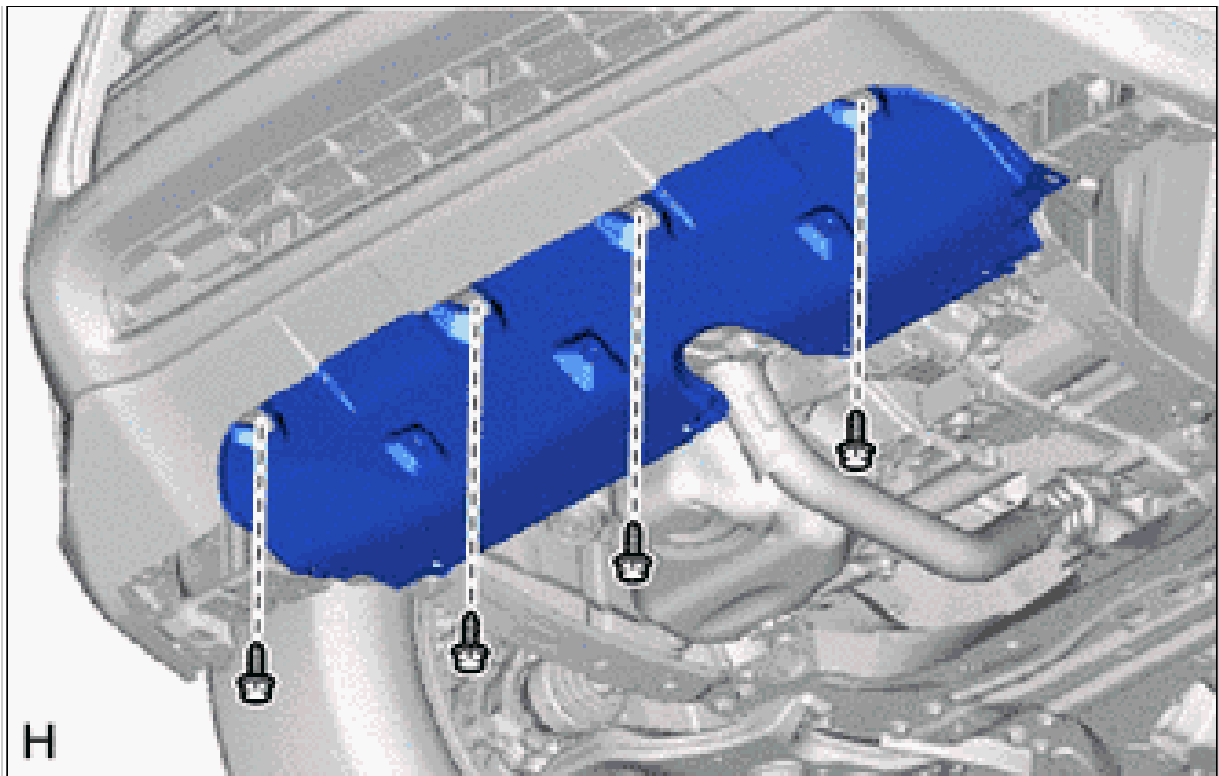

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

- b. Put protective tape around the front bumper cover.



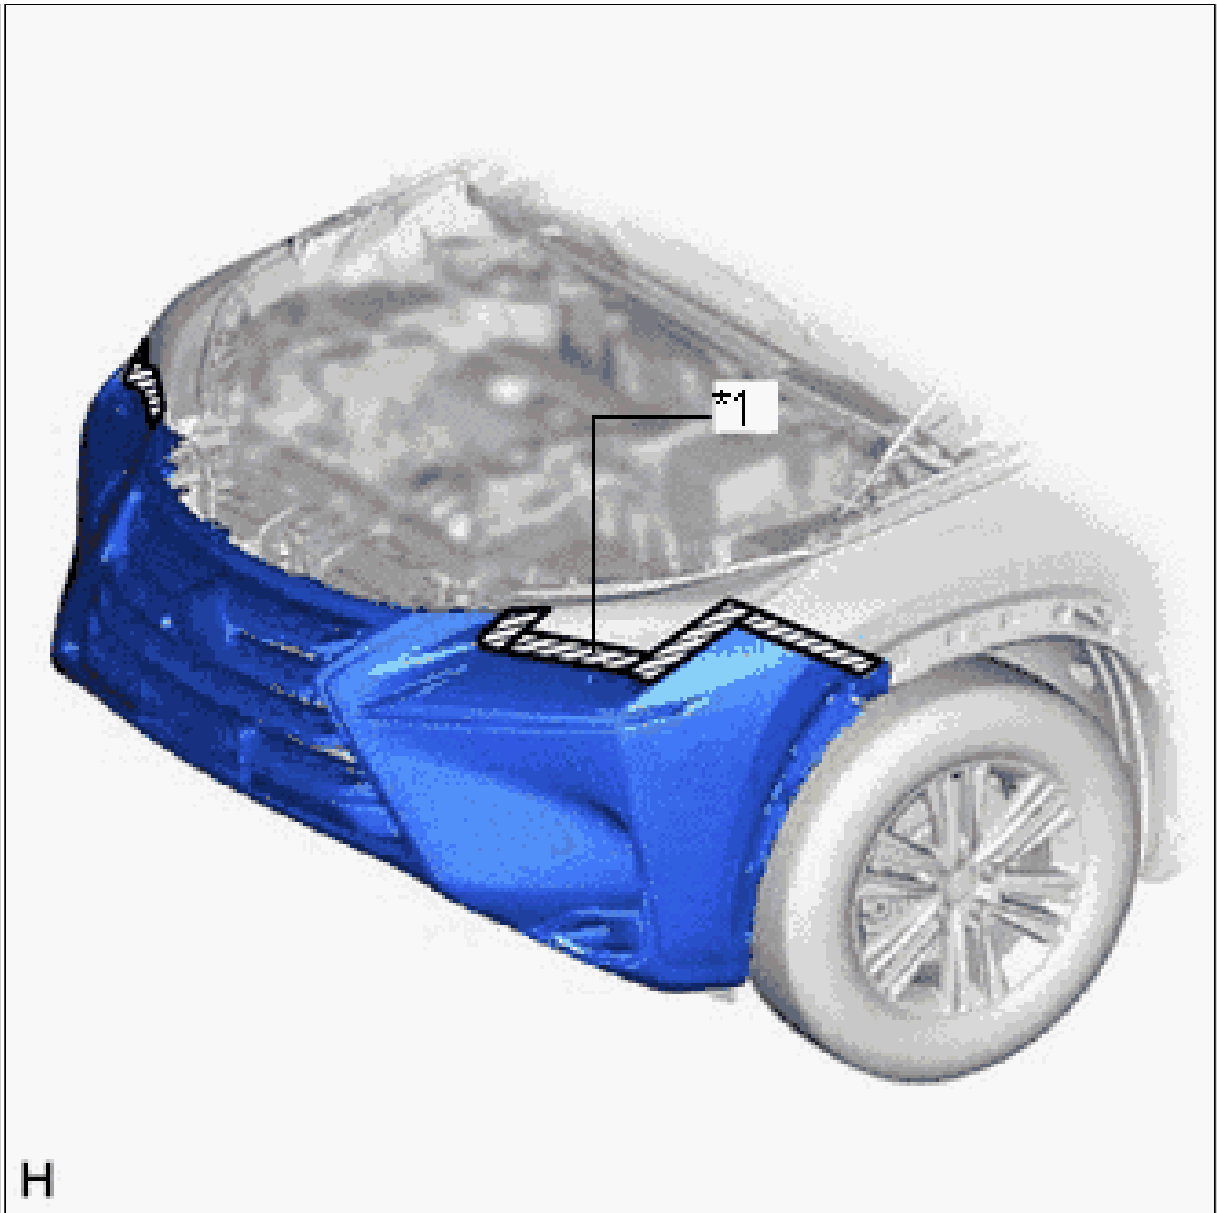


Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

*1	Protective Tape
----	-----------------


c. Remove the 2 clips.



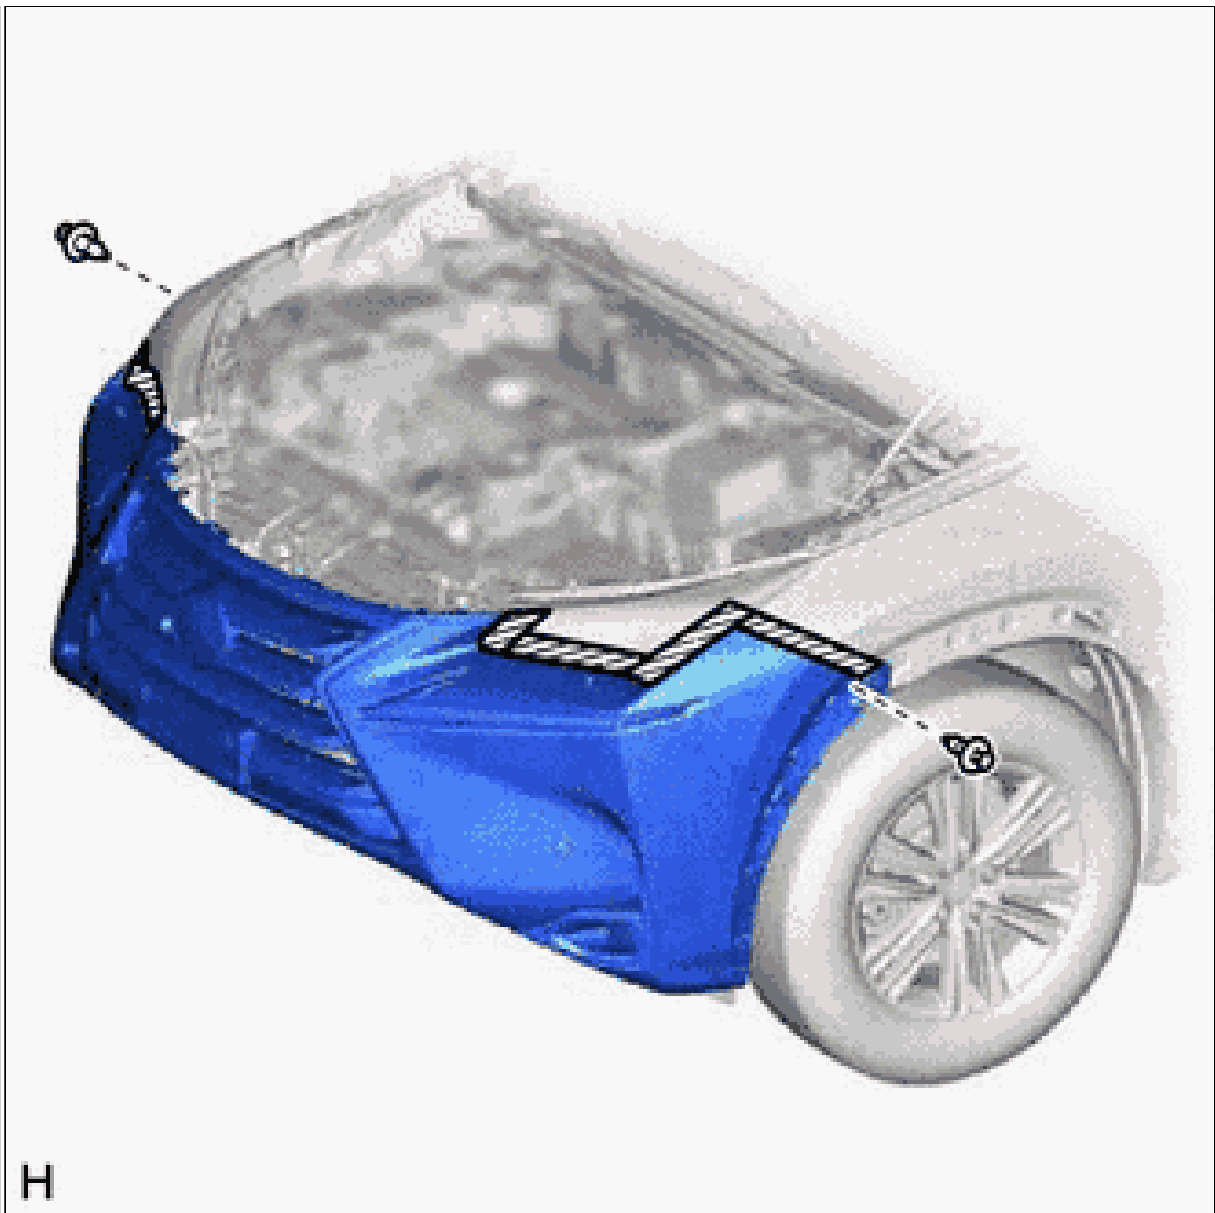

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002


d. Remove the 2 bolts.

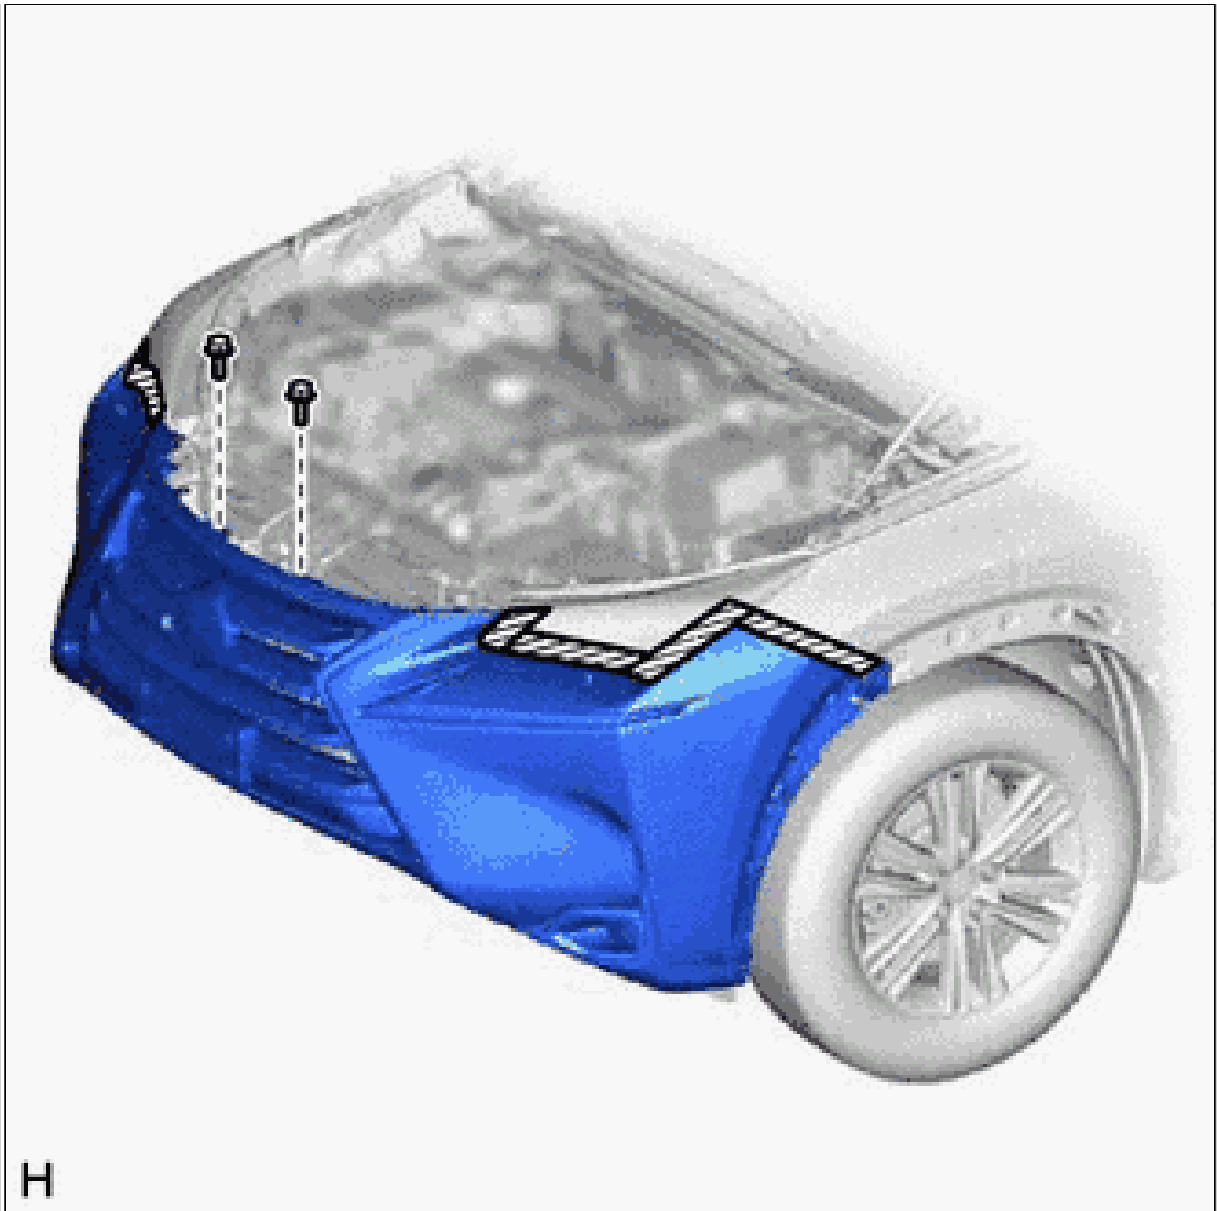

H

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002


e. Remove the 2 clips.

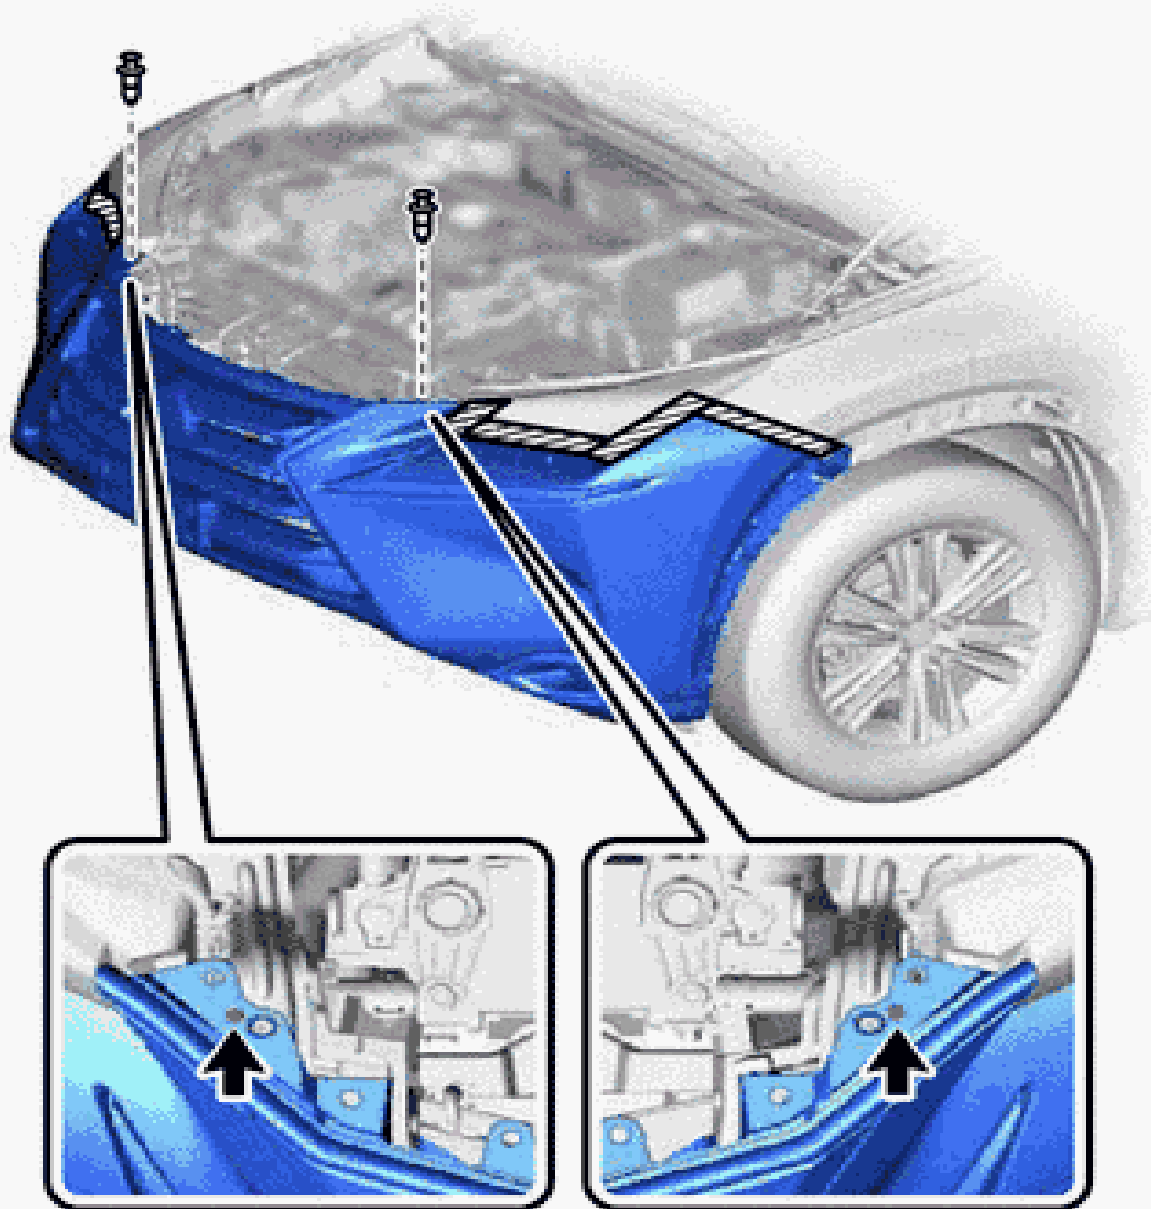

H

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

f. Detach the 6 claws and remove the front bumper cover.

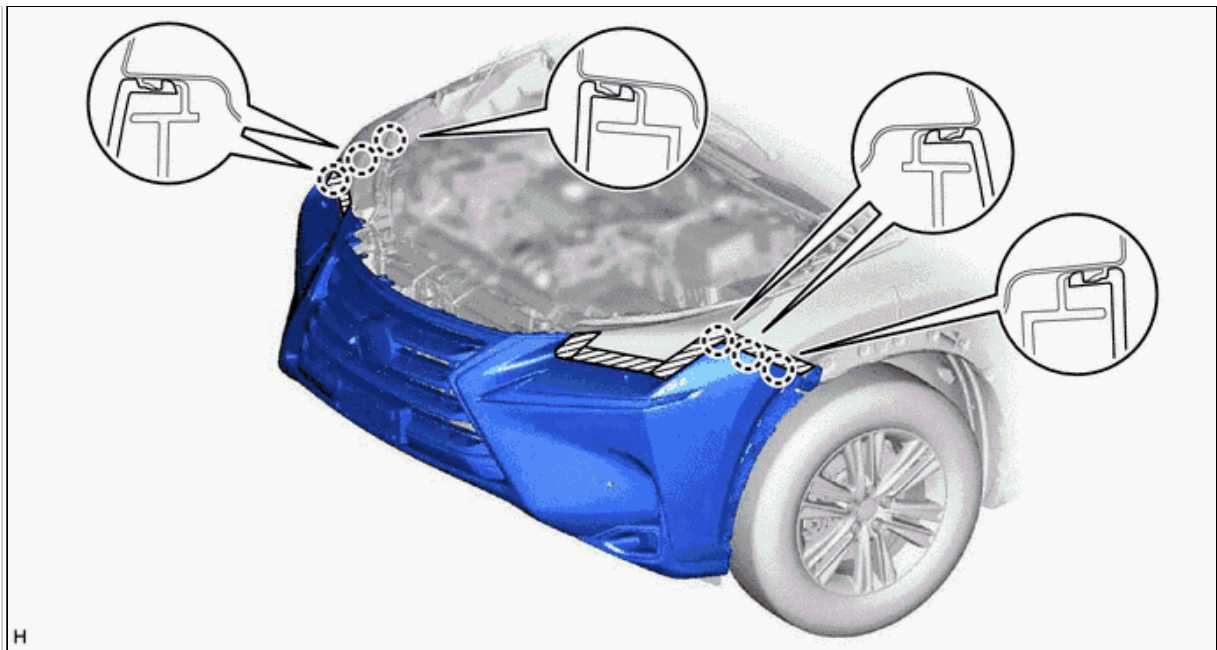

H

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

g. w/ Headlight Cleaner System:

a. Disconnect the headlight washer hose, and then drain the washer fluid.

HINT:

Use a container to collect the washer fluid.


h. Disconnect the 2 fog light connectors.


i. Disconnect the 2 fog clearance connectors.

j. Disconnect the No. 3 engine room wire connector.

10. REMOVE FRONT BUMPER ENERGY ABSORBER

a. Remove the front bumper energy absorber.




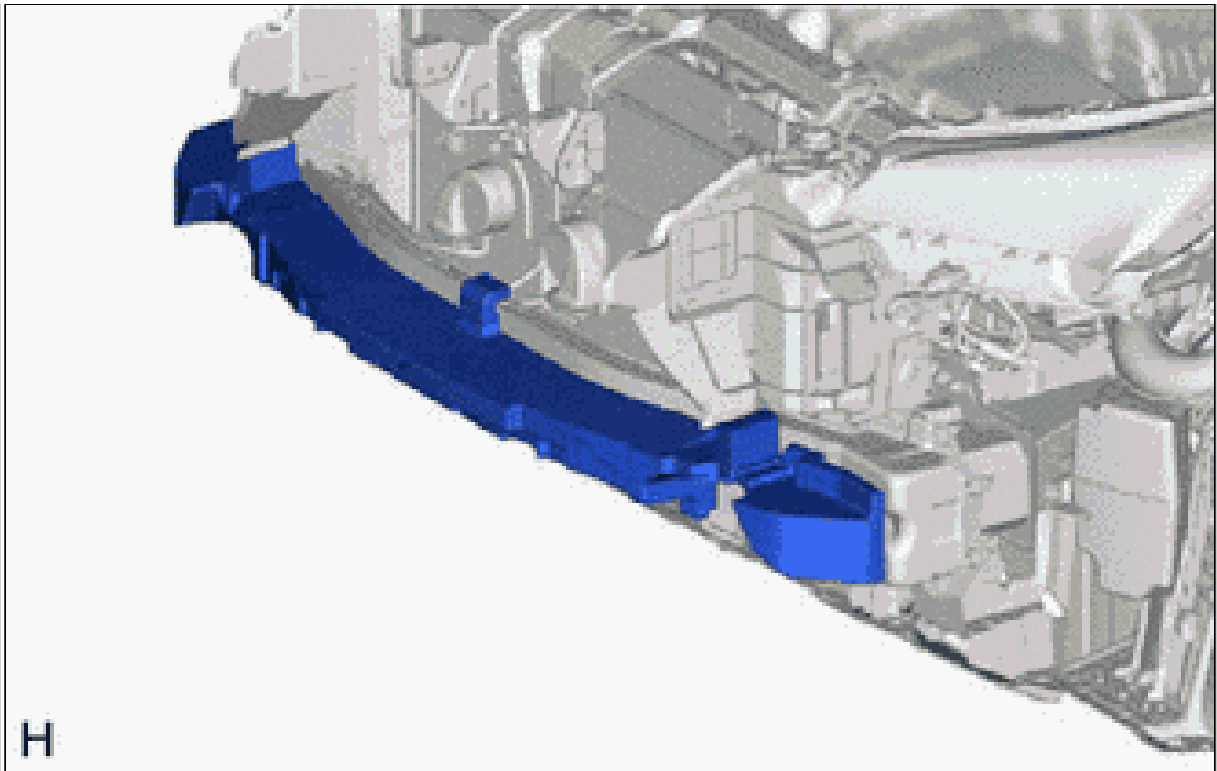

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

11. REMOVE FRONT BUMPER SIDE MOUNTING BRACKET ASSEMBLY LH


- a. Remove the 6 bolts and front bumper side mounting bracket assembly LH.

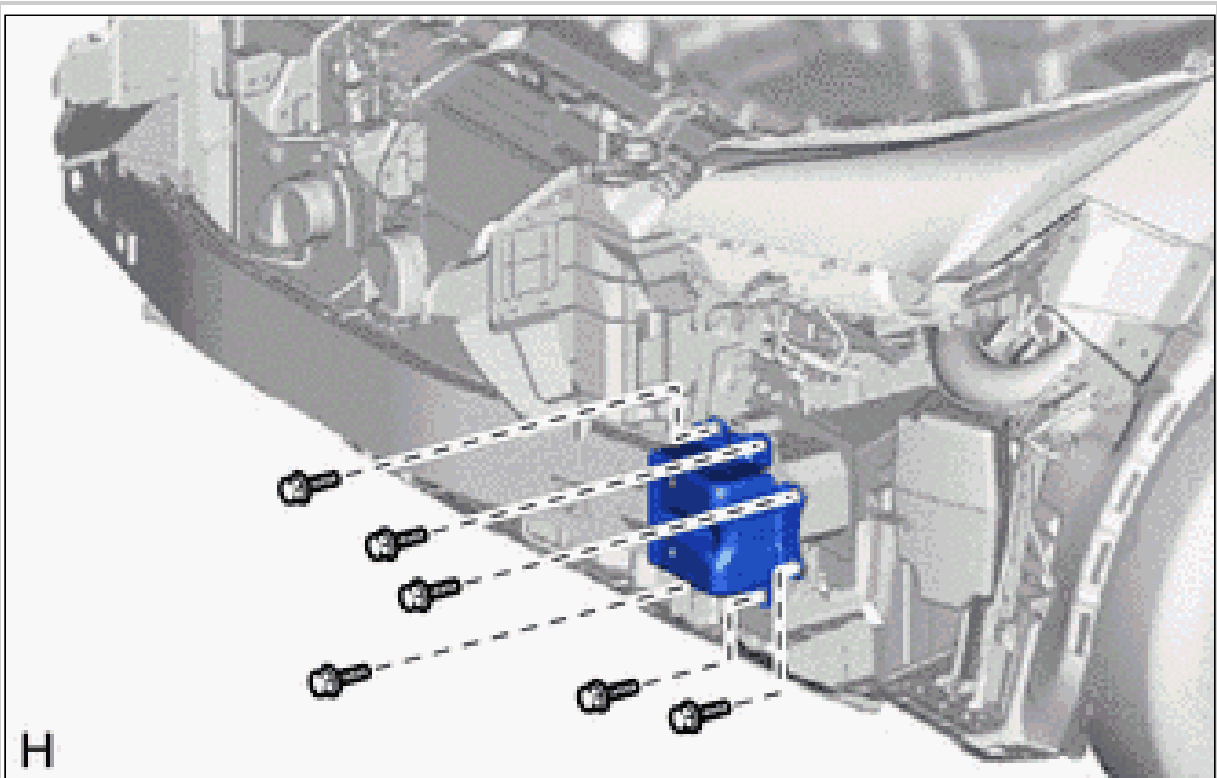

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

12. REMOVE FRONT BUMPER REINFORCEMENT SUB-ASSEMBLY


- a. Remove the 6 bolts and front bumper reinforcement sub-assembly.

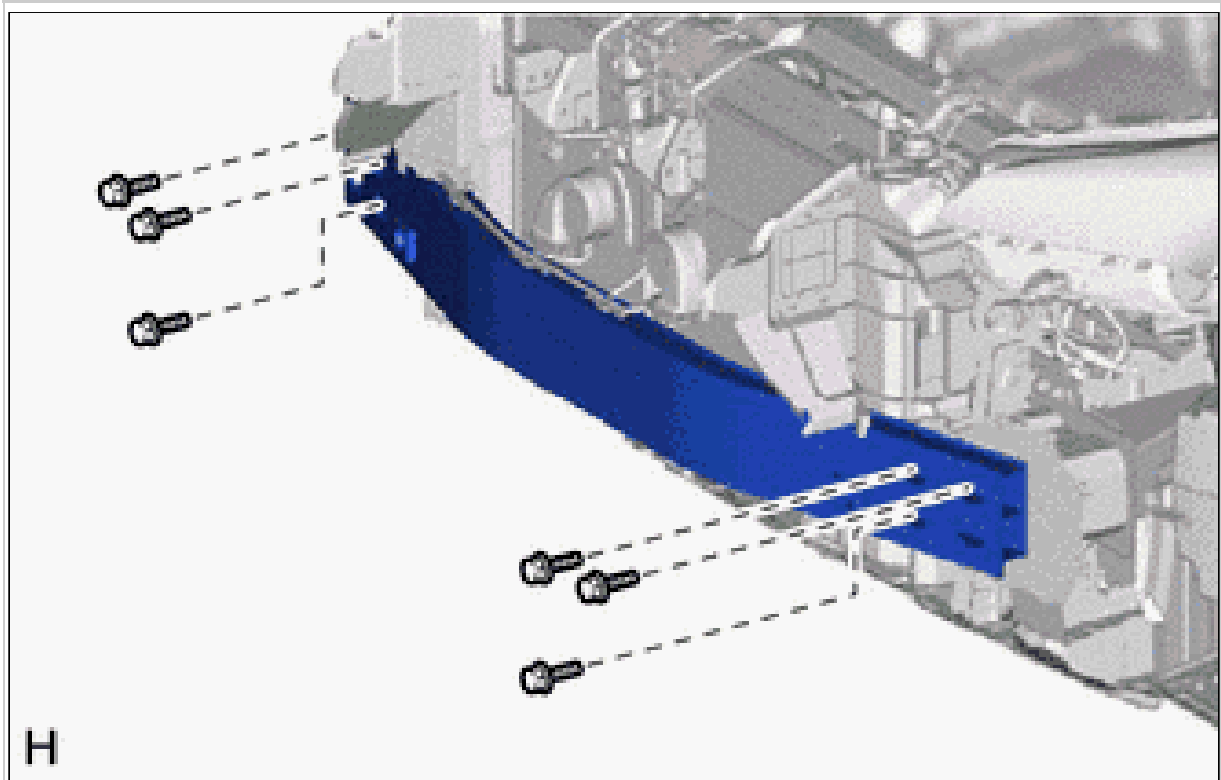


Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

13. REMOVE FRONT BUMPER SIDE RETAINER LH

- a. Remove the 2 screws.



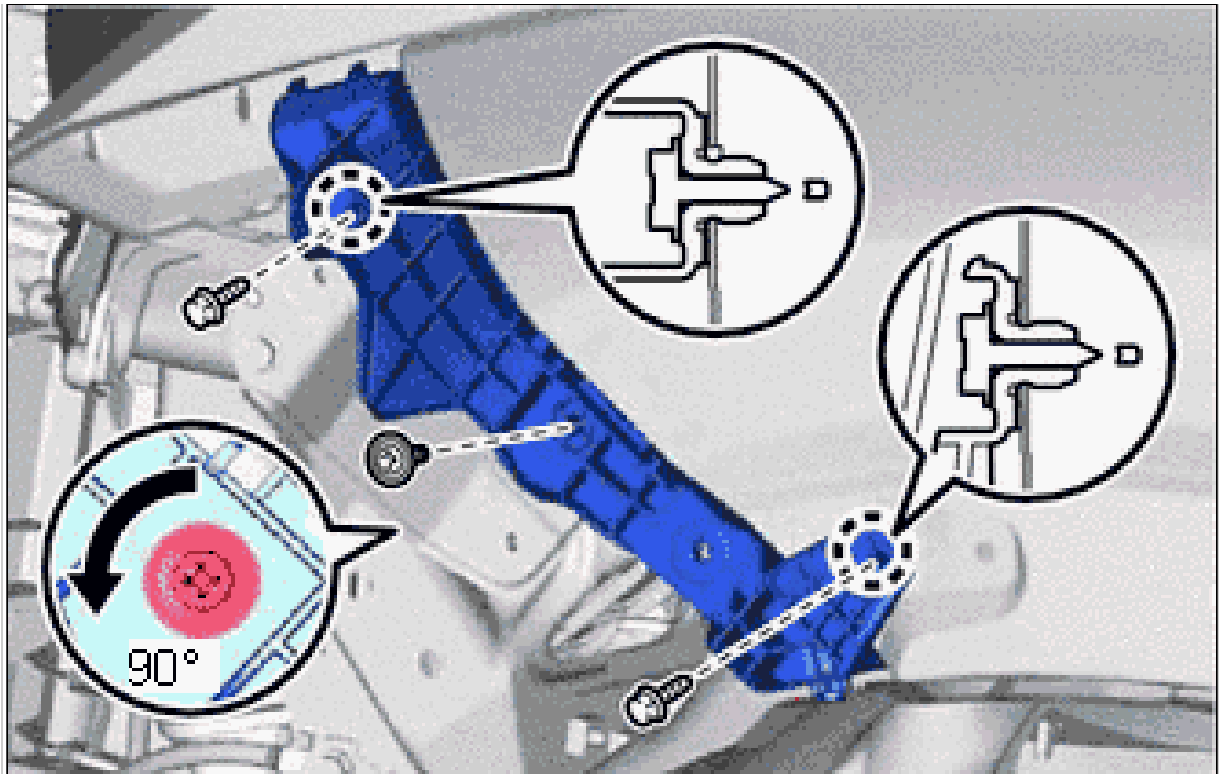

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

- b. Using a screwdriver, turn the pin hold clip 90° and remove the pin hold clip.
- c. Detach the 2 claws and remove the front bumper side retainer LH.

14. REMOVE FRONT BUMPER SIDE RETAINER RH

HINT:

Use the same procedure described for the LH side.