

## REMOVAL [10/2014 - ]

### CAUTION / NOTICE / HINT

#### HINT:

- Use the same procedure for the RH and LH sides.
- The procedure described below is for the LH side.

### PROCEDURE

#### 1. REMOVE FRONT BUMPER ASSEMBLY

except Sport Package:

Refer to REMOVAL [10/2014 - ]


for Sport Package:

Refer to REMOVAL [10/2014 - ]

#### 2. REMOVE CLEARANCE LIGHT ASSEMBLY LH

a. w/ Headlight Cleaner System:


a. Detach the claw and disconnect the headlight cleaner hose.

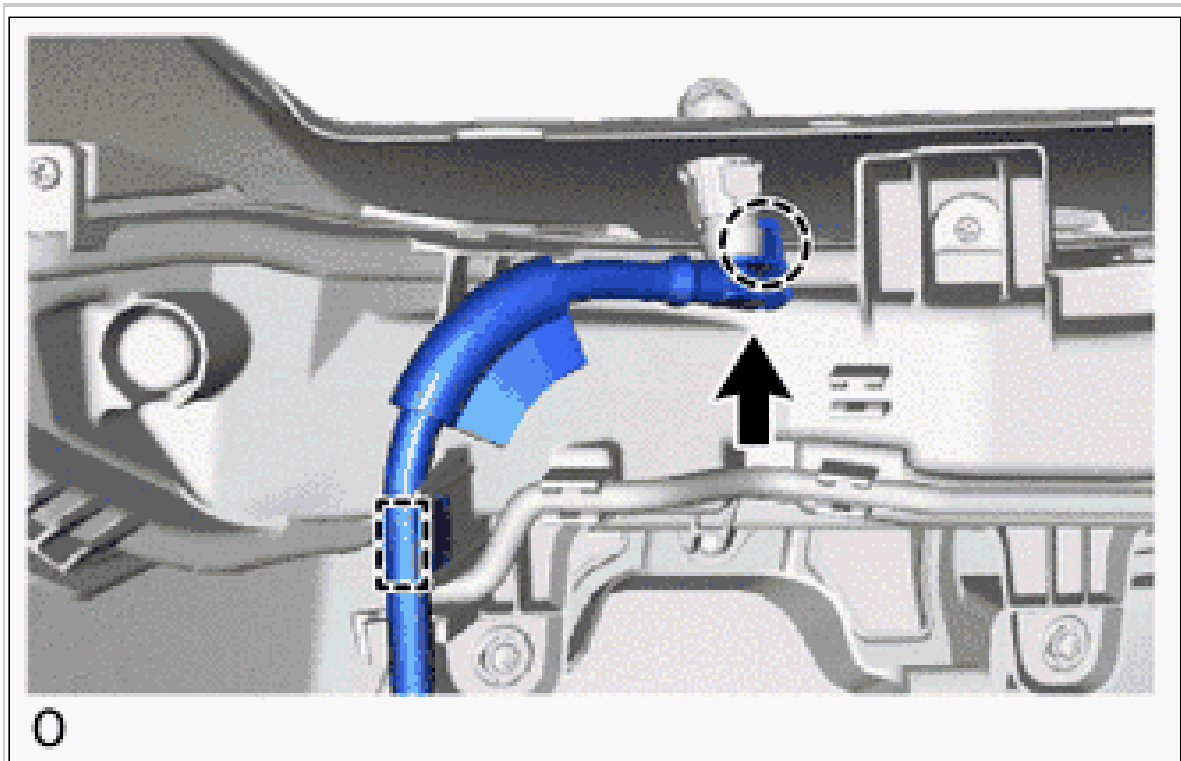

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002


b. Detach the hose clamp.

b. Detach the 2 wire harness clamps.

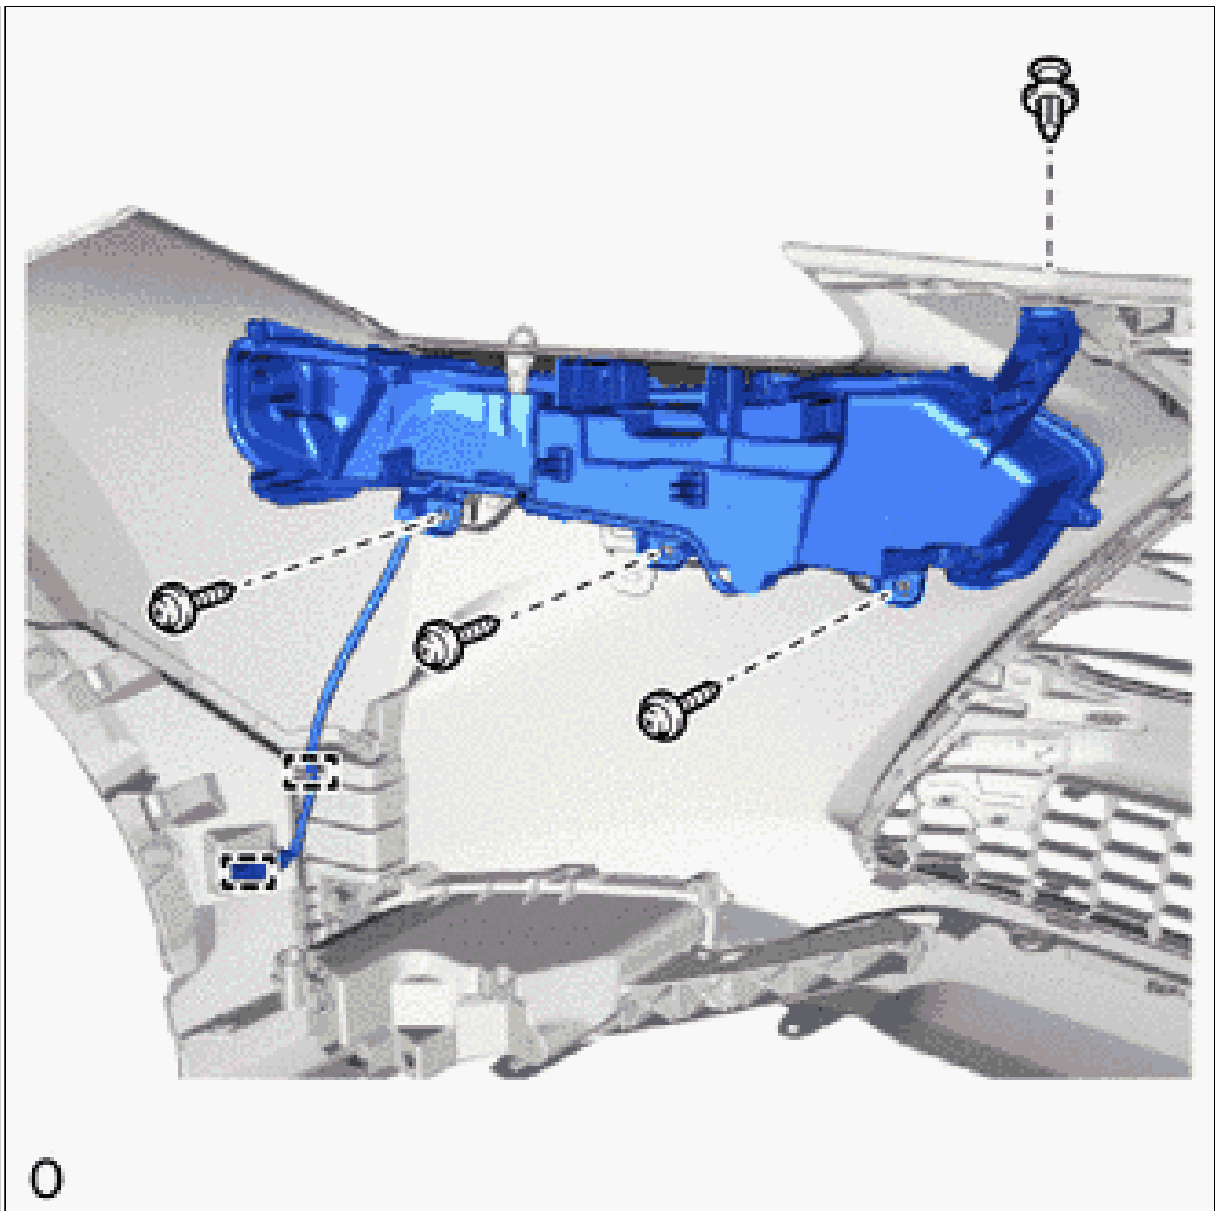

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

- c. Remove the clip and 3 screws.
- d. Detach the 2 claws and remove the clearance light assembly LH.

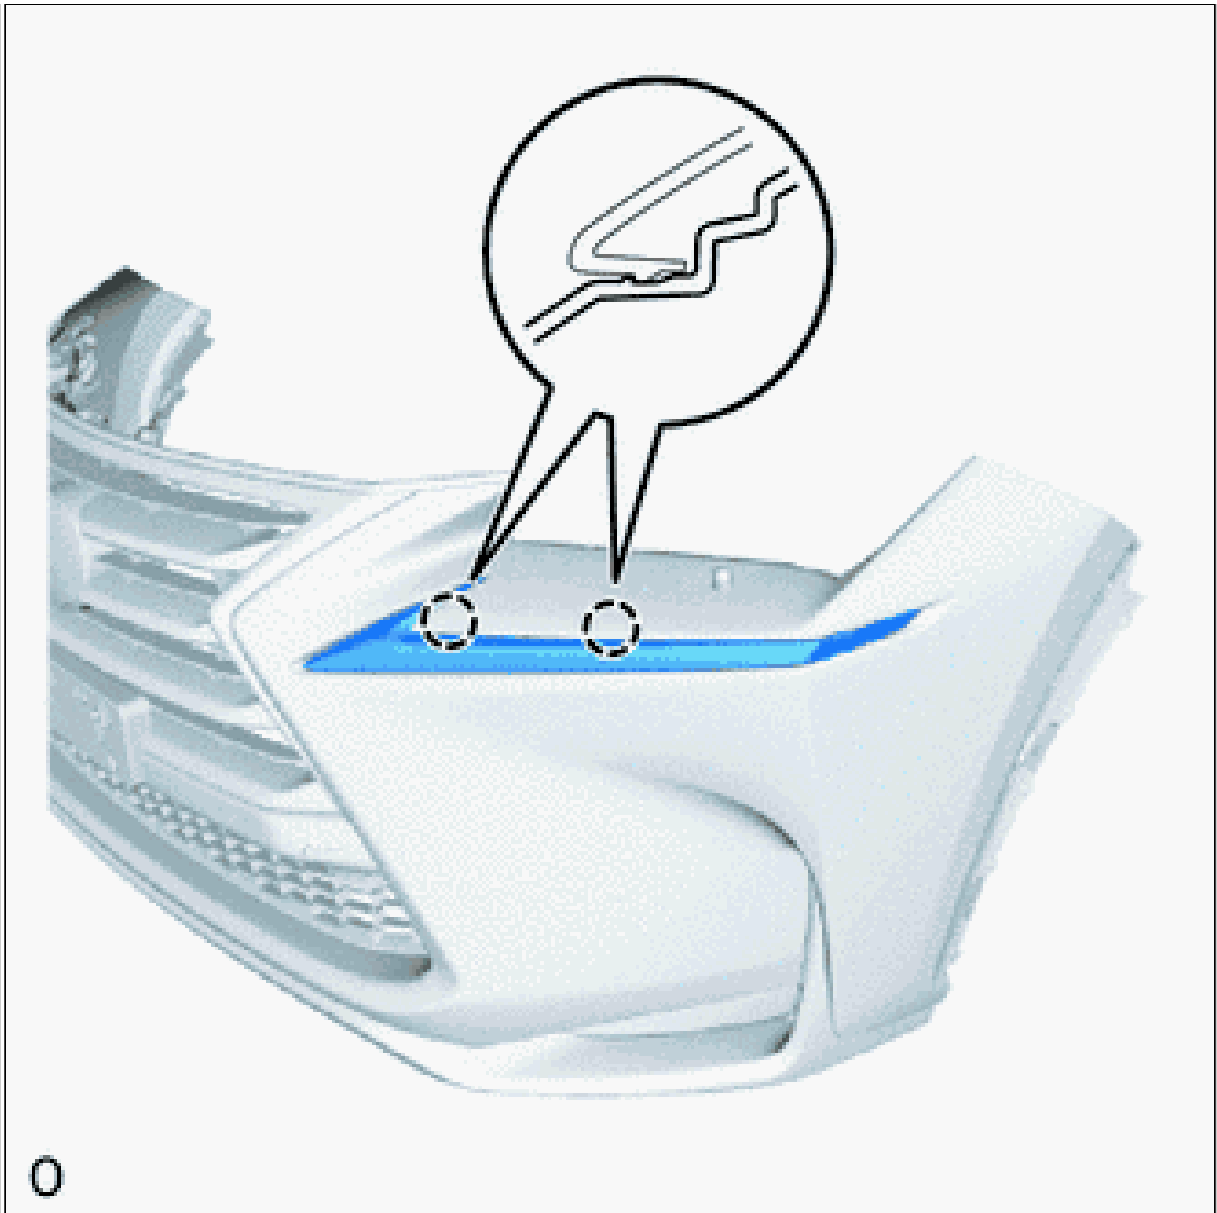

0

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

Reprinted Under License from Toyota Motor Sales, U.S.A., Inc., License Agreement TMS1002